# **About This Guide**

This chapter discusses the objectives, audience, organization and conventions of the *Cisco 1005 User Guide*.

Cisco documentation and additional literature are available on a CD called Cisco Connection Documentation, Enterprise Series. The CD is updated and shipped monthly, so it might be more current than printed documentation. To order the Cisco Connection Documentation, Enterprise Series CD, contact your local sales representative or call Customer Service. The CD is available both as a single CD and as an annual subscription. You can also access Cisco technical documentation on the World Wide Web URL http://www.cisco.com.

**Note** The Cisco Connection Documentation, Enterprise Series CD was previously called UniverCD.

## **Document Objectives**

This publication explains how to install, configure, and troubleshoot the Cisco 1005 router.

#### **Audience**

This publication is designed for the person installing the router, who should be familiar with this type of equipment.

For more advanced configuration applications, refer to Cisco Internetwork Operating System (Cisco IOS) configuration guides and command references.

## **Document Organization**

The major sections of this publication are as follows:

- Chapter 1, "Overview of the Cisco 1005," describes the features of the router and lists its physical specifications.
- Chapter 2, "Installing the Cisco 1005," includes safety recommendations and provides a list of tools and parts required, instructions for wall-mounting the router, connecting to a network and powering on the router, and checking your installation.
- Chapter 3, "Configuring the Cisco 1005," provides initial software configuration instructions. This chapter provides just enough configuration information to get the router up and running.
- Chapter 4, "Troubleshooting the Cisco 1005," explains how to read the LEDs to troubleshoot problems.
- Appendix A, "Cable Pinouts," provides port and cable pinouts.
- Appendix B, "Translated Safety Warnings," repeats in multiple languages the warnings in this publication.

### **Document Conventions**

This publication uses the following conventions to convey instructions and information:

Command descriptions use these conventions:

- Commands and keywords are in **boldface** font.
- Variables for which you supply values are in *italic* font.
- Elements in square brackets are optional.
- Alternative but required keywords are grouped in braces ({ }) and are separated by a vertical bar ( | ).

Examples use these conventions:

- Terminal sessions are in screen font.
- Information you enter is in boldface screen font.

- Nonprinting characters are shown in angle brackets (<>).
- Information the system displays is in screen font, with default responses in square brackets ([]).

**Note** Means *reader take note*. Notes contain helpful suggestions or references to materials not contained in this manual.



**Timesaver** Means *the described action saves time*. You can save time by performing the action described in the paragraph.



**Caution** Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.



**Warning** This warning symbol means *danger*. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and standard practices for preventing accidents. (To see translated versions of this warning, refer to the appendix "Translated Safety Warnings.")