

ClickStart for Configuring Cisco 1602 for a Leased Line Network

These pages describe how to use ClickStart to configure a Cisco 1602 router for a serial connection so you can connect a small office or home PC to the Internet or another network.

Configuring the Router

To configure a Cisco 1602 router for a serial connection, follow these links:

- Understand How ClickStart Works.
- Click on the platform you are using (Windows 3.11 PC, Windows 95 PC, UNIX workstation, or Macintosh).
- Set Up the Router.
- Configure the Router.
- Test Your Router's Configuration.

If you have comments, send e-mail to cs-html@cisco.com.

<HR>

Visit Cisco Connection Online (CCO).

