

ClickStart for Configuring Cisco 1601 Routers for Frame Relay

These pages describe how to use ClickStart to configure a Cisco 1601 router for Frame Relay so you can connect a small office or home PC to the Internet or another network.

Configuring the Router

To configure a Cisco 1601 router for Frame Relay, follow these links:

- [Understand How ClickStart Works.](#)
- [Order Frame Relay Service.](#)
- [Prepare to Configure a Cisco Router for Frame Relay.](#)
- [Click on the platform you are using \(Windows 3.11 PC, Windows 95 PC, UNIX workstation, or Macintosh\).](#)
- [Set Up the Router.](#)
- [Configure the Router.](#)
- [Test Your Router's Configuration.](#)

<HR>

If you have comments, send e-mail to cs-html@cisco.com.

<HR>

Visit [Cisco Connection Online \(CCO\)](#).
