

Prepare to Configure a Cisco Router for Frame Relay

Before you configure the Cisco router for Frame Relay, get the following information from your Internet service provider:

- IP address for your PC
- IP subnet mask for your PC
- IP address for your router's Ethernet interface
- IP address of your DNS server
- Administrative password that you or your Internet service provider will use to manage your router
- Authentication password that your router will use when connecting to the Internet service provider
- IP address and netmask for the router's Frame Relay interface
- Frame Relay data-link connection identifier (DCLI)

<HR>

Continue for a Windows 3.11 PC.

Continue for a Windows 95 PC.

Continue for a Macintosh.

Continue for a UNIX system.

[Return to ClickStart Home Page](#)

