

Order Asynchronous Serial Service

To configure a Cisco router for asynchronous serial connection, you must order service from your telephone company. To do this, order basic telephone service with the service and billing options you want. When your service has been installed, plug a modem into the phone jack and connect the modem to your computer.

<HR>

Continue with the next step in the process.

[Return to ClickStart Home Page](#)

