

# Preparing for Installation

---

This chapter describes the equipment and site requirements for router installation. It includes the power and cabling requirements that must be in place at the installation site, descriptions of additional equipment you will need to complete the installation, and the environmental conditions your site must meet to maintain normal operation.

This chapter includes the following preinstallation requirements:

- Safety recommendations to protect you and your equipment
  - Lifting the chassis
  - Safety with electricity
  - Preventing electrostatic discharge (ESD) damage
- General site requirements
  - AC and DC power requirements
  - Plant wiring (interference considerations, signaling and distance limitations)
  - Site environment
  - Equipment rack installation considerations
  - Preventive site configuration
- Network connections (optional and additional equipment such as connectors, cables, and media interface devices that you will need for connections to your ATM, Ethernet, Fast Ethernet, Token Ring, FDDI, serial, channel attachment, multichannel, or HSSI networks)
- Tools required for installation
- Initial configuration information that you will need
- Installation Checklist (a table that lists each installation step that you can check off when completed and then save the checklist as a permanent record in your site log)
- Unpacking Guidelines in addition to the complete unpacking descriptions that are posted on the outside of the router shipping container
- Site log instructions and sample format
- Chassis Components Checklist (an inventory list that you should also complete and put into the Site log for a permanent record of the system initial configuration)
- Port Configuration Worksheet (a place to record the type and port address of each interface)

## Safety Recommendations

The following guidelines will help to ensure your safety and protect the equipment. This list is not inclusive of all potentially hazardous situations, so *be alert*.

- Never attempt to lift an object that might be too heavy for you to lift by yourself.
- Always turn all power supplies off (O) and unplug all power cables before opening the chassis.
- Always unplug the power cable before installing or removing a chassis.
- Keep the chassis area clear and dust free during and after installation.
- Keep tools and chassis components away from walk areas.
- Do not wear loose clothing, jewelry (including rings and chains), or other items that could get caught in the chassis. Fasten your tie or scarf and sleeves.

**Warning** Metal objects heat up when connected to power and ground, and can cause serious burns.



### Lifting Safely

A fully configured Cisco 7513 weighs approximately 160 pounds. The chassis is not intended to be moved frequently. Before you install the router, ensure that your site is properly prepared, so you can avoid having to move the chassis later to accommodate power sources and network connections.

Whenever you lift the chassis or any heavy object, follow these guidelines:

- Do not attempt to lift the chassis by yourself; have someone assist you.
- Ensure that your footing is solid and balance the weight of the object between your feet.
- Lift the chassis slowly; never move suddenly or twist your body as you lift.
- Keep your back straight and lift with your legs, not your back. If you must bend down to lift the chassis, bend at the knees, not at the waist, to reduce the strain on your lower back muscles.
- Lift the chassis from the bottom; grasp the underside of the chassis exterior with both hands.
- Do *not* lift the chassis using the underside of the card cage for leverage or as a lifting point.
- Always disconnect all external cables before lifting or moving the chassis.
- Use two hands when handling a power supply, which weighs approximately 25 pounds.

**Warning** Never attempt to lift or tilt the chassis with the handles on the interface processor carriers, power supplies, or the blower module handle. These handles are not designed to support the weight of the chassis.



### Safety with Electricity

The network interface processors are designed to be removed and replaced while the system is operating without presenting an electrical hazard or damage to the system. However, you must shut down the system before removing or replacing the RSP2.

Follow these basic guidelines when working with any electrical equipment:

- Before beginning any procedures requiring access to the chassis interior, locate the emergency power-off switch for the room in which you are working.

- Disconnect all power and external cables before installing or removing a chassis.
- Do not work alone when potentially hazardous conditions exist.
- Never assume that power has been disconnected from a circuit; always check.
- Do not perform any action that creates a potential hazard to people or makes the equipment unsafe.
- Never install equipment that appears damaged.
- Carefully examine your work area for possible hazards such as moist floors, ungrounded power extension cables, and missing safety grounds.

In addition, use the guidelines that follow when working with any equipment that is disconnected from a power source, but still connected to telephone wiring or other network cabling.

- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

## Preventing Electrostatic Discharge Damage

Electrostatic discharge (ESD) damage, which occurs when electronic cards or components are improperly handled, can result in complete or intermittent failures. Each processor module comprises a printed circuit board that is fixed in a metal carrier. Electromagnetic interference (EMI) shielding, connectors, and a handle are integral components of the carrier. Although the carrier helps to protect the module, use an antistatic strap whenever handling processor modules. Handle the carriers by the handles and the carrier edges only; never touch the boards or connector pins.



**Caution** Always tighten the captive installation screws on the processor modules. (See Figure 1-21.) These screws prevent accidental removal, provide proper grounding for the system, and help to ensure that the bus connectors are properly seated in the backplane.

Following are guidelines for preventing ESD damage:

- Always use an ESD wrist strap or ankle strap and ensure that it makes good skin contact.
- When removing processor modules, connect the equipment end of the strap to an unfinished chassis surface or to one of the captive installation screws on an installed interface processor. Connect the strap to an unpainted inner surface of the chassis.
- When installing processor modules, use the ejector levers to properly seat the bus connectors in the backplane, then tighten both captive installation screws. These screws prevent accidental removal, provide proper grounding for the system, and help to ensure that the bus connectors are seated in the backplane.
- When removing an RSP2 or interface processor, use the ejector levers to release the bus connectors from the backplane. Grasp the handle and pull the carrier out slowly, using your hand along the bottom of the carrier to guide it straight out of the slot.
- Handle processor modules by the handles and carrier edges only; avoid touching the board or any connector pins.

- Handle bare circuit boards by the edges only.
- When removing a processor module, place it component side up on an antistatic surface or in a static shielding bag. If the interface processor will be returned to the factory, immediately place it in a static shielding bag.
- Avoid contact between the board or interface processor and clothing. The wrist strap only protects the card from ESD voltages on the body; ESD voltages on clothing can still cause damage.



**Caution** For safety, periodically check the resistance value of the antistatic strap. The measurement should be between 1 and 10 megohms.

## Site Requirements

The environmental monitoring functionality in the router protects the system and components from potential damage from overvoltage and overtemperature conditions. To assure normal operation and avoid unnecessary maintenance, plan your site configuration and prepare your site *before* installation. After installation, make sure the site maintains an ambient temperature of 32 F through 104 F (0 C through 40 C), and keep the area around the chassis as free from dust as is practical.

The following sections address the site environment requirements for the router.

### AC and DC Power

The 1200W, AC-input power supply uses a power factor corrector (PFC) that allows the Cisco 7513 to operate on input voltage and current within the ranges of 100 to 240 VAC and 50 to 60 Hz. Table 1-1 lists system power specifications, including input voltage and operating frequency ranges.

---

**Note** We recommend attaching dual power supplies to independent power sources for full redundancy. We also recommend an uninterruptable power source (UPS) to protect against power failures at your site. Each AC-input power supply operating at 120VAC requires a dedicated 20A service, and 20A plug and receptacle.

---

The 1200W, DC-input power supply allows the Cisco 7513 to operate between -40 and -72 VDC (-48 VDC nominal in North America and -60 VDC in Europe).

## Plant Wiring

Following are guidelines for setting up the plant wiring and cabling at your site. When planning the location of the new system, consider the distance limitations for signaling, electromagnetic interference, and connector compatibility, as described in the following sections.

---

**Note** The installation must comply with all applicable codes. Installation is approved for use with copper conductors only. Attachment of the chassis ground receptacles to the central office or other interior ground system should be made with a Number 6 AWG copper ground conductor as a minimum. The Cisco 7513 chassis employs two threaded, M4 x .7 chassis ground receptacles. These receptacles are intended to be bonded directly to the central office or other interior ground system, and are located on each side of the rear of the chassis, as shown in Figure 1-1. The chassis ground receptacles require M4 bolts and locking hardware, which are not included.

---

### Interference Considerations

When wires are run for any significant distance in an electromagnetic field, interference can occur between the field and the signals on the wires. This fact has two implications for the construction of plant wiring:

- Bad wiring practice can result in radio interference emanating from the plant wiring.
- Strong electromagnetic interference, especially as caused by lightning or radio transmitters, can destroy the signal drivers and receivers in the router, and can even create an electrical hazard by conducting power surges through lines and into equipment. (Review the safety warnings in the section “Safety with Electricity” in this chapter.)

---

**Note** To predict and remedy strong electromagnetic interference (EMI), you may also need to consult experts in radio frequency interference (RFI).

---

If you use twisted-pair cable in your plant wiring with a good distribution of grounding conductors, the plant wiring is unlikely to emit radio interference. When exceeding the recommended distances, use a high-quality twisted-pair cable with one ground conductor for each data signal when applicable.

If wires exceed recommended distances, or if wires pass between buildings, give special consideration to the effect of a lightning strike in your vicinity. The electromagnetic pulse (EMP) caused by lightning or other high-energy phenomena can easily couple enough energy into unshielded conductors to destroy electronic devices. If you have had problems of this sort in the past, you may want to consult experts in electrical surge suppression and shielding.

Most data centers cannot resolve the infrequent but potentially catastrophic problems just described without pulse meters and other special equipment. These problems can cost a great deal of time to identify and resolve, so take precautions by providing a properly grounded and shielded environment, with special attention to issues of electrical surge suppression. The ground screw on the left side of the interface processor end of the chassis provides a connection point for connecting a ground wire or antistatic device to chassis ground. (See Figure 1-3.)

### Distance Limitations and Interface Specifications

The length of your networks and the distances between connections depend on the type of signal, the signal speed, and the transmission media (the type of cabling used to transmit the signals). For example, standard coaxial cable has a greater channel capacity than twisted-pair cabling. The distance and rate limits in these descriptions are the IEEE recommended maximum speeds and distances for signaling; however, you can usually get good results at speeds and distances far greater than these. For example, the recommended maximum rate for V.35 is 2 Mbps, but it is commonly used at 4 Mbps without any problems. If you understand the electrical problems that might arise and can compensate for them, you should get good results with rates and distances greater than those shown here; however, do so at your own risk.

---

**Note** We recommend that you do not exceed specified transmission rate and distance limits.

---

The following distance limits are provided as guidelines for planning your network connections before installation.

#### Ethernet Connections

The maximum distances for Ethernet network segments and connections depend on the type of transmission cable used: 0.4-inch diameter coaxial (10BASE-5), 0.25-inch diameter coaxial (10BASE-2), or unshielded twisted-pair (10BASE-T). The term *10BASEx* is an abbreviation for 10 Mbps transmission, *BASEband* medium, and *N* is the maximum cable length in hundreds of meters.

Network connections to the coaxial cables are tapped into a network segment and must be spaced at specific intervals. Table 2-1 lists the maximum number of connections (taps) per segment and the intervals at which they must be placed. A maximum of four repeaters can be used to link segments in a single network.

**Table 2-1      Ethernet Coaxial Connection Limits for 10-Mbps Transmission**

Parameter	10BASE-5	10BASE-2
Cable diameter	0.4 in. (1 cm)	0.25 in. (0.6 cm)
Max. segment length	1640 ft. (500 m)	656 ft. (200 m)
Max. connections (taps) per segment	100	30
Min. connection (tap) spacing	8.2 ft. (2.5 m)	1.64 ft. (0.5 m)

The unshielded twisted-pair (UTP) cabling used with 10BASE-T is suitable for voice transmission, but may incur problems at 10-Mbps transmission rates. UTP wiring does not require the fixed spacing between connections that is necessary with the coaxial-type connections. IEEE recommends a maximum distance of 328 feet (100 meters) between station (connection) and hub for 10BASE-T connections.

## Fast Ethernet Connections

IEEE 802.3u specifies several different physical layers for 100BASE-T: among them are 100BASE-TX, which is 100BASE-T, half duplex, over Category 5, unshielded twisted-pair (UTP), Electronics Industry Association/Telecommunications Industry Association (EIA/TIA)-568-compliant cable; 100BASE-FX, which is 100BASE-T, full duplex or half duplex over optical fiber; and 100BASE-T4, which is 100BASE-T using Category 3, 4, or 5 UTP or shielded twisted pair (STP) cabling with four pairs. 100BASE-T4 is also called *4T+* or *T2*, which is 2-pair UTP over Category 3 cable.

Table 2-2 lists the cabling specifications for 100-Mbps transmission over 100BASE-T, Category 5 UTP and MII connections.

**Table 2-2 Connection Limits for 100-Mbps Transmission**

Parameter	RJ-45	MII
Cable specification	Category 5 <sup>1</sup> UTP <sup>2</sup> , 22 to 24 AWG <sup>3</sup>	Category 3, 4 or 5, 150-ohm UTP or STP or multimode optical fiber
Maximum cable length	–	0.5 m (1.64 ft.) (MII-to-MII cable <sup>4</sup> )
Maximum segment length	100 m (328 ft.) for 100BASE-TX	1 m (3.28 ft.) <sup>5</sup> or 400 m (1,312 ft.) for 100BASE-FX
Maximum network length	200 m (656 ft.) <sup>5</sup> (with 1 repeater)	–

1. EIA/TIA-568 or EIA/TIA-568 TSB-36 compliant.

2. Cisco Systems does not supply Category 5 UTP RJ-45 or 150-ohm STP MII cables. Both are commercially available.

3. AWG = American Wire Gauge. This gauge is specified by the EIA/TIA-568 standard.

4. This is the cable between the MII port on the FEIP port adapter and the appropriate transceiver.

5. This refers specifically to any two stations on a repeated segment.

Table 2-3 summarizes the characteristics of 100BASE-T with respect to IEEE 802.3u physical characteristics.

**Table 2-3 IEEE 802.3u Physical Characteristics**

100BASE-T	
Data rate (Mbps)	100
Signaling method	Baseband
Maximum segment length (meters)	100
Media	UTP <sup>1</sup>
Topology	Star

1. UTP = unshielded twisted pair.

## Channel Interface Connections

The maximum transmission distance for ESCON (with LED) is 1.9 miles (3.1 km) point-to-point or 5.7 miles (9.2 km) with two ESCON Directors. The maximum transmission distance for bus and tag is 400 feet (122 m). The IBM 3044 C/D (host side/remote side) copper-to-fiber repeater can be used to extend the bus and tag distance up to 1.2 miles (2 km).

### E1-G.703/G.704 Connections

Unbalanced G.703 interfaces allow for a longer maximum cable length than those specified for balanced circuits. Table 2-4 lists the maximum cable lengths for each FSIP E1-G.703/G.704 cable type by the connector used at the network (non-FSIP) end.

**Table 2-4 E1-G.703/G.704 Maximum Cable Lengths**

Connection Type	BNC	Twinax
Balanced	—	300 meters (m)
Unbalanced	600m	—

### Fiber (FDDI) Connections

The FDDI standard sets the maximum distances between stations to the fiber lengths shown in Table 2-5. The maximum circumference of the FDDI network is only half the specified distance because of signal wrapping or loopback during fault correction. The standard allows a maximum of 500 stations. Both single-mode and multimode transceiver types provide 11 dB of optical power.

**Table 2-5 FDDI Maximum Transmission Distances**

Transceiver Type	Max. Distance Between Stations
Single-mode	6.2 miles (up to 10 km)
Multimode	1.2 miles (up to 2 km)

### MultiChannel E1 and T1 Connections

Following are the MIP E1 specifications:

- Transmission bit rate: 2.048 kbps 50 ppm
- Output port specifications: see G.703/Section 6.2 (ITU-T specification)
- Input port specifications: see G.703/Section 6.3 (ITU-T specification)
- Jitter attenuation starting at 6 hertz (Hz), which meets or exceeds G.823 for E1

Following are the MIP T1 specifications:

- Transmission bit rate: 1.544 kilobits per second (kbps) 50 parts per million (ppm)
- Output pulse amplitude: 3.0 volts (V) 0.6V measured at DSX
- Output pulse width: 324 nanoseconds (ns) 54 ns
- Complies with all AT&T Accunet TR 62411 specifications.

## Serial Connections

As with all signaling systems, serial signals can travel a limited distance at any given bit rate; generally, the slower the baud rate, the greater the distance. Table 2-6 shows the standard relationship between baud rate and distance for EIA/TIA-232 signals.

**Table 2-6 IEEE Standard EIA/TIA-232C Transmission Speed versus Distance**

Rate (bps)	Distance (Feet)	Distance (Meters)
2400	200	60
4800	100	30
9600	50	15
19200	25	7.6
38400	12	3.7
56000	8.6	2.6

Balanced drivers allow EIA/TIA-449 signals to travel greater distances than EIA/TIA-232. Table 2-7 shows the standard relationship between bit rate and distance for EIA/TIA-449 signals.

**Table 2-7 IEEE Standard EIA/TIA-449 Transmission Speed versus Distance**

Rate (bps)	Distance (Feet)	Distance (Meters)
2400	4100	1250
4800	2050	625
9600	1025	312
19200	513	156
38400	256	78
56000	102	31
128000	76	23
256000	50	15
1544000 (T1)	50	15
2000000	40	12
4000000	25	8

The recommended distance limits for EIA/TIA-449 shown in Table 2-7 are also valid for V.35, X.21, and EIA-530. However, you can get good results at distances and rates far greater than these. In common practice, EIA/TIA-449 and EIA-530 support 2-Mbps rates, and V.35 supports 4-Mbps rates without any problems; however, do so at your own risk.

---

**Note** We do not recommend that you exceed specified transmission rate and distance limits.

---

### SONET Connections

The SONET specification for fiber-optic transmission defines two types of fiber: single mode and multimode. Modes can be thought of as bundles of light rays entering the fiber at a particular angle. Single-mode fiber allows only one mode of light to propagate through the fiber, while multimode fiber allows multiple modes of light to propagate through the fiber. Because multiple modes of light propagating through the fiber travel different distances depending on the entry angles, causing them to arrive at the destination at different times (a phenomenon called modal dispersion), single-mode fiber is capable of higher bandwidth and greater cable run distances than multimode fiber. The maximum distances for single-mode and multimode transmissions, as defined by SONET, are in Table 2-8. If the distance between two connected stations is greater than these maximum distances, significant signal loss can result, making transmission unreliable.

**Table 2-8 SONET Maximum Fiber-Optic Transmission Distances**

Transceiver Type	Maximum Distance between Stations <sup>1</sup>
Single-mode	Up to 9 miles (14.8 kilometers)
Multimode	Up to 1.5 miles (2.4 kilometers)

1. Table 2-8 gives typical results. You should use the power budget calculations to determine the actual distances.

### Power Budget

To design an efficient optical data link, evaluate the power budget. The power budget is the amount of light available to overcome attenuation in the optical link and to exceed the minimum power that the receiver requires to operate within its specifications. Proper operation of an optical data link depends on modulated light reaching the receiver with enough power to be correctly demodulated.

Attenuation, caused by the passive media components (cables, cable splices, and connectors), is common to both multimode and single-mode transmission.

The following variables reduce the power of the signal (light) transmitted to the receiver in multimode transmission:

- Chromatic dispersion (spreading of the signal in time because of the different speeds of light wavelengths)
- Modal dispersion (spreading of the signal in time because of the different propagation modes in the fiber)

Attenuation is significantly lower for optical fiber than for other media. For multimode transmission, chromatic and modal dispersion reduce the available power of the system by the combined dispersion penalty (in decibels [dB]). The power lost over the data link is the sum of the component, dispersion, and modal losses. Table 2-9 lists the factors of attenuation and dispersion limit for typical fiber-optic cable.

**Table 2-9 Typical Fiber-Optic Link Attenuation and Dispersion Limits**

	Single-Mode	Multimode
Attenuation	0.5 dB	1.0 dB/km
Dispersion Limit	No limit	500 MHz/km <sup>1</sup>

1. The product of bandwidth and distance must be less than 500 MHzkm.

### Approximating the AIP Power Margin

The LED used for a multimode transmission light source creates multiple propagation paths of light, each with a different path length and time requirement to cross the optical fiber, causing signal dispersion (smear). Higher order mode loss (HOL) results from light from the LED entering the fiber and being radiated into the fiber cladding. A worst-case estimate of power margin (PM) for multimode transmissions assumes minimum transmitter power (PT), maximum link loss (LL), and minimum receiver sensitivity (PR). The worst-case analysis provides a margin of error, although not all of the parts of an actual system will operate at the worst-case levels.

The power budget (PB) is the maximum possible amount of power transmitted. The following equation lists the calculation of the power budget:

$$PB = PT - PR$$

$$PB = -18.5 \text{ dBm} - (-30 \text{ dBm})$$

$$PB = 11.5 \text{ dB}$$

The power margin calculation is derived from the power budget and subtracts the link loss, as follows:

$$PM = PB - LL$$

If the power margin is positive, as a rule, the link will work.

Table 2-10 lists the factors that contribute to link loss and the estimate of the link loss value attributable to those factors.

**Table 2-10      Estimating Link Loss**

Link Loss Factor	Estimate of Link Loss Value
Higher order mode losses	0.5 dB
Clock recovery module	1 dB
Modal and chromatic dispersion	Dependent on fiber and wavelength used
Connector	0.5 dB
Splice	0.5 dB
Fiber attenuation	1 dB/km

After calculating the power budget minus the data link loss, the result should be greater than zero. Results less than zero may have insufficient power to operate the receiver.

For SONET versions of the AIP module, the signal must meet the worst case parameters listed in Table 2-11.

**Table 2-11      AIP SONET Signal Requirements**

	Single-Mode	Multimode
PT	-18.5	-15
PR	-30	-28
PB	-11.5	-13

### Multimode Power Budget Example with Sufficient Power for Transmission

The following is an example calculation for a multimode power budget based on the following variables:

Length of multimode link = 3 kilometers (km)

4 connectors

3 splices

Higher order loss (HOL)

Clock recovery module (CRM)

Estimate the power budget as follows:

$$PB = 11.5 \text{ dB} - 3 \text{ km (1.0 dB/km)} - 4 (0.5 \text{ dB}) - 3 (0.5 \text{ dB}) - 0.5 \text{ dB (HOL)} - 1 \text{ dB (CRM)}$$

$$PB = 11.5 \text{ dB} - 3 \text{ dB} - 2 \text{ dB} - 1.5 \text{ dB} - 0.5 \text{ dB} - 1 \text{ dB}$$

$$PB = 2.5 \text{ dB}$$

The value of 2.5 dB indicates that this link would have sufficient power for transmission.

### Multimode Power Budget Example of Dispersion Limit

Following is an example with the same parameters as the previous example, but with a multimode link distance of 4 km:

$$PB = 11.5 \text{ dB} - 4 \text{ km (1.0 dB/km)} - 4 (0.5 \text{ dB}) - 3 (0.5 \text{ dB}) - 0.5 \text{ dB (HOL)} - 1 \text{ dB (CRM)}$$

$$PB = 11.5 \text{ dB} - 4 \text{ dB} - 2 \text{ dB} - 1.5 \text{ dB} - 0.5 \text{ dB} - 1 \text{ dB}$$

$$PB = 1.5 \text{ dB}$$

The value of 1.5 dB indicates that this link would have sufficient power for transmission; however, due to the dispersion limit on the link ( $4 \text{ km} \times 155.52 \text{ MHz} > 500 \text{ MHzkm}$ ), this link would not work with multimode fiber. In this case, single-mode fiber would be the better choice.

### Single-Mode Transmission

The single-mode signal source is an injection laser diode. Single-mode transmission is useful for longer distances because there is a single transmission path within the fiber and smear does not occur. In addition, chromatic dispersion is also reduced because laser light is essentially monochromatic.

The maximum overload specification on the single-mode receiver is  $-14 \text{ dBm}$ . The single-mode receiver can be overloaded when using short lengths of fiber because the transmitter can transmit up to  $-8 \text{ dB}$ . The receiver could be overloaded at  $-14 \text{ dB}$ , but no damage will result. To prevent overloading the receiver connecting short fiber links, insert a 5 to 10 dB attenuator on the link between any single-mode SONET transmitter and the receiver.

### SONET Single-Mode Power Budget Example

The following example of a single-mode power budget is of a two buildings, 11 kilometers apart, connected through a patch panel in an intervening building with a total of 12 connectors.

Length of single-mode link = 11 km

12 connectors

Estimate the power budget as follows:

$$PB = 11.5 \text{ dB} - 11 \text{ km} (0.5 \text{ dB/km}) - 12 (0.5 \text{ dB})$$

$$PB = 11.5 \text{ dB} - 5.5 \text{ dB} - 6 \text{ dB}$$

$$PB = 2.5 \text{ dB}$$

The value of 2.5 dB indicates that this link would have sufficient power for transmission and is not in excess of the maximum receiver input power.

### Using Statistics to Estimate the Power Budget

Statistical models more accurately determine the power budget than the worst-case method. Determining the link loss with statistical methods requires accurate knowledge of variations in the data link components. Statistical power budget analysis is beyond the scope of this document. For further information, refer to UNI Forum specifications, ITU-T standards, and your equipment specifications.

### For Further Reference

The following publications contain information on determining attenuation and power budget:

- T1E1.2/92-020R2 ANSI, the Draft American National Standard for Telecommunications entitled “Broadband ISDN Customer Installation Interfaces: Physical Layer Specification.”
- *Power Margin Analysis, AT&T Technical Note, TN89-004LWP, May 1989.*

### HSSI Connections

The HSSI standard (EIA/TIA-612/613) specifies a maximum cable length of 50 feet (15 meters) for 52 Mbps HSSI connections. The typical (nominal) cable length between the HIP and the DSU is 6 feet (2 meters). The HSSI interface cable comprises 25 twisted pairs and a 50-pin plug at each end. Both DTE and DCE ports on the HIP and the DSU are 50-pin receptacles. The HSSI interface cable is similar to a SCSI-II-type (small computer systems interface) cable; however, the HSSI cable specification is more stringent than that for a SCSI-II.

---

**Note** Substituting a SCSI-type cable to connect the HSSI interface may prevent proper operation of the interface.

---

### Token Ring Connections

Currently there is no maximum transmission distance defined for IEEE 802.5 (Token Ring) networks. Shielded twisted-pair cabling is most commonly used for rates of 16 Mbps, and either shielded or unshielded twisted-pair cabling is used for rates of 1 and 4 Mbps. When planning your connections, remember that twisted-pair cabling is more susceptible to interference than other types of cabling, so plan the total network length and repeater spacing accordingly.

## Equipment Racks


The rack-mounting hardware included with the router is suitable for most 19-inch equipment racks and Telco-type racks. Ideally, you should be able to access both the interface processor and non-interface processor ends of the router without having to remove it from the rack.

The router can be mounted in the rear of a rack. Before using a particular rack, check for obstructions (such as a power strip) that could impair rack-mount installation. If a power strip does impair a rear rack-mount installation, remove the power strip before installing the router in the rack, then replace it after the chassis is installed. As an alternative, the router can be mounted on an equipment shelf provided that the rack dimensions allow the router to be secured to the shelf and the overall configuration permits safe installation and access; however, we recommend rack-mount installation for the Cisco 7513. Figure 2-1 shows the chassis footprint and outer dimensions.

To use the rack-mounting hardware provided with the router, consider the following guidelines:

- To mount the router between two posts or rails using the mounting ears, the inner clearance (the width between the *inner* sides of the two posts or rails) must be at least 17.72 inches (45 cm).
- The height of the chassis is 33.75 inches (85.725 cm).
- When mounting the router in four-post or Telco-type racks, be sure to use all of the screws provided to secure the chassis to the rack posts. Anything less than all the screws provided in the rack-mount kit might not be sufficient to support the weight of the chassis.
- If the rack has a vertical power strip or other obstacle, ensure that there is sufficient clearance to install and remove processor modules, which must be pulled straight out of their slots. (See Figure 2-1.)

**Figure 2-1**      **Chassis Footprint and Outer Dimensions**

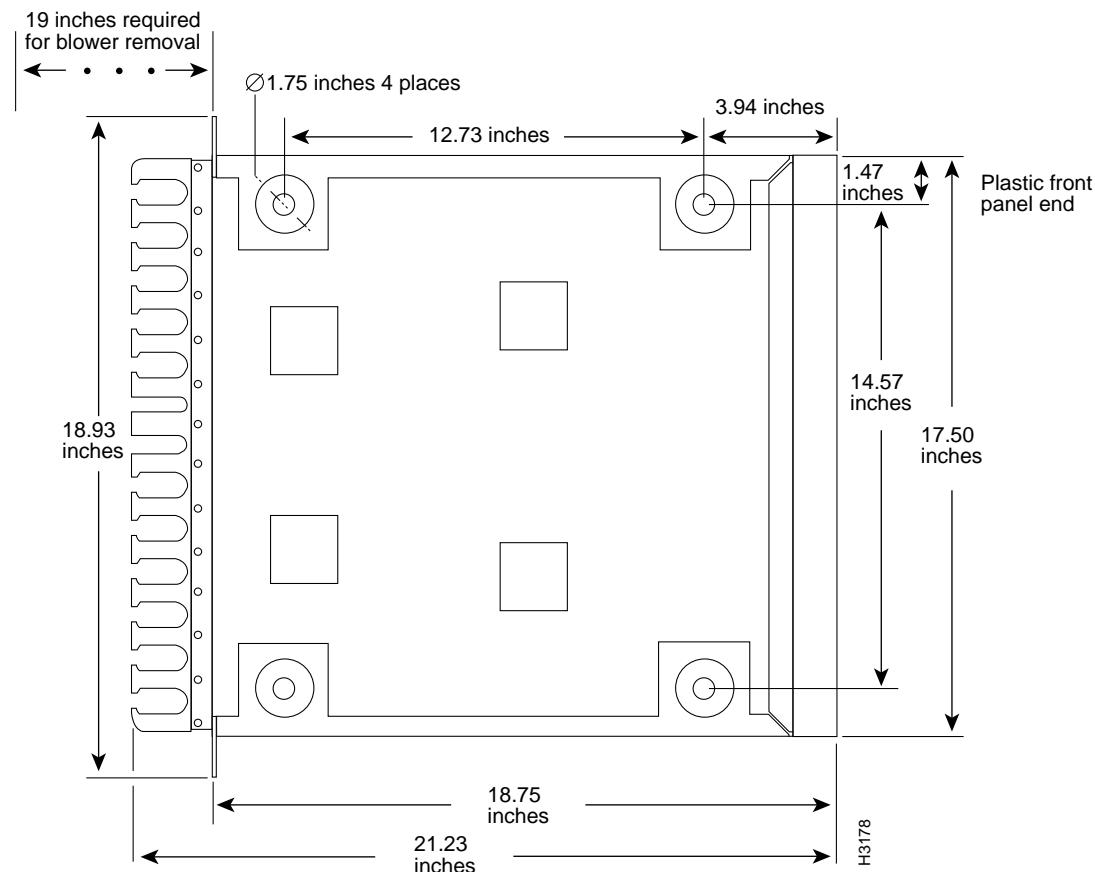

When planning your rack installation, consider the following guidelines:

- Install the router in an open rack whenever possible. If installation in an enclosed rack is unavoidable, ensure that the rack has adequate ventilation.

If you plan to use an equipment shelf, ensure that the shelf is constructed to support the weight and dimensions of the chassis. Figure 2-1 shows the chassis footprint, which you will need if you are designing a customized shelf. We recommend that you use the rack-mount kit designed for the Cisco 7513.

- Allow sufficient clearance around the rack for maintenance. If the rack is mobile, you can push it back near a wall or cabinet for normal operation and pull it out when necessary for maintenance (installing or moving interface processors, connecting cables, or replacing or upgrading components). Otherwise, allow 19 inches (48.3 cm) of clearance to remove the blower module, power supplies, and processor modules.
- Maintain a minimum clearance of six inches on the rear and front of the chassis for the cooling air inlet and exhaust ports, respectively. Avoid placing the router in an overly congested rack or directly next to another equipment rack. Otherwise, the heated exhaust air from other equipment can enter the inlet air vents and cause an overtemperature condition inside the router.
- Install and use the cable management bracket included with the router to keep cables organized and out of the way of processor modules, power supplies, and the blower module. Consider the equipment and cabling that is already installed in the rack. Ensure that cables from other equipment will not impair access to the interface processors, or require you to disconnect cables unnecessarily to perform equipment maintenance or upgrades.
- Always install heavier equipment in the lower half of a rack to maintain a low center of gravity and prevent the rack from falling over. If you install one Cisco 7513 in a rack, the chassis bottom should not be higher than 20 inches from the floor.
- If you use Telco-type racks, be sure that the rack is bolted to the floor and secured. One end of the chassis mounts to the two rack posts with the chassis ears, and the rest of the chassis is cantilevered off of the posts. Ensure that the weight of the chassis does not make the rack unstable. Some Telco-type racks are also secured to ceiling brackets, if warranted, by the weight of the equipment in the rack.
- To properly install the chassis in a rack, use the instructions in the configuration note *Cisco 7513 Rack-Mount Kit Installation Instructions* (Document Number 78-2023-xx, where xx indicates the latest document version), which accompanies the rack-mount kit.

In addition to the preceding guidelines, review the precautions for avoiding overtemperature conditions in the section “Equipment-Rack Ventilation” in this chapter.



**Caution** To prevent chassis overheating, never install the router in an enclosed rack or room that is not properly ventilated or air conditioned.

## Site Environment

The router can operate as a standalone system placed on a table or as a rack-mounted system in a data processing or lab environment. The blower operates at 55 percent of capacity when it is possible to do so and maintain an acceptable operating temperature inside the chassis. If the temperature exceeds 23 C, the blower speed increases linearly until it reaches 100 percent. Although the blower supports quieter operation under normal conditions (approximately 62 dBA), the noise level when the blower is operating at 100-percent capacity is approximately 70 dBA. Therefore, the router is best suited for unattended or computer room use.

The router requires a dry, clean, well-ventilated, and air-conditioned environment. The internal blower pulls ambient air through the chassis to cool the internal components. To allow sufficient airflow, maintain a minimum of two inches of clearance at both the inlet and exhaust openings on the chassis. If the airflow is blocked or restricted, or if the inlet air is too warm, an overtemperature condition can occur. Under extreme conditions, the environmental monitor will shut down the power to protect the system components.

To help maintain normal operation and avoid unnecessary maintenance, plan your site configuration and prepare your site *before* installation. After installation, make sure that the site maintains an ambient temperature of 32 through 104 F (0 through 40 C), and keep the area around the chassis as free from dust as is practical. For a description of the environmental monitor and status levels, refer to “Environmental Monitoring and Reporting Functions” in the chapter “Product Overview.”

If the temperature of the room air drawn into the chassis is higher than desirable, the air temperature inside the chassis may also be too high. This condition can occur when the wiring closet or rack in which the chassis is mounted is not ventilated properly, when the exhaust of one device is placed so it enters the air inlet vent of the chassis, or when the chassis is the top unit in an unventilated rack. Any of these conditions can inhibit air flow and create an overtemperature condition.

Because the inlet air flows into one part of the chassis and out another, other devices can be rack-mounted with as little as one inch of clearance above and below the chassis. However, when mounting a router in a rack with other equipment, or when placing it on a table with other equipment located close by, ensure that the exhaust from other equipment does not blow into the inlet of the chassis. The inlet air is drawn in and exhausted as shown in Figure 1-5.

Table 2-12 lists the operating and nonoperating environmental site requirements. To maintain normal operation and ensure high system availability, maintain an ambient temperature and clean power at your site. The following ranges are those within which the router will continue to operate; however, a measurement that is approaching the minimum or maximum of a range indicates a potential problem. You can maintain normal operation by anticipating and correcting environmental anomalies before they approach the maximum operating range.

- Operating temperature range: 32 through 104 F (0 through 40 C).
- Operating humidity range: 10 to 90%, noncondensing.
- Airflow: Cooling air is drawn in through the air intake vent below the card cage on the interface processor end of the chassis, and is exhausted through the front of the chassis. Keep the front and rear of the chassis clear of obstructions, and away from the exhaust of other equipment.

**Table 2-12      Specifications for Operating and Nonoperating Environments**

Specifications	Minimum	Maximum
Temperature, ambient operating	32 F (0 C)	104 F (40 C)
Temperature, ambient nonoperating and storage	-4 F (-20 C)	149 F (65 C)
Humidity, ambient (noncondensing) operating	10%	90%
Humidity, ambient (noncondensing) nonoperating and storage	5%	95%
Altitude, operating and nonoperating	Sea level	10,000' (3050 m)
Vibration, operating	5-200 Hz, 0.5 g (1 oct./min.)	-
Vibration, nonoperating	5-200 Hz, 1 g (1 oct./min.) 200-500 Hz, 2 g (1 oct./min.)	-

## Preventive Site Configuration: Maintaining Normal Operation

Planning a proper location for the router and the layout of your equipment rack or wiring closet are essential for successful system operation. Equipment placed too close together or inadequately ventilated can cause system overtemperature conditions. In addition, chassis panels made inaccessible by poor equipment placement can make system maintenance difficult. Following are precautions that can help avoid problems during installation and ongoing operation.

### General Precautions

Follow these general precautions when planning your equipment locations and connections:

- Use the **show environment** command regularly to check the internal system status. The environmental monitor continuously checks the interior chassis environment; it provides warnings for high temperature and maximum and minimum voltages, and creates reports on any occurrences. If warning messages are displayed, take immediate action to identify the cause and correct the problem.
- Maintain at least six inches of clearance in front of and behind the chassis to allow cooling air to flow through the inlet and exhaust ports. Keep the chassis free from obstructions and away from the exhaust air of other equipment. Remember that electrical equipment generates heat, and ambient room temperature alone may not be adequate to cool equipment to acceptable operating temperatures.
- Do not place the router directly on the floor or in any area that tends to collect dust.
- Follow ESD prevention procedures to avoid damage to equipment. Damage from static discharge can cause immediate or intermittent equipment failure.
- Ensure that the backplane cover, interface processors, and any blank interface processor fillers are in place and secure. The fans direct cooling air throughout the chassis interior; a loose panel or empty interface processor slot can redirect the air flow away from active components. Also, the backplane cover shields the high current present on the backplane, and must be in place to maintain the EMI integrity of the system.

### Equipment-Rack Ventilation

If you plan to install the router in an equipment rack, you can avoid overtemperature conditions by following the guidelines in the section “Equipment Racks” in this chapter in addition to the following precautions:

- There must be at least six inches of clearance between the front and rear of the chassis.
- Enclosed racks must have adequate ventilation or an exhaust fan; use an open rack whenever possible.
- Equipment near the bottom of a rack may generate excessive heat that is drawn upward and into the inlet ports of equipment above, leading to overtemperature conditions in devices at or near the top of the rack.

For a functional description of the environmental monitor and the status levels, refer to the section “Environmental Monitoring and Reporting Functions” in the chapter “Product Overview.”

## Power

Follow these precautions and recommendations when planning power connections to the router:

- Check the power at your site before installation and periodically after installation to ensure that you are receiving clean power. Install a power conditioner if necessary.

---

**Note** Wiring codes prevent 20A plugs from being used with most equipment rack power strips. The installation must comply with all applicable codes. The ground bond fastening hardware should be of compatible material and preclude loosening, deterioration, and electro-chemical corrosion of hardware and joined material. Installation is approved for use with copper conductors only.


Attachment of the chassis ground receptacles to the central office or other interior ground system should be made with a Number 6 AWG copper ground conductor as a minimum. The Cisco 7513 chassis employs two threaded, M4 x .7 chassis ground receptacles. These receptacles are intended to be bonded directly to the central office or other interior ground system, and are located on each side of the rear of the chassis as shown in Figure 1-1. The chassis ground receptacles require M4 bolts and locking hardware, which are not included.

---

- Provide redundant power sources for each power supply installed in the chassis.
- For AC-input installations, install an uninterruptible power source where possible.
- Install proper grounding to avoid damage from lightning and power surges.
- For both AC-input and DC-input installations, observe the power specifications listed in Table 1-1.


The AC-input-powered chassis operating at 120VAC requires a minimum of 20-amp service, with a 20-amp receptacle at the power source. The power cable supplied with the chassis uses a 20-amp plug. Figure 2-2 shows cable features required to connect the 20-amp plug to your AC source.

**Figure 2-2 20-Amp AC Power Cable Connector and Plug, and 20-Amp Receptacle**

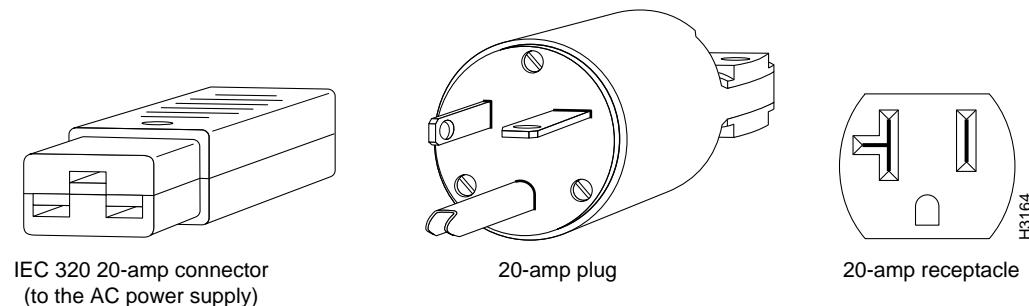

The DC powered chassis requires a minimum 35A dedicated service (at -48VDC). We recommend that you use an 8 AWG, highly flexible, stranded cable for the DC power connections. Figure 2-3 shows the conductor preparation for the DC-input cable connections.

**Figure 2-3 DC Power Cable Connection to Terminal Block**

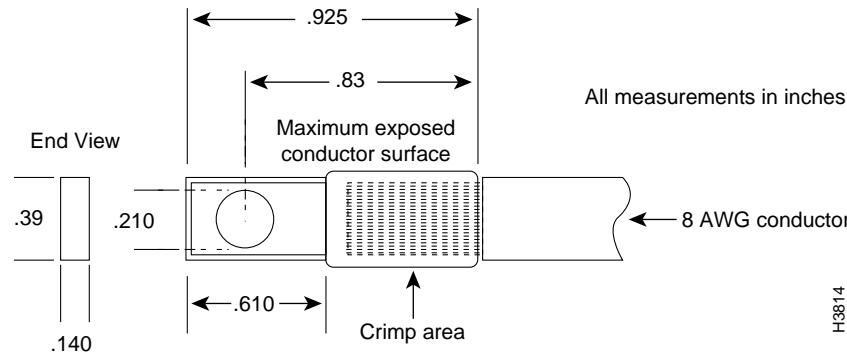

## Preparing Network Connections

When preparing your site for network connections to the router, you must consider a number of factors related to each type of interface, such as the type of cabling required for each type (fiber, thick or thin coaxial, or unshielded twisted-pair cabling), distance limitations for each signal type, the specific cables you need to connect each interface, and any additional interface equipment you need, such as transceivers, hubs, switches, modems, channel service units (CSUs), or data service units (DSUs). Before installing the router, have all additional external equipment and cables on hand. If you intend to build your own cables, refer to the cable pinouts in the appendix “Cabling Specifications.” For ordering information, contact a customer service representative.

## Additional and Optional Connection Equipment

You may need some of the following data communications equipment to complete your installation:

- To install and configure the router, you need a terminal with an EIA/TIA-232 DTE port and an EIA/TIA-232 DCE console cable with DB-25 plugs at both ends. You can detach the terminal (and cable) after the installation and configuration procedures are complete.

---

**Note** The console and auxiliary serial ports are asynchronous, and the FSIP and MIP serial ports are synchronous. When connecting serial devices such as modems or DSUs, connect only asynchronous devices to the console and auxiliary ports, and synchronous devices to the FSIP and MIP serial ports.

---

- For systems with two RSP2s installed (one as master and one as slave in RSP slots 6 and 7), you can simultaneously connect to both console or auxiliary ports using special Y cables: CAB-RSP2CON= for the console connections and CAB-RSP2AUX= for the auxiliary connections. The master/slave switch on the RSP2 designates it as either the system master or slave. RSP2s ship as system masters by default.

- To use an IEEE 802.3 or Ethernet interface (thick-wire, thin-wire, or unshielded twisted-pair) on your EIP, you need an 802.3 media attachment unit (MAU) and an attachment unit interface (AUI), or an Ethernet transceiver and transceiver cable. The AUI or transceiver cable will need an AUI 15-pin plug to connect to the 15-pin AUI receptacle on the EIP. Some interface equipment may use cables with screw-type locks rather than the slide-type locks that are standard on the EIP. A kit for replacing the slide-type locks with screw-type locks is shipped with the EIP.
- For IEEE 802.3u Fast Ethernet (100BASE-T) connections to the FEIP, you need Category 5, UTP cable for RJ-45 connections or Media Independent Interface (MII) cables for MII connections. For more detailed Fast Ethernet cable requirements, refer to the section “Fast Ethernet Connection Equipment” in this chapter.
- To connect a 4-Mbps or 16-Mbps Token Ring interface, you need an IEEE 802.5 MAU and a Token Ring adapter cable.
- To use the optical bypass feature available with multimode/multimode (CX-FIP-MM) and single-mode/single-mode (CX-FIP-SS) FDDI interfaces, you need an optical bypass switch. A DIN-to-mini-DIN control cable (CAB-FMDD) for connecting the switch is included with each of these FIPs.
- To use a low-speed synchronous serial interface, you need a synchronous modem or a CSU/DSU to connect to the network. Most modems require an EIA/TIA-232 DTE connection.
- To connect serial adapter cables to remote devices that use metric hardware, replace the factory-installed 4-40 thumbscrews on the network end of the cable with the M3 metric thumbscrews that are included with all serial port adapter cables.
- To connect a serial port to a T1 network, you need a T1 CSU/DSU that converts the High-Level Data Link Control (HDLC) synchronous serial data stream into a T1 data stream with the correct framing and ones density. (The term *ones density* refers to the fact that some telephone systems require a minimum number of 1 bits per time unit in a data stream.) Several T1 CSU/DSU devices are available as additional equipment and most provide either a V.35, EIA/TIA-449, or EIA-530 electrical interface to the system.

*T1* is the term for a digital carrier facility used for transmitting data over a telephone network at 1.554 Mbps. *E1* is the European equivalent of T1 and has a line rate of 2.048 Mbps.

- To connect a HSSI port, you need a DSU that can process data at speeds appropriate for the service to which you will connect: T3 (45 Mbps), E3 (34 Mbps), or SONET STS-1 (51.84 Mbps) and a HSSI interface cable (CAB-HSI1) to connect the DSU with the HIP.

*T3*, also known as *DS3* or *digital signal level 3*, is the U.S. standard for a digital carrier facility used for transmitting data over a telephone network at 44.736 Mbps. T3 is equivalent to 28 T1 (1.544 Mbps) interfaces. *E3* is the European equivalent of T3 that operates at 34 Mbps.

SONET (Synchronous Optical NETwork) is an international standard (ANSI/CCITT) for standardizing the use of optical communications systems. STS-1 (Synchronous Transport Signal level 1) is the basic building block signal of SONET; level 1 is 51.84 Mbps. Faster SONET rates are defined as STS-*n*, where *n* is a multiple of 51.84 Mbps. For example, the rate for SONET STS-3 is 155.52 Mbps, 3 times 51.84 Mbps.

- To connect two routers directly back to back between HSSI ports, you need a null modem cable (CAB-HNUL). The two routers must be in the same location and can be two Cisco 7513 routers, two Cisco 7000 series routers, or one of each; both routers must have a HSSI port available.

## ATM Connection Equipment

All AIP ATM interfaces are full-duplex. You must use the appropriate ATM interface cable to connect the AIP with an external ATM network.

The AIP provides an interface to ATM switching fabrics for transmitting and receiving data at rates of up to 155 Mbps bidirectionally; the actual rate is determined by the physical layer interface module (PLIM). The AIP can support PLIMs that connect to the following physical layers:

- TAXI 4B/5B 100 Mbps multimode fiber optic
- SONET/SDH 155 Mbps multimode fiber optic—STS-3C or STM-1
- SONET/SDH 155 Mbps single-mode fiber optic—STS-3C or STM-1
- E3 34 Mbps coaxial cable
- DS3 45 Mbps coaxial cable

---

**Note** The E3 and DS3 PLIMs require cable CAB-ATM-DS3/E3.

---



**Caution** To ensure compliance with EMI standards, the E3 PLIM connection requires an EMI filter clip (CLIP-E3-EMI) on the receive port (RCVR); the DS3 PLIM connection does not require this clip.

For wide-area networking, ATM is currently being standardized for use in Broadband Integrated Services Digital Networks (BISDNs) by the International Telecommunications Union Telecommunication Standardization Sector (ITU-T) (formerly the Consultative Committee for International Telegraph and Telephone (CCITT)) and the American National Standards Institute (ANSI). BISDN supports rates from E3 (34 Mbps) to multiple gigabits per second (Gbps).


The DS3 interface performs physical-layer translation from the AIP to a DS3 line interface in accordance with ATM Forum UNI Specification Version 3.1, ACCUNET T45 service specifications, and ANSI T1.107. The ATM User-to-Network Interface (UNI) specification defines the required MIB functionality for ATM interfaces. Refer to the ATM UNI specification for additional details.

ATM UNI information is arranged into a MIB fashion. MIB attributes are readable and writable across the Interim Local Management Interface (ILMI) using a Simple Network Management Protocol (SNMP). The ILMI uses SNMP, without UDP, and interface processor addressing along with the ATM MIB. The AIP supports RFC 1213 interface MIBs as specified in the ATM MIB V2 specification.

The ATM interface cable is used to connect your router to an ATM network or to connect two routers back to back. Cables can be obtained from the following cable vendors: AT&T, Siemens, Red-Hawk, Anixter, and AMP.


For 4B/5B traffic over multimode fiber, use the multimode MIC interface cable to connect the AIP with the external ATM switch. (See Figure 2-4.)

**Figure 2-4 Multimode Network Interface Connector (MIC Type)**

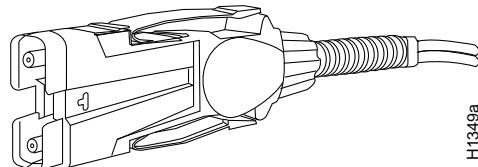


For SONET/SDH multimode connections, use one multimode duplex SC connector (see Figure 2-5) or two single SC connectors. (See Figure 2-6.)

**Figure 2-5 Duplex SC Connector**

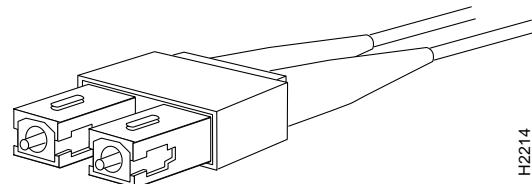


**Figure 2-6 Simplex SC Connector**

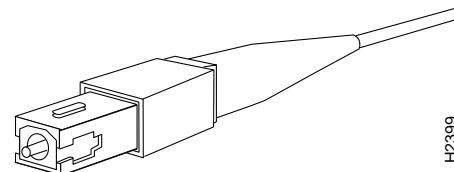

For SONET/SDH single-mode connections, use the single-mode (ST2) connector (bayonet-style twist-lock). (See Figure 2-7.)

 
**Figure 2-7 ST2 Connector**



**Warning** Invisible laser radiation can be emitted from the aperture ports of the single-mode ATM products when no fiber optic cable is connected. *Avoid exposure and do not stare into open apertures.* This product meets the Class 1 Laser Emission Requirement from CDRH FDDI.

For E3 and DS3 connections, use the 75 ohm, RG-59, coaxial cable, CAB-ATM-DS3/E3, which has bayonet-style, twist-lock (BNC) connectors and ferrite beads. (See Figure 2-8.) The E3 and DS3 PLIMs both require cable CAB-ATM-DS3/E3.


**Figure 2-8 CAB-ATM-DS3/E3 Cable—RG-59 Coaxial Cable with BNC Connectors**

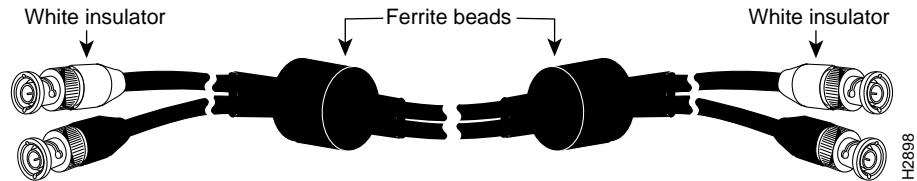

**Caution** To ensure compliance with EMI standards, the E3 PLIM connection requires an EMI filter clip (CLIP-E3-EMI) on the receive port (RCVR); the DS3 PLIM connection does not require this clip.


For multimode connections, connect the multimode interface cable to the media interface cable (MIC) connector on the 4B/5B PLIM. (See Figure 2-9.)

**Figure 2-9 MIC Connector on a 4B/5B PLIM**

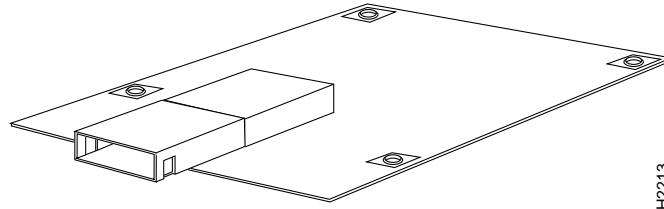


For multimode SONET connections, connect the multimode cable to the SC connector on the PLIM. (See Figure 2-10.)

**Figure 2-10 SONET Multimode SC Duplex PLIM**

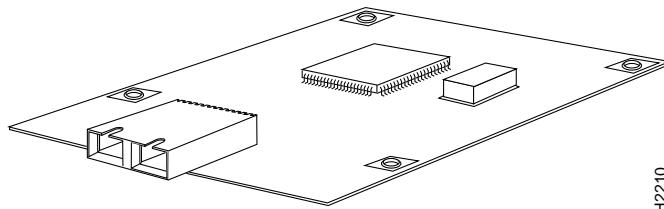


The SONET multimode SC-duplex connector is shipped with a dust plug. (See Figure 2-11.) Remove the plug by pulling on the plug as you squeeze the sides.

**Figure 2-11 SONET ATM Multimode Fiber Optic Transceiver and Dust Plug**

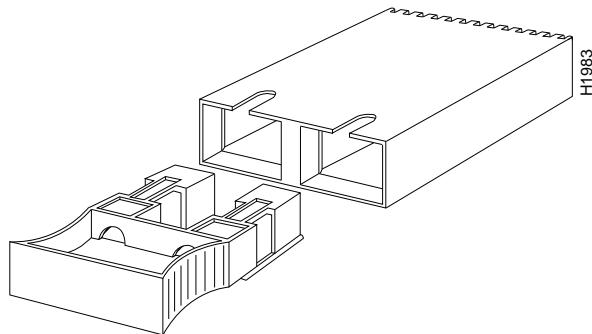


For single-mode SONET connections, connect the single-mode cable to the ST connector on the SONET PLIM. (See Figure 2-12.)

**Figure 2-12 SONET Single-Mode PLIM**

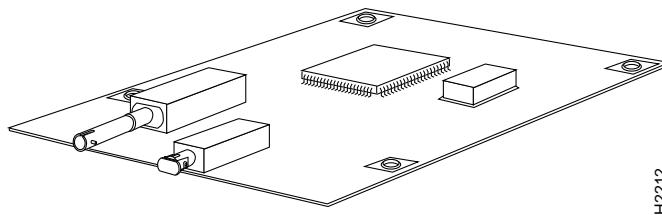

For E3 and DS3 connections, connect the coaxial cable to the BNC connector on the E3 or DS3 PLIM. (See Figure 2-13.) The E3 and DS3 PLIMs require cable CAB-ATM-DS3/E3. Ensure that the transmit and receive portions of the cable are connected to the appropriate PLIM connector. The E3 PLIM connection requires an EMI filter clip (CLIP-E3-EMI) on the receive port (RCVR). Refer to the chapter “Installing the Router.”

**Figure 2-13 E3 and DS3 PLIM—Representative of Both PLIMs**

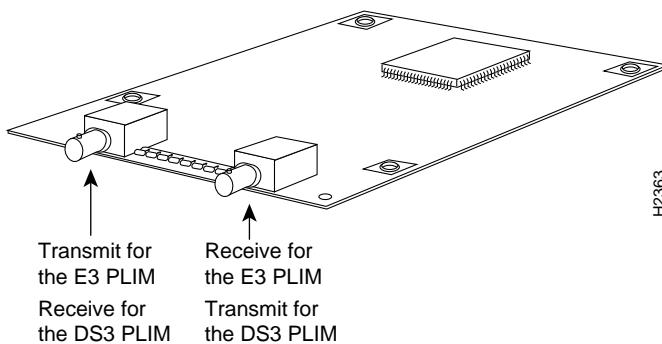


## Channel Attachment Connection Equipment

The ESCON Channel Adapter (ECA) and bus and tag Parallel Channel Adapter (PCA) for the CIP are available as FRUs; however, they are field replaceable by Cisco-certified field service personnel only. For more information on the ECA, PCA, CIP, and respective cable requirements, refer to the configuration note *Channel Attachment Interface Processor (CIP) Installation and Configuration* (Document Number 78-1342-xx), which is available on UniverCD or in print. This configuration note also ships with the CIP spare parts and FRUs.

## Ethernet Connection Equipment

You will need an 802.3 MAU and an AUI, or an Ethernet transceiver and transceiver cable between each EIP port and the Ethernet network. The Ethernet connectors on the EIP are standard 15-pin AUI receptacles that require an AUI or transceiver interface cable with a DB-15 AUI plug. (See Figure 2-14.)

**Figure 2-14      Ethernet Interface Cable Connectors**

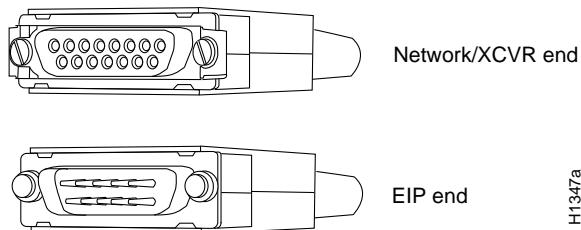

The term *Ethernet* is commonly used for all carrier sense multiple access/collision detection (CSMA/CD) local-area networks (LANs) that generally conform to Ethernet specifications, including IEEE 802.3. Ethernet Version 2 and IEEE 802.3 were based on, and developed shortly after, Ethernet Version 1. The slight differences between Ethernet and IEEE 802.3 are implemented in hardware, and both are supported automatically by the EIP without any hardware or software configuration changes. Together, Ethernet and IEEE 802.3 are the most widely used local-area network protocol. They are well suited to applications where a local communication medium must carry sporadic, occasionally heavy traffic at high peak data rates.

Stations on a CSMA/CD LAN can access the network at any time. Before sending data, the station *listens* to the network to see if it is already in use. If it is, the station waits until the network is not in use, then transmits. A collision occurs when two stations listen for network traffic, hear none, and transmit simultaneously. When this happens, both transmissions are damaged, and the stations must retransmit them. The stations detect the collision and use backoff algorithms to determine when they should retransmit.

Both Ethernet and IEEE 802.3 are *broadcast* networks, which means that all stations see all transmissions. Each station must examine received frames to determine whether it is the intended destination and, if it is, pass the frame to a higher protocol layer for processing.

IEEE 802.3 specifies several different physical layers, and Ethernet defines only one. Each IEEE 802.3 physical layer protocol has a name that summarizes its characteristics in the format *speed/signalling method/segment length* where *speed* is the LAN speed in Mbps, *signalling method* is the signalling method used (either *baseband* or *broadband*), and *segment length* is the maximum length between stations in hundreds of meters. For example, 10BASE-5 specifies a 10Mbps Baseband LAN with network segments spaced at 500 meters.

Table 2-13 summarizes the characteristics of Ethernet Version 2 and IEEE 802.3.


**Table 2-13      Ethernet Version 2 and IEEE 802.3 Physical Characteristics**

IEEE 802.3				
	Ethernet	10BASE-5	10BASE-2	10BASE-T
Data rate (Mbps)	10	10	10	10
Signaling method	Baseband	Baseband	Baseband	Baseband
Maximum segment length	500 m (1,640 ft.)	500 m (1,640 ft.)	185 m (607 ft.)	100 m (328 ft.) (UTP)
Media	50-ohm coax (thick)	50-ohm coax (thick)	50-ohm coax (thin)	Unshielded twisted pair (UTP)
Topology	Bus	Bus	Bus	Star

Ethernet is most similar to IEEE 802.3 10BASE-5. Both of these protocols specify a bus topology network with a connecting cable between the end stations and the actual network medium. Both protocols require a device that acts as an interface between the end stations (the EIP) and the actual network medium (cable). The Ethernet specifications call this device a *transceiver* and it is connected to the station with a *transceiver cable*. The IEEE 802.3 specification refers to the same type of device as a *media attachment unit* (MAU) and to the cable as an *attachment unit interface* (AUI). Both transceiver cables and AUIs can connect to the EIP ports directly.

Transceivers are available from a variety of sources for thick-wire (10BASE-5), thin-wire (10BASE-2), or unshielded twisted-pair cabling (10BASE-T at 10 Mbps); Figure 2-15 shows examples of transceivers and connection equipment. You can connect either Ethernet Version 1 or Version 2/IEEE 802.3 interfaces; the EIP automatically supports both types.


**Figure 2-15** Ethernet Transceivers for the EIP

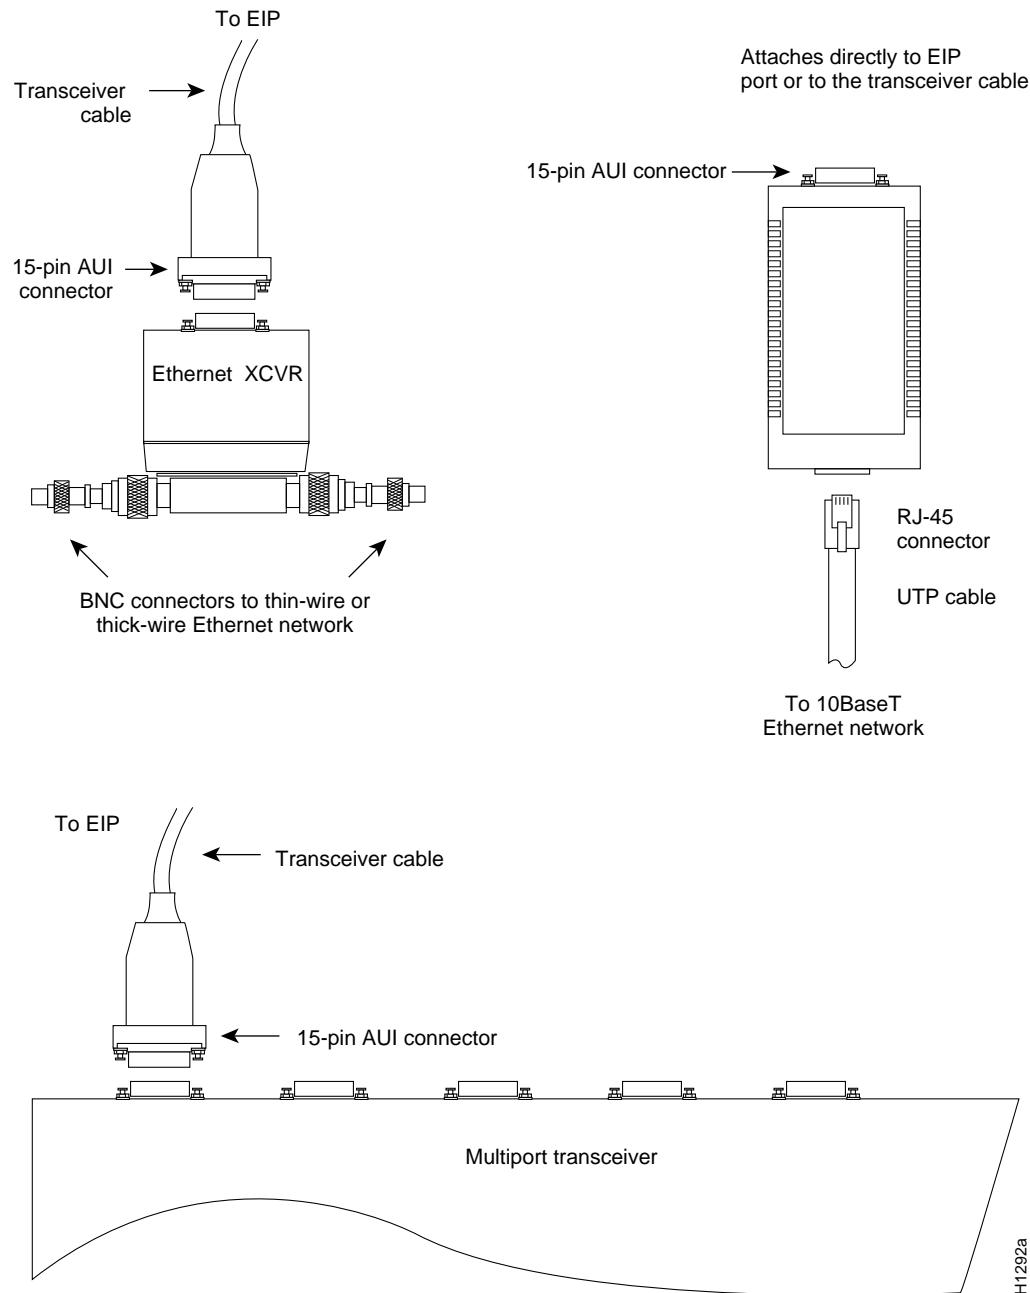

**Note** Some Ethernet transceivers can connect directly to the AUI ports on the EIP and do not require an AUI or transceiver cable. When planning your connections, consider the size and shape of any transceivers that will connect to the EIP ports directly, and avoid connecting transceiver that overlap and impair access to connections on other interface processors.

Typically, Ethernet connectors have either slide-type or jackscrew-type locks. (See Figure 2-16.) The most common are those that use a slide-type lock, which is the type used on the EIP ports. The connector on the left in Figure 2-16 shows a slide-type lock. When the cable is connected to the 15-pin port, a metal bracket snaps up over two posts on the cable connector to secure it in the port and provide strain relief. The jackscrew-type lock, shown on the right in Figure 2-16, uses two thumbscrews or jackscrews, which are usually attached to the cable connector, instead of the posts and sliding bracket. When the cable is connected to the 15-pin port, you secure it by screwing the thumbscrews into the jackscrews adjacent to the connector.

**Figure 2-16** Ethernet Connector Locks, Slide-Type and Jackscrew-Type

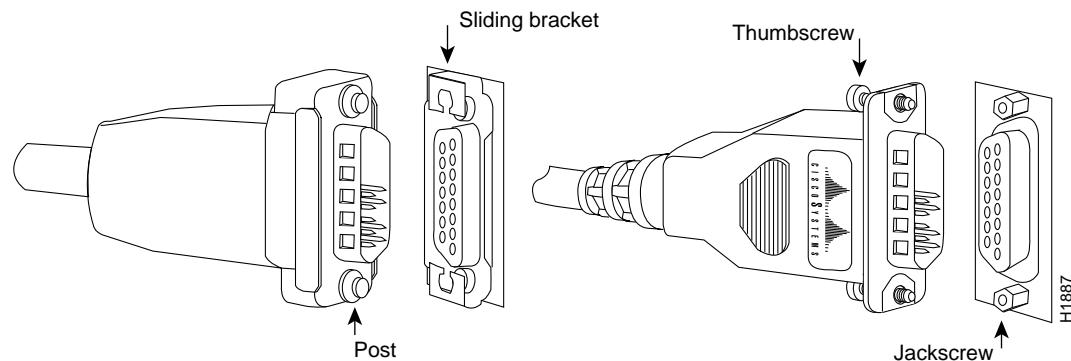


The slide-type locks are standard on the EIP ports; however, conversion kits are included with each EIP to replace the slide-type locks with jackscrews. For specific replacement instructions, refer to the installation document that accompanies the jackscrew kit.

## Fast Ethernet Connection Equipment

The two connectors on the FEIP port adapter are a single MII, 40-pin, D-shell type, and a single RJ-45. You can use either one or the other. Only one connector can be used at one time. The FEIP can have up to two port adapters installed. Each connection supports IEEE 802.3u interfaces compliant with the 100BASE-X and 100BASE-T standards. The RJ-45 connection does not require an external transceiver; however, the MII connection does, depending on the type of connection you use.


The RJ-45 modular connector (see Figure 2-17) has strain relief functionality incorporated into the design of its standard plastic connector. Figure 2-17 and Figure 2-18 show the RJ-45 and MII connectors.

**Figure 2-17 RJ-45 Connections—Connector and Plug**

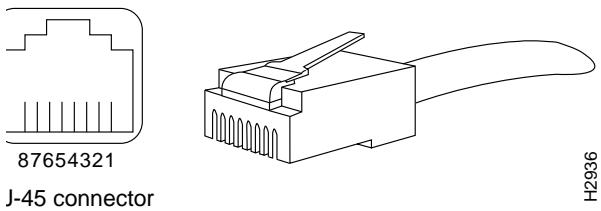

Depending on the type of media you use between the MII connection on the port adapter and your switch or hub, the network side of your 100BASE-T transceiver should be appropriately equipped: with ST-type connectors (for optical fiber), BNC connectors (for 10BASE-2 coaxial cable), and so forth. Figure 2-18 shows the pin orientation of the female MII connector on the port adapter.

**Figure 2-18 MII Connection—Female**

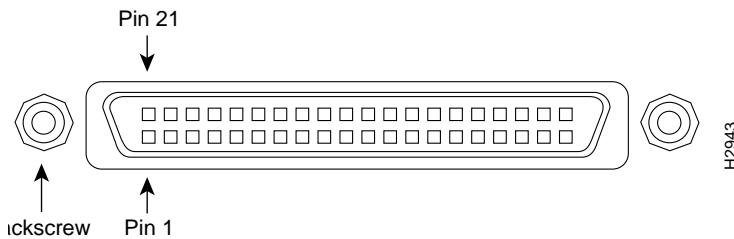

The MII receptacle uses 2-56 screw-type locks, called *jackscrews* (shown in Figure 2-18), to secure the cable or transceiver to the MII port. MII cables and transceivers have knurled thumbscrews (screws you can tighten with your fingers) that you fasten to the jackscrews on the FEIP MII connector. Use the jackscrews to provide strain relief for your MII cable.

## Token Ring Connection Equipment

The term *Token Ring* refers to both IBM's Token Ring Network, which IBM developed in the 1970s, and to IEEE 802.5 networks. The IEEE 802.5 specification was modeled after, and still closely shadows, IBM's network. The two types are compatible, although the specifications differ slightly.

You will need an 802.5 MAU or a multistation access unit (MSAU) to provide the interface between the TRIP Token Ring interfaces and the external ring, and a Token Ring lobe cable between each TRIP port and the MAU or MSAU. Lobe cables connect each Token Ring station (TRIP port) to the MAU or MSAU, and patch cables can connect adjacent MSAUs to form one large ring.

Before you enable the Token Ring interfaces, ensure that each is set for the correct speed, or it can bring down the ring. TRIP ports operate at either 4 or 16 Mbps. The default speed for all TRIP ports is 4 Mbps, which you can change to 16 Mbps on any port with the configuration command **ring-speed *n***, where *n* is the speed (4 or 16) in Mbps. The speed of each Token Ring port must match the speed of the ring to which it is connected.




**Caution** Each TRIP port must be configured for the same ring speed as the ring to which it is connected, either 4 or 16 Mbps. If the port is set for a different speed, it will cause the ring to beacon, which effectively brings the ring down and makes it inoperable.

## Token Ring Cables and Connectors


The Token Ring ports on the TRIP are DB-9 (PC type) receptacles that require Type 1 or Type 3 lobe cables. Type 1 lobe cables use shielded twisted pair cable and terminate at the network end with a large MAU plug. (See Figure 2-19.)

**Figure 2-19 TRIP Token Ring Type 1 Lobe Cable Connectors, DB-9 and MAU Types**

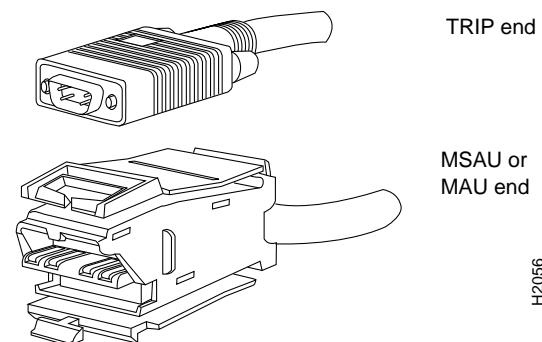

Type 3 lobe cables use either shielded twisted pair (STP) or unshielded twisted pair (UTP) cable and terminate at the network end with an RJ-11 plug. (See Figure 2-20.) The TRIP end of both cable types is a DB-9 plug.

**Figure 2-20 TRIP Token Ring Type 3 Lobe Cable Connectors, DB-9 and RJ-11 Types**

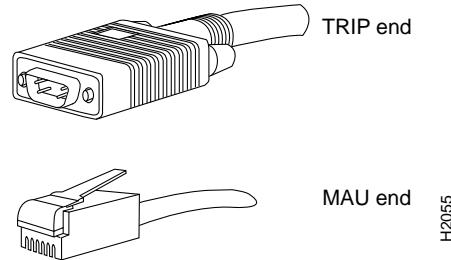

### Token Ring Physical Connections

The IBM Token Ring specifies a star topology, with all end stations connected through a device called a multistation access unit (MSAU). IEEE 802.5 does not specify any topology, although most implementations are based on a star configuration with end stations attached to a device called a media access unit (MAU). Also, IBM Token Ring specifies twisted pair cabling, whereas IEEE 802.5 does not specify media type. Most Token Ring networks use shielded twisted pair cabling; however, some networks that operate at 4 Mbps use unshielded twisted pair cable.


Table 2-14 shows a comparison of the two types.

**Table 2-14 IBM Token Ring and IEEE 802.5 Comparison**

Network Type	Data Rates	Stations/ Segment	Topology	Media	Signaling	Access Method	Encoding
IBM Token Ring network	4, 16 Mbps	260 shielded twisted pairs 72 unshielded twisted pairs	Star	Twisted pair	Baseband	Token passing	Differential Manchester
IEEE 802.5 network	4, 16 Mbps	250	Not specified	Not specified	Baseband	Token passing	Differential Manchester

In the typical Token Ring network shown in Figure 2-21, lobe cables connect each Token Ring station (TRIP port) to the MSAU (or MAU), and patch cables connect adjacent MSAUs (or MAUs) to form one large ring.

**Figure 2-21** Token Ring Network Physical Connections

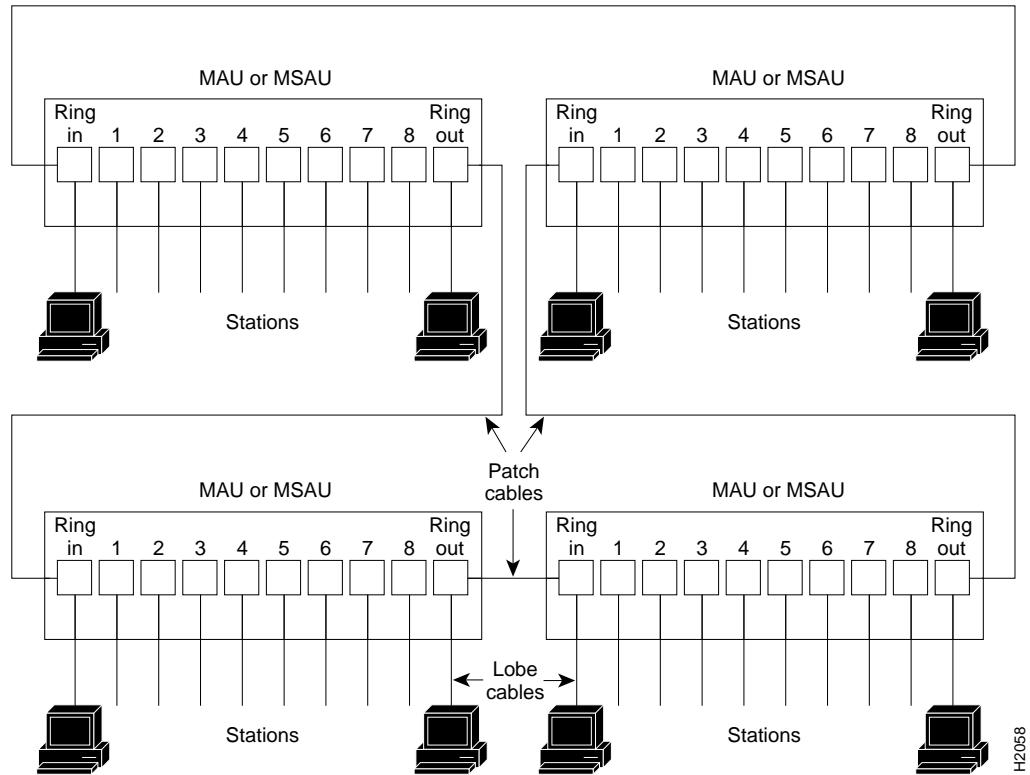

Token Ring and IEEE 802.5 are token-passing networks, which move a small frame, called a *token*, around the network. Possession of the token grants the right to transmit; a station with information to transmit must wait until it detects a free token passing by.

When all stations on the ring are idle, the token packet is labeled as a *free token*. If the station receiving the token has no information to send, it simply passes the free token to the next station. A station that does have information to transmit seizes the token, alters a bit of the token frame (which changes the free token to a *busy token*), appends the information it wishes to transmit, and then sends this information to the next station on the ring. The busy token, with the information frame, circulates the ring until it reaches the intended destination station, which copies the information for further processing and passes the busy token and information frame back out to the ring.

The information frame continues to circle the ring until it reaches the original sending station, which checks the returned frame to ensure that the destination station received the information. When the original sending station determines that the receiving station accepted the information, it purges the token and information frame, and transmits a new free token out to the ring.

While the information frame is circling the ring, there is no token on the network (unless *early token release* is enabled, which is described later in this section), so other stations wishing to transmit must wait. Therefore, collisions cannot occur in Token Ring networks.

A priority scheme allows the user to designate any station as high priority, which allows the station to use the ring more frequently than lower-priority stations. Stations cannot seize or reserve a passing token with a higher priority than its own designated priority, which allows highest-priority stations to seize the token as soon as possible. The token frame contains a *priority* field, which is set by the station that generates the token, and a *reservation* field, which can be set by a higher-priority station as it receives and passes the token.

When a token is circulating, only stations with a priority equal to or higher than the priority value in the token fields can seize that token or reserve the next token. Once the token is seized and changed to a busy token with an information frame, a station with a higher priority than the transmitting station can reserve the next token (for the next pass around the network) by setting the reservation field. When the original sending station receives a token with the reservation field set for a higher-priority station, it issues the new free token with the priority field set to that of the reserving station. Only the reserving station or another station with an equal or higher priority can seize the token. After the higher-priority station seizes the token and completes its transmission, it must first determine that all other higher-priority stations are finished transmitting and then reinstate the previous, lower priority. When the station detects a free token with the higher priority, it assumes that there is no more higher-priority traffic waiting and downgrades the priority of the token before passing it back onto the ring.

Early token release allows a station to release a new token onto the ring immediately after transmitting, instead of waiting for the first frame to return. This feature can help increase the total bandwidth on the ring, but decreases ring reliability. The TRIP supports early token release, but by default it is not enabled on any TRIP ports.

Unlike CSMA/CD networks such as Ethernet, token-passing networks are deterministic. Each station can hold the token for a maximum period of time, so it is possible to calculate the maximum time that will pass before any end station will be able to transmit. This and the fault management mechanisms discussed in the following section make Token Ring networks robust and predictable.

### Token Ring Fault Management

Token Ring networks employ several mechanisms for detecting and compensating for network faults. For example, one station in the Token Ring network is designated as the *active monitor*. This station, which potentially can be any station on the network, acts as a centralized source of timing information for other ring stations and performs a variety of ring maintenance functions. These functions include detecting and correcting a lost or persistently busy (continuously circulating) token on the ring.

To detect a lost token, the active monitor uses a timeout greater than the time required for the longest frame to traverse the ring completely. If the active monitor does not see a token during this time, it assumes that the token is lost, purges the ring of any residual data, and issues a new token.

When a sending device fails, its frame may continuously circle the ring, preventing other stations from transmitting their own frames and essentially locking up the network. To detect a circulating busy token, the active monitor sets a monitor bit to 1 on any passing busy token. If it sees a busy token with a bit already set, it knows that the transmitting station failed to purge its packet. The monitor changes the busy token to a free token, and sends it back out to the ring.

Other stations on the ring have the role of passive monitor; their primary job is to detect failure of the active monitor and assume that role if necessary. A contention-resolution algorithm determines which station takes over if the active monitor fails.

A Token Ring algorithm called *beaconing* detects and tries to repair certain network faults. Whenever a station detects a serious problem with the network (such as a cable break), it sends a beacon frame. The beacon frame defines a failure domain, which includes the station reporting the failure, its nearest active upstream neighbor, and everything in between. Beaconing initiates a process called *autoreconfiguration*, where nodes within the failure domain automatically perform diagnostics and attempt to reconfigure the network around the failed areas. Physically, the MSAU or MAU can accomplish this through electrical reconfiguration.

All information in a Token Ring network is seen by active MSAUs or MAUs. Some of these devices can be programmed to check for problems and automatically remove problem stations from the ring, and some contain bypass relays so that you can selectively remove stations from the ring without affecting traffic on the network.

All TRIP ports support both 4 and 16 Mbps operation and early token release. The default for all ports is for 4 Mbps operation and early token release disabled. Both states are enabled with configuration commands in the configuration mode. To enable 16 Mbps, specify the slot/port address and use the configuration command **ring-speed 16**; to return to 4 Mbps operation, use the command **ring-speed 4**. To enable and disable early token release, specify the slot/port address and use the configuration command **[no] early token release**. For examples of these commands, refer to “Token Ring Connections” in the chapter “Installing the Router.” For complete descriptions and examples of software commands, refer to the related software configuration documentation.

## FDDI Connection Equipment

Fiber-optic transceivers on the FIP provide a direct interface between the router and the FDDI ring. The FIP supports both single-mode and multimode transceivers and is available with any combination of the two types. Both transceiver types provide a Class A dual-attach interface that can be connected to a Class A or a Class B station. Class A is a dual-attach station (DAS) with primary and secondary rings; Class B is a single-attach station (SAS) with only a primary ring. A detailed description of Class A and B and of DASs and SASs follows the descriptions of FDDI connection equipment.

## FDDI Media


FDDI networks use two types of fiber-optic cable: single-mode (also called *monomode*) and multimode. *Mode* refers to the angle at which light rays (signals) are reflected and propagated through the optical fiber core, which acts as a waveguide for the light signals. Multimode fiber has a relatively thick core (62.5/125-micron) that reflects light rays at many angles. Single-mode fiber has a narrow core (8.7/125 to 10/125-micron) that allows the light to enter only at a single angle.

Although multimode fiber allows more light signals to enter at a greater variety of angles (modes), the different angles create multiple propagation paths that cause the signals to spread out in time and limits the rate at which data can be accurately received. This distortion does not occur on the single path of the single-mode signal; therefore, single-mode fiber is capable of higher bandwidth and greater cable run distances than multimode fiber. In addition, multimode transmitters usually use LEDs as a light source, and single-mode transmitters use a laser diode, which is capable of sustaining faster data rates. Both types use a photodiode detector at the receiver to translate the light signal into electrical signals.

### FDDI Transceivers and Cable Connectors


The FIP single-mode interface uses simplex, FC-type connectors for the transmit and receive ports. (See Figure 2-22.) The connector accepts standard 8.7/125 to 10/125-micron single-mode fiber-optic cable. The single-mode interface supports connections at distances up to 6 miles (10 kilometers).

 **Figure 2-22 Single-Mode FDDI Network Interface Connectors, FC Type**



The multimode transceiver supports distances of up to 1.2 miles (1.9 kilometers). The multimode connector is an FDDI-standard physical sublayer (PHY) connector that encodes and decodes the data into a format acceptable for fiber transmission. The multimode connector accepts standard 62.5/125-micron multimode fiber-optic cable using the media interface cable (MIC) and, with proper cable terminators, can accept 50/125 micron fiber-optic cable. Multimode uses the integrated MIC shown in Figure 2-23 at both the FIP and network ends.

**Figure 2-23 Multimode FDDI Network Interface Connector, MIC Type**

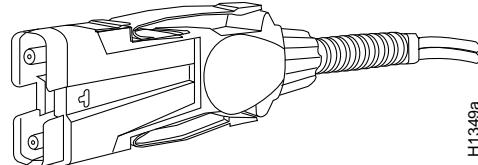

The multimode/multimode FIP (CX-FIP-MM) and the single-mode/single-mode FIP (CX-FIP-SS) provide a control port for an optical bypass switch, which allows the light signal to pass directly through the bypass switch and completely bypass the FIP transceivers when the interface has failed or is shut down. Most optical bypass switches provide the necessary interface cables for connection to the connectors on the FIP; however, not all manufacturers use the same type of DIN connector for the control port. Some manufacturers use a DIN, and some use a smaller version, called a *mini-DIN*. The optical bypass control port on the FIP requires a mini-DIN connector. A DIN-to-mini-DIN adapter cable (CAB-FMDD) is included with the FIP to ensure that you can connect to either type.


The FIP supports both Class A and Class B station connections and provides an interface for both single-mode and multimode fiber-optic cable. The two physical ports (PHY A and PHY B) are available with either single-mode (FC) or multimode (MIC) port connectors, or with a combination of one of each for matching multimode and single-mode fiber in the same FDDI network.

## FDDI Physical Connections

Fiber Distributed Data Interface (FDDI), which specifies a 100-Mbps, token-passing dual-ring network using fiber-optic transmission media, is defined by the ANSI X3.1 standard and by ISO 9314, the international version of the ANSI standard. An FDDI *network* comprises two token-passing fiber-optic rings: a primary ring and a secondary ring. An FDDI *ring* consists of two or more point-to-point connections between adjacent stations.

An FDDI ring consists of two or more point-to-point connections between adjacent stations. On most networks, the primary ring is used for data communication, and the secondary ring is used as a backup. Class B, or single-attach stations (SAS), attach to one ring and are typically attached through a concentrator; Class A, or dual-attach stations (DAS), attach to both rings. Figure 2-24 shows a typical FDDI configuration with both DASs and SASs.

**Figure 2-24 Typical FDDI Configuration with DAS, Concentrator, and SAS**

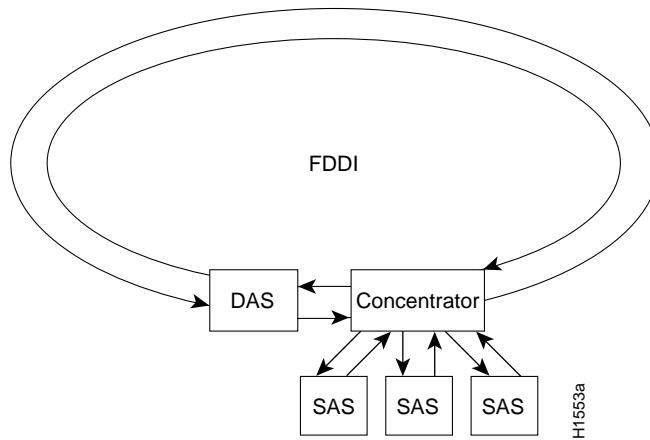


SASs (Class B) typically attach to the primary ring through a concentrator, which provides connections for multiple SASs. The concentrator ensures that a failure or power down of any SAS does not interrupt the ring. SASs use one transmit port and one receive port to attach to the single ring. DASs (Class A) have two physical ports, designated PHY A and PHY B, each of which connects the station to both the primary and secondary rings. Each port is a receiver for one ring and a transmitter for the other. For example, PHY A receives traffic *from* the primary ring, and PHY B transmits *to* the primary ring.

## FDDI Fault Management

The dual rings in an FDDI network provide fault tolerance. If a station on a dual ring shuts down or fails, such as Station 3 in Figure 2-25, the ring automatically wraps (doubles back on itself) to form a single contiguous ring. This removes the failed station from the ring, but allows the other stations to continue operation. In Figure 2-25, the ring wraps to eliminate Station 3 and forms a smaller ring that includes only Stations 1, 2, and 4.

**Figure 2-25 DAS Station Failure and Ring Recovery Example**

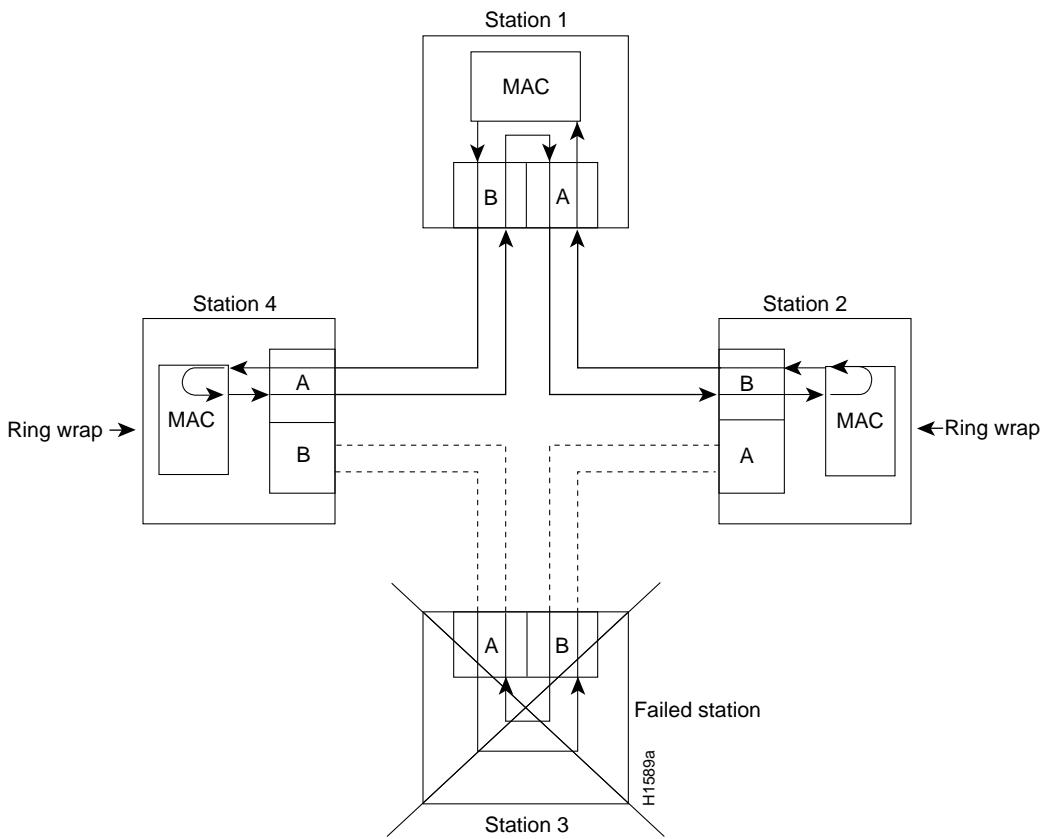


**Note** Each station in a ring refers to its neighbor stations as *upstream* or *downstream* neighbors. The *stream* is based on the signal flow on the primary ring. A station receives the primary signal from its upstream neighbor, and transmits the primary signal to its downstream neighbor. For example, Figure 2-25 shows the primary signal flow being transmitted from PHY B on Station 2 to PHY A on Station 1 and from PHY B on Station 1 to PHY A on Station 4. Using Station 1 as a reference, Station 2 is the upstream neighbor of Station 1, and Station 4 is the downstream neighbor of Station 1.

A second failure could cause the ring to wrap in both directions from the point of failure, which would segment the ring into two separate rings that could not communicate with each other. For example, if Station 1 in Figure 2-25 fails after Station 3 fails, Stations 2 and 4 will each be isolated because no path for communication exists between them. Subsequent failures cause additional segmentation.

Optical bypass switches avoid segmentation by eliminating failed stations from the ring. During normal operation, an optical bypass switch allows the light signal to pass directly through itself uninterrupted. When a station with a bypass switch fails, the bypass switch reroutes the signal back onto the ring before it reaches the failed station, so the ring does not have to wrap back on itself.

Figure 2-26 shows an optical bypass switch installed at Station 1. In the normal configuration shown on the left, Station 1 is functioning normally, so the optical bypass switch appears transparent. The switch essentially allows the signals to pass through it without interruption. However, if Station 1 fails, the optical bypass switch enables the bypassed configuration shown on the right in Figure 2-26.

**Figure 2-26 Optical Bypass Operation on a DAS**

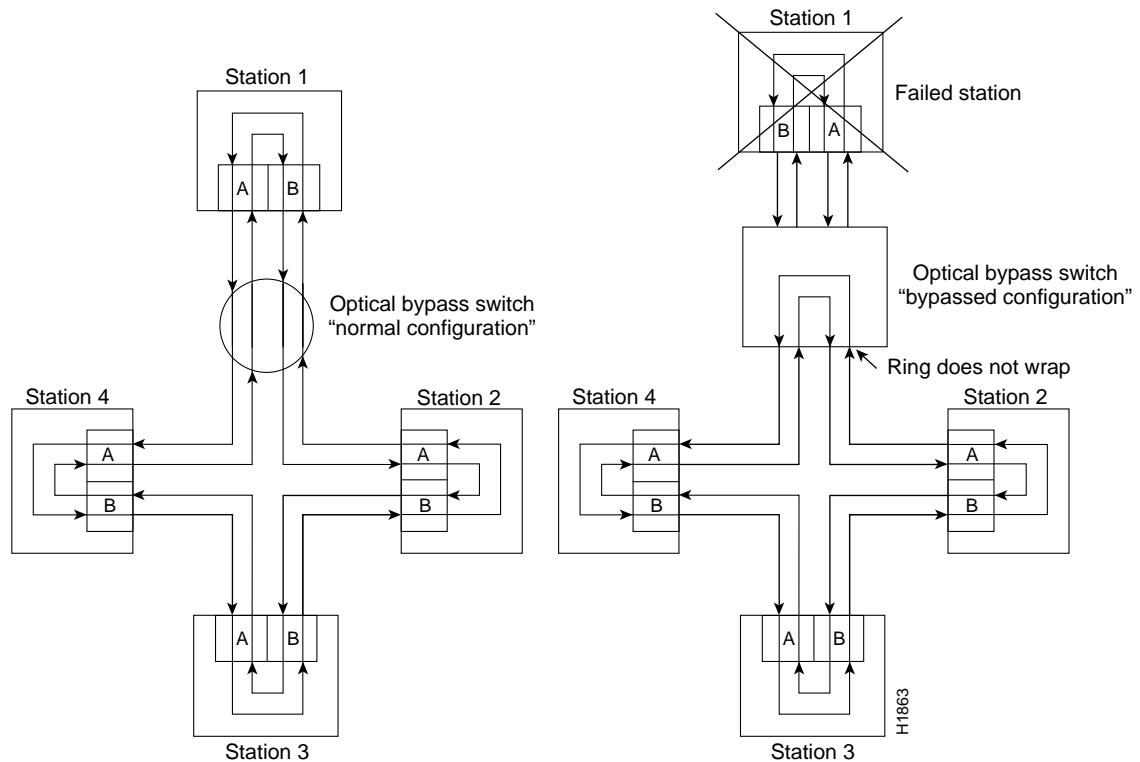


The bypass switch reroutes the light signal by intercepting it before it reaches the failed Station 1 and sends it back out to the ring. This allows the signal to maintain its existing path and direction without wrapping back on itself. However, stations that are operating normally repeat the signal when sending it back out to the ring. Optical bypass switches do not repeat or drive the signal (they just allow the signal to pass through them), so significant signal loss can occur when the downstream neighbor (the next station on the ring) is far away.

Another technique for fault tolerance is dual homing, whereby critical devices are attached to two concentrators. Only the designated primary concentrator is active unless it (or its link) fails. If the primary does fail, the backup (passive) concentrator is activated automatically and sustains the ring.

## MultiChannel Connection Equipment

The MIP T1 interface cable has two 15-pin DB connectors at each end to connect the MIP with the external CSU. Figure 2-27 shows the MIP interface cable and connectors.


**Figure 2-27 T1 Interface Cable**

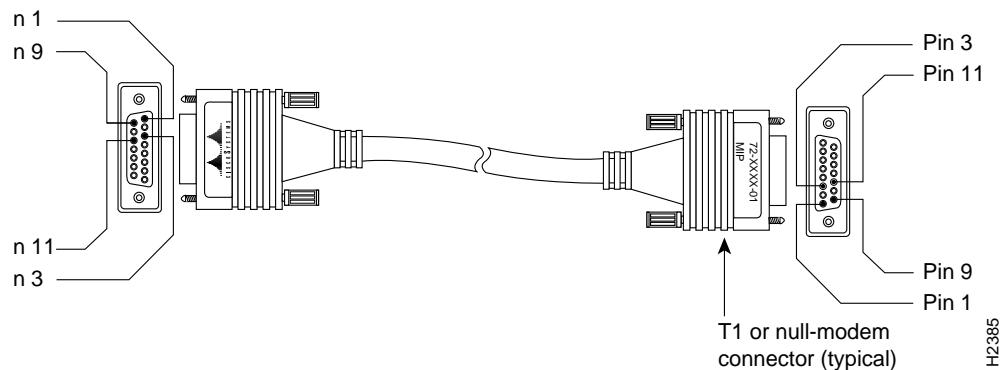


For E1, four serial cables are available for use with the MIP. All four have DB-15 connectors on the MIP end and either BNC, DB-15, Twinax, or RJ-48 connectors on the network end. Figure 2-28, Figure 2-29, Figure 2-30, and Figure 2-31 show the E1 interface cables.

Refer to the appendix “Cabling Specifications” for the T1 and E1 cable pinouts.


**Figure 2-28 E1 Interface Cable for 75-Ohm, Unbalanced Connections (with BNC Connectors)**

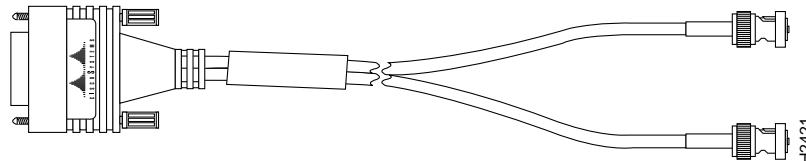


**Figure 2-29 E1 Interface Cable for 120-Ohm, Balanced Connections (with DB-15 Connectors)**

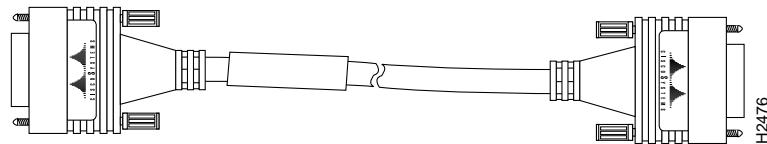

**Figure 2-30 E1 Interface Cable for 120-Ohm, Balanced Connections (with Twinax Connectors)**

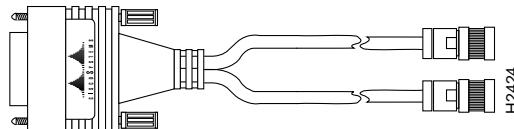

**Figure 2-31 E1 Interface Cable for 120-Ohm, Balanced Connections (with RJ-48 Connector)**

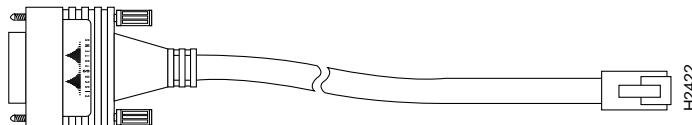

Following are the available MIP cables:

- T1 interface cables to connect the MIP and CSU:
  - Null-Modem cable—CAB-7KCT1NULL(=) or equivalent
  - Straight-through cable—CAB-7KCT1DB15(=) or equivalent
- E1 interface cables to connect the MIP and CSU:
  - BNC cable—CAB-E1-BNC(=) or equivalent
  - DB-15 cable—CAB-E1-DB15(=) or equivalent
  - Twinax cable—CAB-E1-TWINAX(=) or equivalent
  - RJ-45 cable—CAB-E1-RJ45(=) or equivalent


## Serial Connection Equipment

The FSIP supports synchronous serial connections at T1 and E1 speeds; the actual speed depends on the type of electrical interface used, the distances the signals must travel, and the configuration of other ports on the same FSIP module. In general, you should use EIA/TIA-232 for speeds of 64 kbps and below, and use X.21, EIA/TIA-449, V.35, or EIA-530 for higher speeds. (See the section “Configuring the FSIP” in the chapter “Maintaining the Router.”) The universal FSIP ports for all interface types are 60-pin, D-shell receptacles. Each port requires a serial port adapter cable to connect to the external network or connection device.

### Universal Serial Cables

On data communications ports, the universal serial port adapter cable determines the electrical interface type and mode of the port. All universal serial cables use a 60-pin D-shell plug at the router (FSIP) end. The network end of each cable provides the standard connector used with each respective interface type. (See Figure 2-32.) Cables for all data communications interfaces except EIA-530 are available in DTE mode with a plug at the network end, or in DCE mode with a receptacle at the network end. The mode, DCE or DTE, is labeled on the connectors at both ends of the cables.

Figure 2-32 Serial Port Adapter Cables

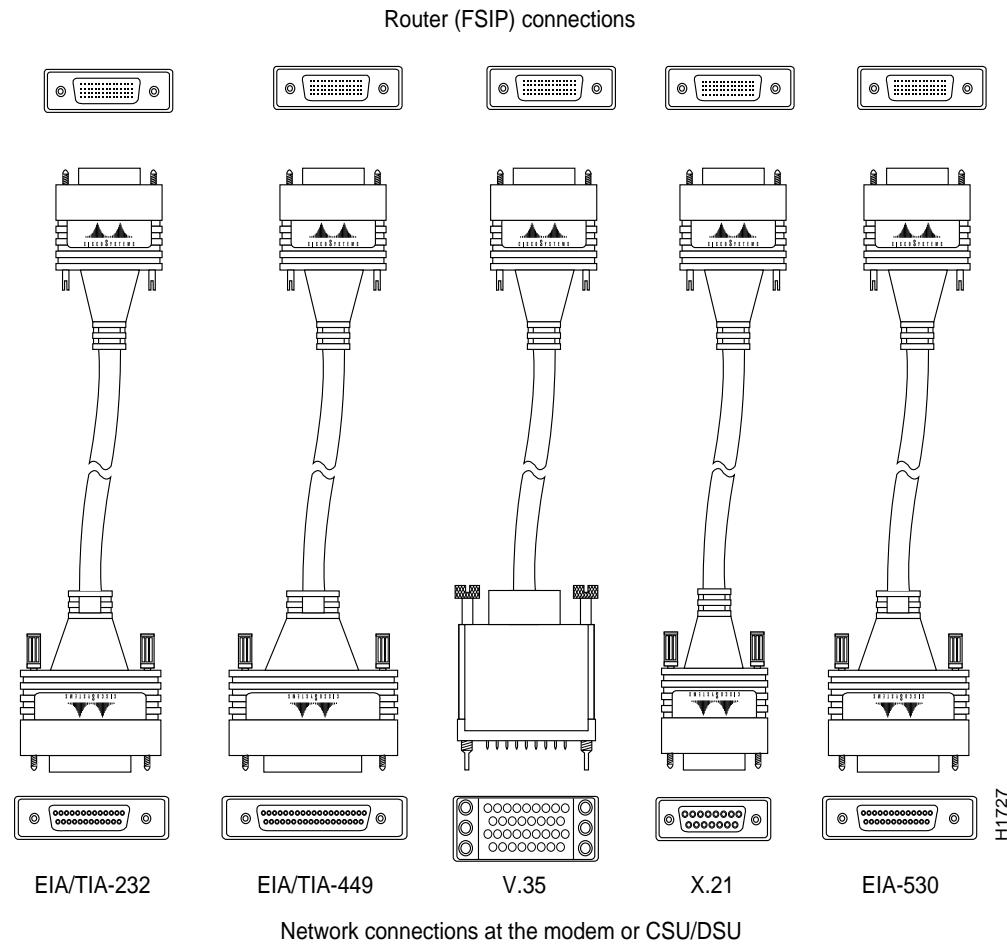


Metric (M3) thumbscrews are included with each port adapter cable to allow connection to devices that use metric hardware. Following are the available interface cable options for the mode and network-end connectors for each:

- EIA/TIA-232: DTE mode with DB-25 plug; DCE mode with DB-25 receptacle
- EIA/TIA-449: DTE mode with 37-pin D-shell plug; DCE mode with 37-pin D-shell receptacle
- V.35: DTE mode or DCE mode with 34-pin Winchester-type V.35 plug; DTE mode or DCE mode with 34-pin Winchester-type V.35 receptacle
- X.21: DTE mode with DB-15 plug; DCE mode with DB-15 receptacle
- EIA-530: DTE mode with DB-25 plug


## E1-G.703/G.704 Cables

Figure 2-33, Figure 2-34, and Figure 2-35 show the unbalanced and balanced cables used for connection between the E1-G.703/G.704 port adapter and your network. The port-adapter end of each cable has a DB-15 connector.


**Figure 2-33 E1-G.703/G.704 Interface Cable for 75-Ohm, Unbalanced Connections (with BNC Connectors and Coaxial Cables)**

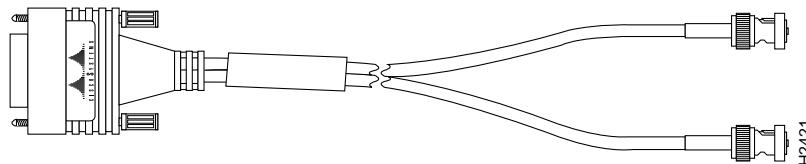

**Figure 2-34 E1-G.703/G.704 Interface Cable for 120-Ohm, Balanced Connections (with DB-15 Connectors on Both Ends)**

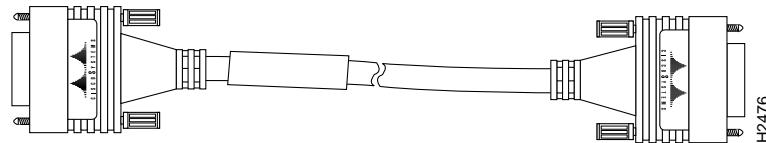

**Figure 2-35 E1-G.703/G.704 Interface Cable for 120-Ohm, Balanced Connections (with Twinax Connectors and Cables)**

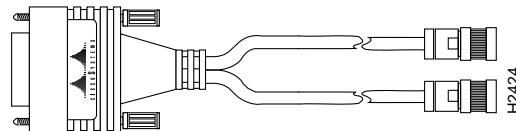

**Caution** It is a requirement of the statutory approval of the E1-G.703/G.704 interface that the jackscrews on the DB-15 connector backshell are securely screwed down while the FSIP is operating.

Following are the E1-GG.703/G.704 interface cables to connect the FSIP and CSU:

- BNC cable—CAB-E1-BNC(=) or equivalent
- DB-15 cable—CAB-E1-DB15(=) or equivalent
- Twinax cable—CAB-E1-TWINAX(=) or equivalent

### NRZ and NRZI Formats

All data communications interfaces support both nonreturn to zero (NRZ) and nonreturn to zero inverted (NRZI) formats. Both formats use two different voltage levels for transmission. NRZ signals maintain constant voltage levels with no signal transitions (no return to a zero voltage level) during a bit interval and are decoded using absolute values (0 and 1). NRZI uses the same constant signal levels but interprets the presence of data at the beginning of a bit interval as a signal transition and the absence of data as no transition. NRZI uses differential encoding to decode signals, rather than determining absolute values. NRZ, the factory default on all interface types, is most common. All interface types also support NRZI format, which is commonly used with EIA/TIA-232 connections in IBM environments. (See the section “Configuring NRZI Format” in the chapter “Maintaining the Router” for configuration instructions.)

### Cyclic Redundancy Checks

All data communications interfaces use a 16-bit cyclic redundancy check (CRC) by default but also support a 32-bit CRC. CRC is an error-checking technique that uses a calculated numeric value to detect errors in transmitted data. The sender of a data frame divides the bits in the frame message by a predetermined number to calculate a remainder or *frame check sequence* (FCS). Before it sends the frame, the sender appends the FCS value to the message so that the frame contents are exactly divisible by the predetermined number. The receiver divides the frame contents by the same predetermined number that the sender used to calculate the FCS. If the result is not 0, the receiver assumes that a transmission error occurred and sends a request to the sender to resend the frame.

The designators *16* and *32* indicate the number of check digits per frame that are used to calculate the FCS. Sixteen-bit CRC, which transmits streams of 8-bit characters, generates a 16-bit FCS. Thirty-two bit CRC, which transmits streams of 16-bit characters, generates a 32-bit FCS. Because 32-bit CRC transmits longer streams at faster rates, it provides better ongoing error detection with less retransmits. Both the sender and the receiver must use the same setting.

Sixteen-bit CRC is the most widely used method throughout the United States and Europe, and it is used extensively with wide-area networks (WANs). IEEE-802 specifies 32-bit CRC, and some point-to-point transmission standards specify it as an option. It is often used on SMDS networks and LANs. (See the section “Configuring 32-Bit Cyclic Redundancy Check” in the chapter “Maintaining the Router” for configuration instructions.)

### Signal Modes and Timing

Data communications ports operate in either DCE or DTE mode; the mode depends on the source of the clock signal that the port uses, and the mode of the remote device to which the port is connected. In DCE mode, the port supplies its own clock signal.

You normally use DCE when connecting the router to a DTE device such as a PC, host, or another router. To set up a port as a DCE interface, you must use a DCE adapter cable and use the **clockrate** configuration command to set the internal clock speed.

In DTE mode, which is the most commonly used mode, the port uses a clock signal supplied by a remote or external device. You normally use DTE when connecting the router to a DCE device such as a modem or CSU/DSU. Most DTE interfaces require an external clock signal, which the remote DCE device provides. To set up a port as a DTE interface, you need only connect a DTE adapter cables. When the port recognizes the DTE cable, it automatically uses the clock signal from the remote DCE device.

Occasionally, systems with long cables may experience high error rates when operating at the higher transmission speeds. Slight variances in cable construction, temperature, and network configuration can cause the clock and data signals to shift out of phase. Inverting the clock can often correct this shift. If an FSIP port is reporting a high number of error packets, suspect a phase shift and invert the clock by the **invert-transmit-clock** command.

For brief descriptions of the **clockrate** and **invert-transmit-clock** commands, refer to the section “Configuring Timing (Clock) Signals” in the chapter “Maintaining the Router.” For complete command descriptions and instructions, refer to the related software documentation.


All serial signals are subject to distance limits, beyond which a signal degrades significantly or is completely lost. For specific cabling distance limitations, refer to the section “Distance Limitations and Interface Specifications” in this chapter. The distance and rate limits in these descriptions are the IEEE-recommended maximum speeds and distances for signaling; however, you can usually get good results at speeds and distances far greater than these. For instance, the recommended maximum rate for V.35 is 2 Mbps, but 4 Mbps is commonly used without any problems. If you understand the electrical problems that might arise and can compensate for them, you should get good results with rates and distances greater than those shown here. However, do so at your own risk.

## EIA/TIA-232 Connections

By far the most common interface standard in the U.S., EIA/TIA-232, supports unbalanced circuits at signal speeds up to 64 kbps. The router (FSIP) end of all EIA/TIA-232 adapter cables is a high-density 60-pin plug. The opposite (network) end of the adapter cable is a standard 25-pin D-shell connector (known as a DB-25) that is commonly used for EIA/TIA-232 connections.

Figure 2-36 shows the connectors at the network end of the adapter cable. The system Console and Auxiliary ports on the RSP2 also use EIA/TIA-232 connections; however, the FSIP ports support synchronous connections, and the Console and Auxiliary ports support only asynchronous connections.

**Figure 2-36 EIA/TIA-232 Adapter Cable Connectors, Network End**

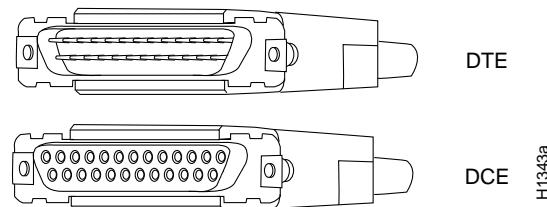


For further information on the RSP2 ports, refer to the section “Console and Auxiliary Port Connection Equipment” in this chapter. For cable pinouts, refer to the appendix “Cabling Specifications.”

### EIA/TIA-449 Connections

EIA/TIA-449, which supports balanced (EIA/TIA-422) and unbalanced (EIA/TIA-423) transmissions, is a faster (up to 2 Mbps) version of EIA/TIA-232 that provides more functions and supports transmissions over greater distances. The EIA/TIA-449 standard was intended to replace EIA/TIA-232, but it was not widely adopted. Industry's resistance to convert to EIA/TIA-449 was due primarily to the large installed base of DB-25 hardware and to the larger size of the 37-pin EIA/TIA-449 connectors, which limited the number of connections possible (fewer than possible with the smaller, 25-pin EIA/TIA-232 connector). (See

The router (FSIP) end of all EIA/TIA-449 adapter cables is a high-density 60-pin plug. The opposite (network) end of the adapter cable provides a standard 37-pin D-shell connector commonly used for EIA/TIA-449 connections. Figure 2-37 shows the connectors at the network end of the adapter cable. EIA/TIA-449 cables are available as either DTE (DB-37 plug) or DCE (DB-37 receptacle). For cable pinouts, refer to the appendix "Cabling Specifications."

**Figure 2-37 EIA/TIA-449 Adapter Cable Connectors, Network End**

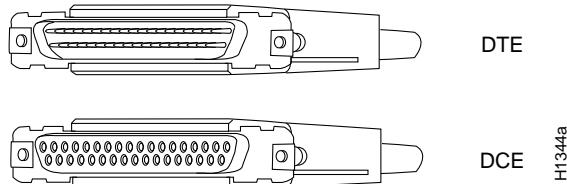


### V.35 Connections

The V.35 interface is most commonly used in the United States and throughout Europe and is recommended for speeds up to 48 kbps (although in practice it is used successfully at 4 Mbps). The router (FSIP) end of all V.35 adapter cables is a high-density 60-pin plug. The opposite (network) end of the adapter cable provides a standard 34-pin Winchester-type connector commonly used for V.35 connections.

Figure 2-38 shows the connectors at the network end of the V.35 adapter cable. V.35 cables are available with a standard V.35 plug for DTE mode (CAB-V35MT=) or a V.35 receptacle for DCE mode (CAB-V35FC=). For cable pinouts, refer to the appendix "Cabling Specifications."

**Figure 2-38 V.35 Adapter Cable Connectors, Network End**

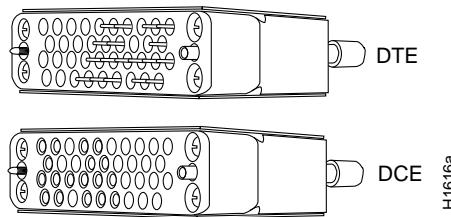

---

**Note** Also available, but not shown in Figure 2-38, are CAB-V35MC=, a V.35 cable with a plug on the network end for DCE mode, and CAB-V35FT=, a V.35 cable with a receptacle on the network end for DTE mode. These cables are used for connecting V.35-equipped systems back to back.


---

## X.21 Connections

The X.21 interface uses a 15-pin connection for balanced circuits and is commonly used in the United Kingdom to connect public data networks. X.21 relocates some of the logic functions to the DTE and DCE interfaces and, as a result, requires fewer circuits and a smaller connector than EIA/TIA-232.

The router (FSIP) end of all X.21 adapter cables is a high-density 60-pin plug. The opposite (network) end of the adapter cable is a standard DB-15 connector. Figure 2-39 shows the connectors at the network end of the X.21 adapter cable. X.21 cables are available as either DTE (DB-15 plug) or DCE (DB-15 receptacle). For cable pinouts, refer to the appendix “Cabling Specifications.”

**Figure 2-39 X.21 Adapter Cable Connectors, Network End**

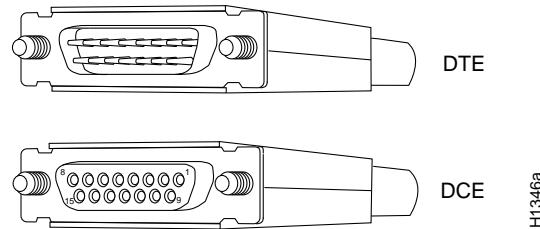


## EIA-530 Connections

EIA-530, which supports balanced transmission, provides the increased functionality, speed, and distance of EIA/TIA-449 on the smaller, DB-25 connector used for EIA/TIA-232. The EIA-530 standard was created to support the more sophisticated circuitry of EIA/TIA-449 on the masses of existing EIA/TIA-232 (DB-25) hardware instead of the larger, 37-pin connectors used for EIA/TIA-449. Like EIA/TIA-449, EIA-530 refers to the electrical specifications of EIA/TIA-422 and EIA/TIA-423. Although the specification recommends a maximum speed of 2 Mbps, EIA-530 is used successfully at 4 Mbps and at even faster speeds over short distances. EIA-530 is used primarily in the United States.

The EIA-530 adapter cable is available in DTE mode only. The router (FSIP) end of the EIA-530 adapter cable is a high-density 60-pin plug. The opposite (network) end of the adapter cable is a standard DB-25 plug commonly used for EIA/TIA-232 connections. Figure 2-40 shows the DB-25 connector at the network end of the adapter cable. For cable pinouts, refer to the appendix “Cabling Specifications.”

 **Figure 2-40 EIA-530 Adapter Cable Connector, Network End (Available in DTE Only)**




## M3 Metric Thumbscrew Replacements

A pair of metric thumbscrews is included with each port adapter cable except V.35. If you will connect serial cables to remote devices that use metric hardware, replace the standard 4-40 thumbscrews at the network end of those cables with the M3 thumbscrews. Refer to the section “Connecting to Metric-Based Devices” in the chapter “Installing the Router” for replacement instructions.

## HSSI Connection Equipment

You will need a T3, E3, or SONET STS-1 DSU and HSSI interface cable to connect the HIP with the external network. The HIP HSSI interface port is a 50-pin SCSI-II-*type* receptacle. The HSSI interface cable comprises 25 twisted pairs and a 50-pin plug at each end. Figure 2-41 shows the connector that is at both ends of the cable. Although the HSSI cable is similar to a SCSI-II cable, it is not identical; you *cannot* substitute a SCSI-II cable for a HSSI interface cable. (See the following Caution.)

**Figure 2-41 HSSI Interface Cable Connector**

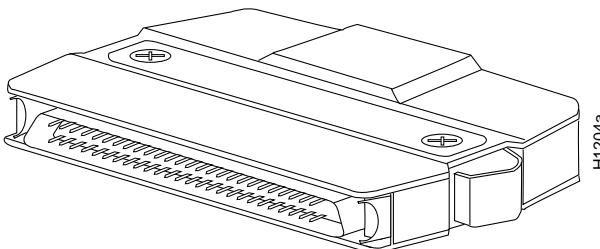

**Caution** Although the HIP connector and the HSSI interface cable are similar to SCSI-II format, the HSSI cable specification is more stringent than that for a SCSI-II. We cannot guarantee proper operation if a SCSI-II cable is used instead of an HSSI interface cable.

A null modem cable (CAB-HNUL) allows you to connect two routers directly back to back between an available HSSI port on each. This setup allows you to verify the operation of the HSSI port or to directly link the routers in order to build a larger node. The null modem cable uses the same 50-pin connectors as the HSSI interface cable, but the signals are wired differently. For instructions for connecting a null modem cable, refer to the section “HSSI Connections” in the chapter “Installing the Router.” For the cable pinouts, refer to the appendix “Cabling Specifications.”

## Console and Auxiliary Port Connection Equipment

The RSP2 contains two EIA/TIA-232 ports: a DCE-mode console port (DB-25 receptacle) and a DTE-mode auxiliary port (DB-25 plug). These are asynchronous ports (unlike the synchronous FSIP serial ports), so be sure that any devices you connect to these ports are asynchronous. Asynchronous transmission uses control bits to indicate the beginning and end of characters instead of a precise clock signal. Synchronous transmission uses precise timing to synchronize transmissions between the transmitter and receiver, and maintains separate clock and data signals.

You will need a console terminal to configure the interfaces and bring up the system. You also need an EIA/TIA-232 DCE console cable to connect the terminal to the console port on the RSP2. After you establish normal operation, you can disconnect the terminal. Both ends of the console cable should be EIA/TIA-232 plugs to enable you to connect to the RSP2 DCE console port DB-25 receptacle and to the DB-25 receptacles used on the DTE ports on most terminals. Before you connect a terminal to the console port, configure the terminal to match the router console port as follows: 9600 baud, 8 data bits, no parity, and 2 stop bits (9600 8N2).

The auxiliary port is a DTE DB-25 plug that you can use to connect an asynchronous modem, another router, a CSU/DSU, or other DCE equipment. You also must supply your own interface cable between the auxiliary port and the equipment you are connecting. For console and auxiliary port pinouts, refer to the appendix “Cabling Specifications.”

## Tools for Installation

The chassis is fully assembled at the factory; no assembly is required except to install power supplies and attach the cable-management bracket. Following are the tools and equipment you will need:

- Number 1 Phillips and 3/16-inch flat-blade screwdrivers to tighten the captive installation screws on the interface processors (most interface processor carriers use slotted screws, but some use Phillips-head screws).
- If you are installing the chassis in a rack, you will also need the following tools:
  - Number 2 Phillips screwdriver
  - 1/4-inch flat-blade screwdriver
  - Tape measure
  - Level (if needed)
- If you will connect FSIP EIA/TIA-232, EIA/TIA-449, X.21, or EIA-530 serial interface cables to a connection device that uses metric hardware, you will need a 1/4-inch flat-blade screwdriver to replace the standard thumbscrews with M-3 metric thumbscrews.
- If your Ethernet interface cables use thumbscrews instead of the slide-type locks used on EIP ports, you will need a 3/16-inch flat-blade screwdriver to replace the slide locks with jackscrews.

To perform maintenance on chassis components, or to replace FRUs, you need the following tools:

- 3/16-inch flat-blade screwdriver for the captive slotted screws on the chassis cover panel
- Number 1 Phillips screwdriver for the power harness cover and backplane cover (you must remove the backplane cover to remove or replace the power supply or the arbiter) and the captive installation screws on the interface processors
- Number 2 Phillips screwdriver for the power supply, blower module, and card cage assembly
- Antistatic mat or antistatic foam pad if you will remove interface processors or replace components on the board
- Your own ESD grounding strap or the disposable ESD strap included with the system

## Initial Configuration Information

After you install the chassis and verify that all the hardware is operating properly, you must configure the system and individual interfaces before you can connect to external networks. You can use the **setup** command facility or standard configuration commands to enter the configuration information.

Before you begin, you should be prepared with global (system-wide) parameters such as host names, passwords, and routing protocols, and with configuration information for each interface such as addresses, rates or speeds of operation, routing protocol specifics, and so on.

Following is some of the information you are likely to need, depending upon your configuration:

- Host name for the router.
- Passwords to prevent unauthorized privileged-level access to the EXEC command interpreter and for individual virtual terminal lines.
- Protocols you plan to route.
- Bridging configuration (whether you will use bridging and, if so, on which interfaces).
- Internet Protocol (IP) addresses and subnet masks if you are routing IP.

- Zone names, network numbers, or node numbers for the new interfaces if required.
- Operating speeds for specific interfaces; for example, Token Ring interfaces operate at either 4 or 16 Mbps, and serial interfaces operate at speeds of up to 2 Mbps. The speed of an interface often depends on the speed of the remote device to which it is attached.

For complete configuration instructions, refer to the *Router Products Configuration Guide*, which is available on UniverCD or in print.

## Router Installation Checklist

Use the Router Installation Checklist in Table 2-15 to assist you with your installation and to provide a historical record of what was done, by whom, and when. Make a copy of this checklist and indicate when each procedure or verification is completed. When the checklist is completed, place it in your site log (described at the end of this chapter) along with the other records for your new router.

**Table 2-15 Router Installation Checklist**

Task	Verified by	Date
Date router received		
Router and all accessories unpacked		
Types and numbers of interfaces verified		
Safety recommendations and guidelines reviewed		
Router Installation Checklist copied		
Site log established and background information entered		
Site power voltages verified		
Site environmental specifications verified		
Required passwords, IP addresses, device names, and so on, available <sup>1</sup>		
Required tools available		
Network connection equipment available		
Cable management brackets installed (optional but recommended)		
Router mounted in rack (optional)		
AC power cable(s) connected to AC source(s) and router; retention band(s) secured		
DC power cable(s) connected to DC source(s) and router; strain relief secured		
Captive installation screws on processor modules and power supplies checked		
Port and Slot Configuration Worksheet completed (optional)		
Network interface cables and devices connected		
ASCII terminal attached to console port		
Console port set for 9600 baud, 8 data bits, no parity, and 2 stop bits (9600 8N2)		
System power turned on (DC OK indicator(s) is on)		
System boot complete (RSP2 normal LED is on)		
RSP2 and all interface processors operational (enabled LEDs are on)		
Console screen displays correct hardware configuration (displayed after system banner)		
System ready for global and interface-specific configuration		

1. Refer to the related software documentation for first-time software configuration requirements.

# Unpacking the System

Unpacking instructions are provided in the *Unpacking Instructions* posted on the outside of the shipping container; you should have already read that document and followed the procedures.

---

**Note** Do not discard the shipping container. You will need these containers if you need to move or ship the router in the future.

---

Proceed to the section “Checking the Contents” to verify the contents.

## Checking the Contents

Following is the procedure for checking the contents of the shipping container. Use the Router Installation Checklist in Table 2-15, the Component List in Table 2-16, and the record of your order to ensure that you received all the components you ordered.

**Step 1** Verify that the following are included in the shipping container (the accessories box may be separate):

- One Cisco 7513 router, fully assembled (except power supplies and cable-management bracket)
- One or more accessories boxes (some or all may be shipped separately)

**Step 2** Check the contents of the accessories box against the Installation Checklist and the packing slip and verify that you received all listed equipment, which should include the following:

- One modular power cable (included) for each AC-input power supply
- One three-lead, 6-AWG power cable (that you provide) for each DC-input power supply
- Two nylon cable ties (that you provide) for strain relief for each DC-input power supply cable
- One rack-mount kit
- One cable management kit (cable management bracket and mounting fasteners)
- One serial port adapter cable for each FSIP port, if your system has serial interfaces, and metric thumbscrews for each interface except V.35 for conversion if necessary
- One jackscrew conversion kit for each EIP and FEIP (MII) port, if your system has Ethernet or Fast Ethernet interfaces
- One optical bypass cable for each FIP (if your system has FDDI interfaces)
- Optional equipment that you ordered, such as network interface cables, transceivers, or special connectors.
- Router hardware and software documentation, if ordered (see the following Note)

---

**Note** We no longer ship the entire router documentation set automatically with each system. You must specifically order the documentation as part of the sales order. If you ordered documentation and did not receive it, we will ship the documents to you within 24 hours. To order documents, contact a customer service representative.

---

**Step 3** Check the processor slots and verify that slot 6 or 7 contains an RSP2. (See Figure 2-42.)

**Step 4** Verify that the other slots (interface processor slots) each contain an interface processor or a blank interface processor filler, and that the remaining RSP slot contains an RSP filler. Verify that the configuration matches the packing list and that the interface processors are the correct interface types with the correct number of ports.

**Step 5** *This step is optional*—Complete the Port and Slot Configuration Worksheet shown in Table 2-18. Check the interface processors in the rear of the chassis and record the interface type for each populated interface address. You may need to refer to this worksheet during installation.

**Step 6** Proceed to the section “Site Log” in this chapter, then to the chapter “Installing the Router” to begin installation.

## System Components

Table 2-16 lists all of the standard components that are included with the router and the optional equipment available. Check each item on the Component List as you unpack and verify it. Insert the completed checklist into the site log (which is described in the following sections).

**Table 2-16 Component List**

Component	Description	Rec'd
Chassis	Cisco 7513 router chassis	
Accessories	The following accessories may arrive in separate shipping containers:	
Rack-mount kit	Rack-mount kit hardware described in documentation for EFT-RMK and ACS-7513-RMK	
Cable management kit	One bracket	
Power cable	One AC cable per power supply (you supply DC cables)	
EIP and FEIP port jackscrews	One jackscrew conversion kit for each Ethernet and Fast Ethernet port	
FSIP interface cables	Verify that you receive 1 of the following adapter cables for each FSIP port:	
	EIA/TIA-232 DTE or DCE serial port adapter cable, 1 per port required	
	EIA/TIA-449 DTE or DCE serial port adapter cable, 1 per port required	
	V.35 DTE or DCE serial port adapter cable, 1 per port required	
	X.21 DTE or DCE serial port adapter cable, 1 per port required	
	EIA-530 DTE serial port adapter cable, 1 per port required	
	One pair of M-30 metric thumbscrews with each cable type except V.35	
Optional cables	AUI or Ethernet transceiver cable, 1 per EIP port required; RJ-45 or MII cable for each FEIP 100BASE-T port	
	Token Ring interface cable, 1 per TRIP port required	
	FDDI interface cables, 1 or 2 multimode, 2 or 4 single-mode for each FIP; optical bypass switch for each CX-FIP-MM and CX-FIP-SS	
	HSSI interface cable, 1 per port required	
	Null modem cable for back-to-back HSSI connections	
	MIP cables, 1 per port required	
	AIP cables and types, 1 per AIP port required	
Optional equipment	Ethernet and Fast Ethernet transceiver or 802.3 attachment unit	
	MAU, CSU/DSU for network connections	
Documentation <sup>1</sup>	Router hardware and software document set or UniverCD if ordered	
System components:	Processor slots should contain an RSP2 and some combination of interface processors or blank interface processor fillers	
RSP2	Installed in either of the RSP2 slots (slot 6 or 7)	
AIPs	Enter slot locations and port addresses on Configuration Worksheet	
CIPs	Enter slot locations and port addresses on Configuration Worksheet	
EIPs	Enter slot locations and port addresses on Configuration Worksheet	
FEIPs	Enter slot locations and port addresses on Configuration Worksheet	
FIPs	Enter slot locations and port addresses on Configuration Worksheet	
FSIPs	Enter slot locations and port addresses on Configuration Worksheet	
HIPs	Enter slot locations and port addresses on Configuration Worksheet	
MIPs	Enter slot locations and port addresses on Configuration Worksheet	
TRIPs	Enter slot locations and port addresses on Configuration Worksheet	

1. Titles and quantities of documents will vary; documentation no longer ships with every system by default. You must specify the type and quantity of documentation sets when you order the hardware. (See the Note in the section "Checking the Contents" in this chapter.)

## Site Log

A site log provides a historical record of all actions relevant to the router operation and maintenance. Keep your site log in a common place near the chassis where anyone who performs tasks has access to it. Site log entries might include the following:


- Installation progress—Make a copy of the Router Installation Checklist and insert it into the site log. Make entries on the Installation Checklist as each procedure is completed.
- Upgrades and removal/replacement procedures—Use the site log as a record of system maintenance and expansion history. Each time a procedure is performed on the system, update the site log to reflect the following:
  - Interface processors installed, removed, or replaced.
  - Power supply removed or replaced.
  - Configuration changed; moving interface processors or moving network interface cables between ports.
  - Software or microcode (firmware) upgraded.

Insert any documentation that accompanies upgrades, spares, or new components, such as installation procedures, in the site log when you complete the procedure.

- Corrective maintenance procedures performed.
- Intermittent problems.
- Related comments.

Table 2-17 shows a sample site log page. Make copies of the sample or design your own site log to meet the needs of your site and equipment.

**Table 2-17 Site Log Example**

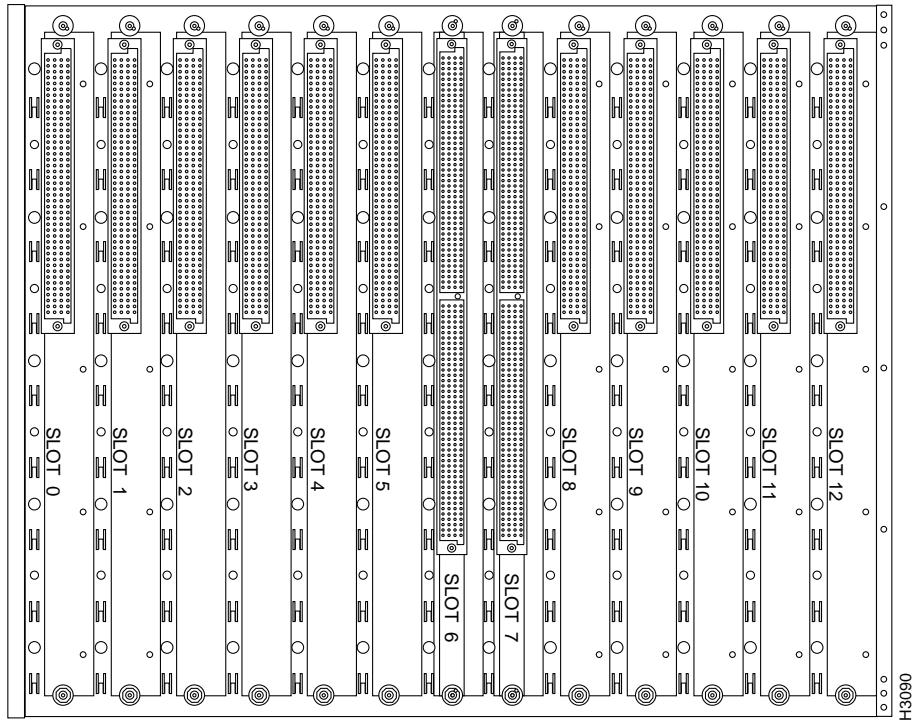**Figure 2-42 Cisco 7513 Interface Processor Slot Numbering—Use with Table 2-18****Table 2-18 Port and Slot Configuration Worksheet—Refer to Figure 2-42**

Port	Slot 0	Slot 1	Slot 2	Slot 3	Slot 4	Slot 5 <sup>1</sup>	Slot 8	Slot 9	Slot 10	Slot 11	Slot 12
1											
2											
3											
4											
5											
6											
7											
8											
Router Name		Location				Serial Number					

1. Slots 6 and 7 are reserved for the RSP2.