



Doc. No. 78-0877-05

Installing and Upgrading the CSC-CCTL2 ciscoBus II Controller Card

Product Numbers: CSC-CCTL2=, CSC-CCTL2U, MC-CCTL2-V11.0,
MC-CCTL2-V11.1=, MC-CCTL2-V11.2=

This document contains the following instructions:

- Installing the CSC-CCTL2 second-generation ciscoBus controller card in your AGS+
- Replacing a first-generation ciscoBus controller, CSC-CCTL, with a CSC-CCTL2
- Replacing the microcode (card firmware) on the CSC-CCTL2

The CSC-CCTL2 card is required for operation when C2 (second-generation ciscoBus) network interface cards are installed (CSC-C2MEC, CSC-C2HSCI, CSC-C2FCI, CSC-C2FCIT, and CSC-C2CTR).

Note The C2 designator added to the name of a ciscoBus interface card indicates that the card is running Microcode Version 10.0 or later and is, therefore, compatible with the CSC-CCTL2. CSC-CCTL2 Microcode Version 11.0 or later requires System Software Release 9.21 or later.

If you are upgrading from a first-generation ciscoBus controller (CSC-CCTL), all existing ciscoBus interface cards must also be upgraded *at the same time* to the minimum system requirements described herein. Generally, first- and second-generation ciscoBus controllers and interface cards do not interoperate. You also may need to upgrade microcode on Multibus interfaces for compatibility with System Software Release 9.1, which is the minimum software version required for CSC-CCTL2 operation.


The sections in this document include the following:

- Card Overview, page 2
- Installation Prerequisites, page 3
- Installation, page 12
- Upgrading the EPROM Component, page 16
- Cisco Information Online, page 18

Card Overview

The ciscoBus II controller card (CSC-CCTL2) provides two functions for the AGS+ router: it serves to interconnect the system bus (Multibus) with the ciscoBus for routing packets between ciscoBus and system bus interfaces, and it performs packet-switching functions on the ciscoBus using its onboard processor and 512 kilobytes of dedicated packet memory. The CSC-CCTL2 uses bit-slice processing to provide high-speed autonomous switching of data packets on the ciscoBus without having to access the system processor across the Multibus. The operating microcode resides on an EPROM in socket U6. (See Figure 1.) You replace this single EPROM to upgrade the CCTL2 microcode.

Figure 1 CSC-CCTL2 ciscoBus II Controller Card—Component-Side View

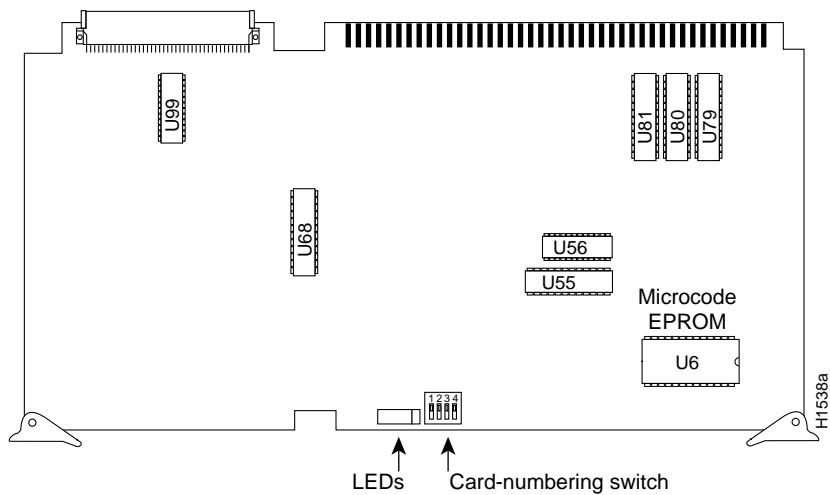

The LEDs on the CCTL2 card indicate when an interface is present in a ciscoBus slot. The front edge of the CCTL2 card contains a bank of five LEDs as shown in Figure 2: one red LED for each slot in the ciscoBus and one green OK LED to indicate a successful boot procedure. One red LED will be on for each correctly connected ciscoBus card using the correct version of microcode. The green OK LED will not be on if the card is incorrectly connected or if the microcode on that ciscoBus card is the wrong version. Figure 2 shows the LEDs on the CCTL2 card. The numbers above the LEDs (0 through 3 from right to left) indicate the ciscoBus slot number assigned to that LED.

Figure 2 CSC-CCTL2—Partial Front-Edge View

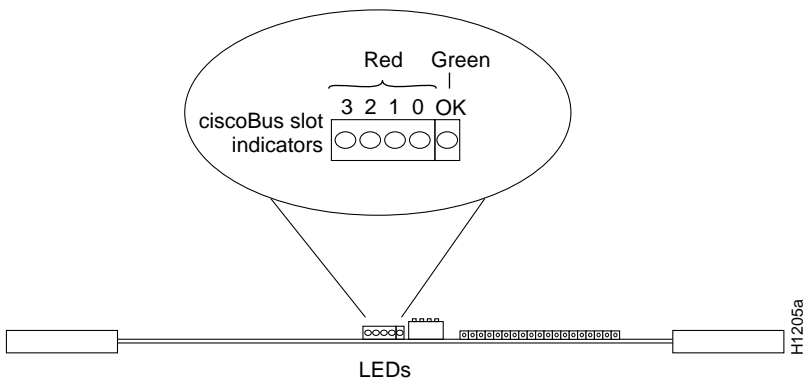
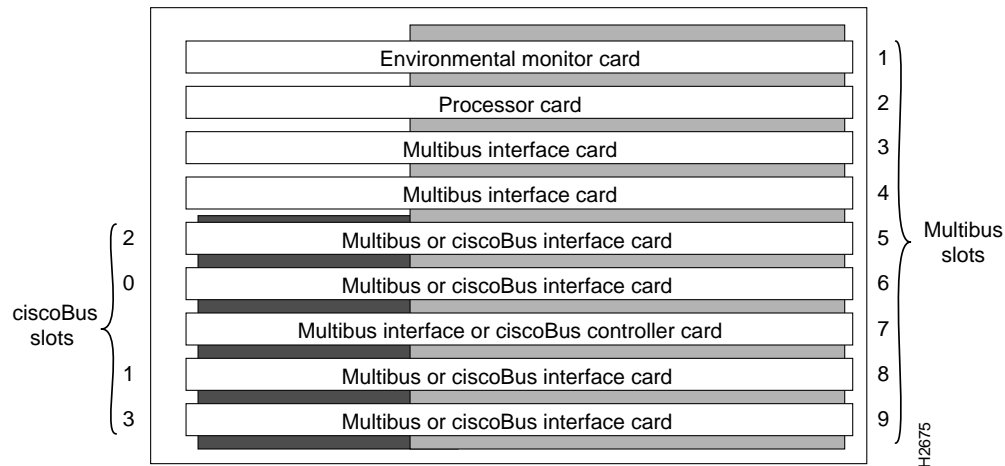


Figure 3 System Card Cage

The CSC-CCTL2 card is required for operation when C2 (second-generation ciscoBus) network interface cards are installed (CSC-C2MEC, CSC-C2HSCI, CSC-C2FCI, CSC-C2FCIT, and CSC-C2CTR). These cards are described in the section “ciscoBus Configuration” on page 5.

Installation Prerequisites

Before installing the CSC-CCTL2, ensure that your existing system components meet the compatibility requirements and that you have the necessary parts and tools you will need to perform the installation without interruption. If you are upgrading a CSC-CCTL to a CSC-CCTL2, ensure that you have all the necessary microcode upgrades for existing cards.

System Requirements

The router system must meet the following requirements:

- Your router is an AGS+ model with a CSC/3 or CSC/4 processor card.
- The system software is Release 9.1 or later for Microcode Version 10.0 or later.
- CSC-CCTL2 Microcode Version 11.0 or later requires System Software Release 9.21 or later.
- The total power drawn by the system will not exceed the maximum power budget after the new card is installed. (See the section “Chassis Power Budget” on page 10.)
- All ciscoBus interface cards are running Microcode Version 10.0 or later. You can upgrade any first-generation ciscoBus interface card except a hardware Revision 5.0 CSC-MEC to a CSC-CCTL2-compatible card by replacing the microcode on the card. (Refer to the section “ciscoBus Configuration” on page 5.)

The hardware Revision 5.0 CSC-MEC card must be replaced with the hardware Revision 5.1 CSC-MEC card running Microcode Version 10.0 or later.

- All Multibus interface cards are running the minimum microcode versions required for system software-release compatibility.

You can display the type of processor card (CSC/3 or CSC/4) installed and the current software version with the EXEC command **show version**. The current system software version is displayed in the first line of the output, and the processor card information is displayed on the twelfth line, followed by a list of the installed interface cards. A sample of the display, which shows a system running System Software Release 9.1(1), follows:

```
router# show version
GS Software (GS3), Version 9.1(1)
Copyright (c) 1986-1992 by cisco Systems, Inc.
Compiled Wed 29-Jul-92 17:02

System Bootstrap, Version 4.5(0.5)

router uptime is 22 days, 12 hours, 23 minutes
System restarted by power-on
System image file is "router-system", booted via tftp from 131.108.1.111

CSC4 (68040) processor with 16384K bytes of memory.
X.25 software.
Bridging software.
1 MCI controller (2 Ethernet, 0 Serial).
1 cBus controller.
1 MEC controller (6 Ethernet).
Environmental Controller.
(text omitted)
```

You can display a description of the current ciscoBus controller and ciscoBus interface cards with the EXEC command **show controller cbus**. The ciscoBus controller type is displayed, followed by the descriptions of each ciscoBus interface card, the ciscoBus slot in which it is installed, the controller type, and the microcode version of each.

The following example of the **show controller cbus** display shows a first-generation ciscoBus controller (CSC-CCTL), which is a controller type 3.0. The microcode on each card is compatible with the first-generation ciscoBus controller, CSC-CCTL, since each version is earlier than 10.0.

```
router# show cont cbus

cBus 1, controller type 3.0, microcode version 2.0
  128 Kbytes of main memory, 32 Kbytes cache memory
  (text omitted)
FDDI 0, controller type 4.1, microcode version 2.0
  Interface 0 - Fddi0, station address 0000.0c01.7bbd (bia 0000.0c01.7bbd)
  (text omitted)
HSCI 1, controller type 10.0, microcode version 1.0
  Interface 6 - Hssi0, electrical interface is Hssi DTE
MEC 3, controller type 5.1, microcode version 2.4
  Interface 18 - Ethernet2, station address 0000.0c02.a03c
  (text omitted)
```

The next example of the **show controller cbus** display shows a second-generation ciscoBus controller (CSC-CCTL2), which is a controller type 6.0. The microcode on each interface shown in the display is compatible with the second-generation ciscoBus controller, CSC-CCTL2, since each version is than 10.0 or later. (Version 10.0 or later is compatible.)

```
router# show cont cbus

cBus 1, controller type 6.0, microcode version 10.0
  512 Kbytes of main memory, 128 Kbytes cache memory
  (text omitted)
FDDI-T 0, controller type 7.1, microcode version 10.1
  Interface 0 - Fddi0, station address 0000.0c02.6aa3 (bia
(text omitted)
CTR 1, controller type 9.0, microcode version 10.1
  Interface 1 - TokenRing0, station address 0000.3040.e004 (bia
(text omitted)
HSCI 2, controller type 10.0, microcode version 10.1
  Interface 8 - Hssi0, electrical interface is Hssi DTE
  (text omitted)
MEC 3, controller type 5.1, microcode version 10.1
  Interface 10 - Ethernet2, station address 0000.0c02.61b7
(text omitted)
```

Note CSC-CCTL2 Microcode Version 11.0 or later requires System Software Release 9.21 or later.

For descriptions of fields and additional commands, refer to the router products configuration publication.

The *Microcode Release Note* publication (Document Number 78-1069-*nn*) provides the latest information on both the *recommended* and *minimum required* microcode versions for using all cards with System Software Release 8.2 through 9.1. If the latest version implements features that you are not using in your system, and you already have the minimum required version installed, there is no requirement to update the microcode. However, new microcode versions occasionally fix bugs and provide performance enhancements in addition to implementing new features. You will obtain maximum performance and reliability by upgrading to the recommended version. Refer to the latest *Microcode Release Note* for current microcode requirements and recommendations, and for a microcode revision history for each card, which describes the new features, fixed bugs, and compatibility requirements for each revision.

Note If your system does not meet these requirements, contact a customer service representative for upgrade information.

ciscoBus Configuration

Before installing the CSC-CCTL2, ensure that all ciscoBus interface cards are the C2 series (meaning all have Microcode Version 10.0 or later installed), that any new ciscoBus cards you are installing will not exceed the maximum port limits for ciscoBus interfaces, and that the cards will be placed in the correct order of priority in the ciscoBus slots. The following sections describe how to determine all of these requirements.

ciscoBus Controller Compatibility

All ciscoBus interface cards, which are listed in Table 1, contain card-specific microcode that determines whether each card is compatible with the first- or second-generation ciscoBus controller. General compatibility guidelines are as follows:

- ciscoBus cards with microcode versions earlier than 10.0 are compatible only with the first-generation ciscoBus controller (CSC-CCTL, controller type 3.0).
- ciscoBus cards with Microcode Version 10.0 or later are compatible only with the second-generation ciscoBus controller (CSC-CCTL2, controller type 6.0).
- The CSC-C2CTR and CSC-C2FCIT cards are compatible only with the CSC-CCTL2 card. The initial release of both cards contained Microcode Version 10.0.

The C2 designator added to the name of a ciscoBus interface card indicates that the card is running Microcode Version 10.0 or later and is, therefore, compatible with the CSC-CCTL2. With the exception of a Revision 5.0 CSC-MEC card (see “Note” following), the first- and second-generation ciscoBus interface cards are otherwise the same. For example, you can upgrade a Revision 5.1 CSC-MEC to a CSC-C2MEC by replacing the microcode with Version 10.0 or later. When you upgrade the microcode on the CSC-MEC card to Version 10.0, the name of the card also changes from *CSC-MEC* to *CSC-C2MEC* to indicate that it is CCTL2-compatible. When you replace a CSC-CCTL ciscoBus controller with a CSC-CCTL2 ciscoBus controller, you must upgrade the microcode on all ciscoBus interface cards to Microcode Version 10.0 or later.

Note Only a Revision 5.1 or later CSC-MEC can be upgraded to a CSC-C2MEC.

Table 1 CSC-CCTL2 Interface Card Compatibility Requirements

| CCTL Controller | CCTL2 Controller | Description |
|-----------------|------------------------|---|
| CSC-CCTL | CSC-CCTL2 | ciscoBus controller |
| CSC-FCI | CSC-C2FCI | Fiber Distributed Data Interface (FDDI) |
| – | CSC-C2FCIT | FDDI with translational bridging |
| CSC-HSCI | CSC-C2HSCI | High-Speed Serial Interface (HSSI) |
| – | CSC-C2CTR | ciscoBus Token Ring interface, 4/16Mbps |
| CSC-MEC | CSC-C2MEC ¹ | Multiport Ethernet Controller |

1. Only CSC-MEC card Revision 5.1 or later is compatible with the CSC-CCTL2.

You can display a description of the current ciscoBus controller and ciscoBus interface cards with the EXEC command **show controller cbus** as described on page 4.

Slot Priority

The system card cage, shown in Figure 3, has nine slots, five of which are designated ciscoBus slots. The center ciscoBus slot is reserved for the ciscoBus controller card, leaving four ciscoBus slots available for ciscoBus interface cards.

The system uses a slot priority scheme that assigns a priority to each ciscoBus card according to the ciscoBus slot in which the card resides. The card in ciscoBus slot 0 receives the highest ciscoBus priority, while the card in ciscoBus slot 3 receives the lowest ciscoBus priority.

Slot priorities are set to accommodate the amount of traffic generated by each interface card and the amount of card buffering required. Each ciscoBus interface card is placed in a specific slot with regard to other ciscoBus interface cards, if any. The order of priority is the same for both first- and second-generation ciscoBus controllers, except that the cards with the C2 designation can only be used with the CSC-CCTL2.

Following is a list of ciscoBus interface cards in order of priority, from highest to lowest:

- 1 CSC-MEC and C2MEC (10 Mbps)
- 2 CSC-C2CTR (16 Mbps)
- 3 CSC-HSCI and C2HSCI with an APP-LHS applique (HSSI interface) (45 through 52 Mbps)
- 4 CSC-FCI and C2FCI (100 Mbps)
- 5 CSC-C2FCIT (100 Mbps)
- 6 CSC-HSCI and C2HSCI with an APP-ULA applique (UltraNet interface) (125 Mbps)

Install CSC-MEC or C2MEC cards in the lowest-numbered slots, beginning with slot 0 (which has the highest priority), followed by CSC-C2CTR cards. After all CSC-MEC and CSC-C2CTR cards are installed, install CSC-HSCI and C2HSCI cards with the APP-LHS applique in the lowest-numbered available slots. Follow with the CSC-FCI and C2FCI cards. Next, install CSC-C2FCIT cards. Last, install the CSC-HSCI and C2HSCI cards with the APP-ULA (UltraNet) applique. Always install cards in the lowest-numbered available slot. For example, if using only CSC-C2HSCI cards (with APP-ULA), place the first in slot 0, the second in slot 1, and so forth.

ciscoBus Port Limitations

The amount of processing some cards require, and the available chassis space for the larger appliques, can limit the maximum number and types of ports you can install in a single chassis. The maximum numbers of ciscoBus interface port combinations are shown in Table 2. Exceeding these limits may degrade performance on any or all installed ciscoBus interfaces and is not recommended.

Table 2 Maximum Port and Card Configurations for ciscoBus Interface Cards

| (C2)MEC Ports (Cards) | | C2FCIT/(C2)F CI Ports (Cards) | | (C2)HSSI Ports (Cards) | | C2CTR Ports (Cards) | |
|-----------------------------|-----|--|-----|------------------------------|-----|---------------------------|-----|
| 24 | (4) | 0 | (0) | 0 | (0) | 0 | (0) |
| 18 | (3) | 1 | (1) | 0 | (0) | 0 | (0) |
| 18 | (3) | 0 | (0) | 1 | (1) | 0 | (0) |
| 18 | (3) | 0 | (0) | 0 | (0) | 4 | (1) |
| 12 | (2) | 2 | (2) | 0 | (0) | 0 | (0) |
| 12 | (2) | 1 | (1) | 1 | (1) | 0 | (0) |
| 12 | (2) | 1 | (1) | 0 | (0) | 4 | (1) |
| 12 | (2) | 0 | (0) | 2 | (2) | 0 | (0) |
| 12 | (2) | 0 | (0) | 1 | (1) | 4 | (1) |
| 12 | (2) | 0 | (0) | 0 | (0) | 8 | (2) |
| 6 | (1) | 1 | (1) | 0 | (0) | 6 | (2) |
| 6 | (1) | 0 | (0) | 1 | (1) | 6 | (2) |

| (C2)MEC Ports (Cards) | | C2FCIT/(C2)F CI Ports (Cards) | | (C2)HSSI Ports (Cards) | | C2CTR Ports (Cards) | |
|-----------------------------|-----|--|-----|------------------------------|-----|---------------------------|-----|
| 6 | (1) | 3 | (3) | 0 | (0) | 0 | (0) |
| 6 | (1) | 0 | (0) | 3 | (3) | 0 | (0) |
| 6 | (1) | 2 | (2) | 1 | (1) | 0 | (0) |
| 6 | (1) | 2 | (2) | 0 | (0) | 4 | (1) |
| 6 | (1) | 0 | (0) | 2 | (2) | 4 | (1) |
| 6 | (1) | 1 | (1) | 1 | (1) | 4 | (1) |
| 6 | (1) | 1 | (1) | 2 | (2) | 0 | (0) |
| 0 | (0) | 3 | (3) | 0 | (0) | 2 | (1) |
| 0 | (0) | 2 | (2) | 1 | (1) | 2 | (1) |
| 0 | (0) | 1 | (1) | 2 | (2) | 2 | (1) |
| 0 | (0) | 0 | (0) | 3 | (3) | 2 | (1) |
| 0 | (0) | 4 | (4) | 0 | (0) | 0 | (0) |
| 0 | (0) | 3 | (3) | 1 | (1) | 0 | (0) |
| 0 | (0) | 2 | (2) | 2 | (2) | 0 | (0) |
| 0 | (0) | 1 | (1) | 3 | (3) | 0 | (0) |
| 0 | (0) | 0 | (0) | 4 | (4) | 0 | (0) |

Card and Interface Numbering

The router uses a *card numbering* scheme to identify cards in the chassis, and an *interface addressing* scheme to identify the ports (interfaces) on each card. Each Multibus interface card and the ciscoBus controller card (CSC-CCTL2) have a unique card number, which you set with switch S1 on each card. The system processor uses the card numbers to assign interface addresses to the ports on each card and to control traffic across the Multibus. Because the CSC-CCTL2 controls the traffic between the Multibus and all ciscoBus cards, only the ciscoBus controller card needs a card number. The card number of the CSC-CCTL2 is always 0, which is the factory default; no Multibus cards can be set for card number 0. The location of the card-numbering switch is shown in Figure 1.

Table 3 lists the card-number switch setting (S1) for the CSC-CCTL2 ciscoBus controller card. Ensure that your CSC-CCTL2 card is set for card number 0. No Multibus interface cards can be numbered as *Card 0* with a CSC-CCTL card in the system. The *Card 0* designation is reserved for the CSC-CCTL2 card by default.

Table 3 CSC-CCTL2 Switch Settings for Card Numbering

| Card No. | S1-1 | S1-2 | S1-3 | S1-4 |
|----------|------|------|------|------|
| 0 | Off | Off | Off | Off |

At startup, the system polls each Multibus interface card, beginning with the lowest card number, and assigns a sequential interface address to each port (interface) on each card. When all Multibus interfaces are assigned, the system proceeds to the ciscoBus and continues the interface address sequence as it polls the ciscoBus cards according to the ciscoBus slot priority. (Refer to the section “Slot Priority” on page 6.)

These numbering schemes allow the system to distinguish each interface card while sequentially numbering like interfaces (such as Ethernet interfaces on CSC-MCIs and CSC-MECs). Table 4 is an example of how the system assigns Ethernet interface addresses in a chassis with one CSC-MCI 2E2T (two Ethernet/two serial) card and two CSC-MEC6 (six Ethernet ports each) cards. The CSC-MCI is a Multibus card, and the CSC-MEC is a ciscoBus card; therefore, the CSC-MCI interface addresses are assigned first.

Table 4 Multibus and ciscoBus Interface Addressing Example

| Card | Port on Card | Interface Address Assigned |
|----------------|---------------------|-----------------------------------|
| CSC-MCI | Port 0 | Ethernet 0 |
| | Port 1 | Ethernet 1 |
| First CSC-MEC | Port 0 | Ethernet 2 |
| | Port 1 | Ethernet 3 |
| | Port 2 | Ethernet 4 |
| | Port 3 | Ethernet 5 |
| | Port 4 | Ethernet 6 |
| | Port 5 | Ethernet 7 |
| Second CSC-MEC | Port 0 | Ethernet 8 |
| | Port 1 | Ethernet 9 |
| | Port 2 | Ethernet 10 |
| | Port 3 | Ethernet 11 |
| | Port 4 | Ethernet 12 |
| | Port 5 | Ethernet 13 |

Chassis Limitations

The CSC-CCTL2 can be installed in any router that meets the criteria described in the section “System Requirements” on page 3. Only one ciscoBus controller card can be installed in a chassis, and it always resides in the center ciscoBus slot (slot 7 of the card cage, shown in Figure 3).

Chassis Power Budget

The chassis has a total power budget of 300 watts (W). The total power dissipation of the individual interface and processor cards must not exceed 300W. In chassis shipped before October 1, 1991, the total power cannot exceed 260W. (These chassis used a 5 amp (A) circuit breaker, rather than the 7.5A breaker used in the current chassis.) Following is a sample calculation for adding two CSC-MEC6 cards (all values in watts).

| | |
|-------------------------------------|--|
| One CSC-ENVM card | $1 \times 10 = 10$ |
| One CSC/4 processor card | $1 \times 35 = 35$ |
| One CSC-CCTL2 card | $1 \times 29 = 29$ |
| One CSC-FCI card | $1 \times 50 = 50$ |
| One CSC-MCI 2E card | $1 \times 28 = 28$ |
| 14 Ethernet transceivers | $14 \times 4 = 56$ (12 additional for the new MEC cards) |
| Power requirement of present system | 208 |
| Available power budget | $300 - 208 = 98$ |
| Add two CSC-MEC cards | $2 \times 22 = 44$ |
| New cards within power budget | $44 < 98$ (New CSC-MEC cards can be installed.) |

Table 5 Power Requirements for Individual Components

| Card/Applique Assemblies | Power Requirement (in Watts) |
|----------------------------|------------------------------|
| CSC/4 | 35 |
| CSC/3 | 31 |
| CSC-ENVM | 10 |
| CSC-MC+ | 3 |
| CSC-MCI ¹ | 28 |
| CSC-SCI | 20 |
| CSC-R16M | 34 |
| CSC-1R and -2R | 30 |
| CSC-CCTL2 | 34 |
| CSC-C2FCIT with applique | 36 |
| CSC-CSFCI with applique | 50 |
| CSC-C2MECx ² | 22 |
| CSC-CSHSCI | 48 |
| CSC-C2CTR-2 with applique | 30 |
| CSC-C2CTR-4 with appliques | 42 |
| CSC-CCTL | 29 |

| Card/Applique Assemblies | Power Requirement (in Watts) |
|--------------------------|------------------------------|
| CSC-FCI with applique | 50 |
| CSC-MECx ² | 22 |
| CSC-HSCI with applique | 48 |

1. Up to a maximum of 2 transceivers is required. Each transceiver dissipates 4W (8W total).
2. Up to a maximum of 6 transceivers is required. Each transceiver dissipates 4W (24W total).

Setup Command Facility

When new hardware components are installed, the system automatically invokes the **setup** command facility the first time the system is started. You must use **setup** to configure new interfaces, or you can exit **setup** and configure new interfaces with the **configure EXEC** command. If you are adding new interfaces at the same time you are installing the CSC-CCTL2, be prepared with the information you will need to configure each new interface, such as the protocols you plan to route, IP addresses and subnet masks, and whether or not you will use bridging. For step-by-step instructions for using the **setup** command facility and configuring the interfaces, refer to the *Router Products Getting Started Guide*.

Required Parts and Tools

To access the card cage and install your CSC-CCTL2 card, you need only remove the front access panel on the router. If you are removing the panel for the first time, you will need a large flat-blade screwdriver to loosen the thumbscrews, which are torqued before shipping the first time.

If you are upgrading from a CSC-CCTL first-generation ciscoBus controller, you will need a microcode upgrade kit for each ciscoBus interface card currently installed in your router. If you do not have an upgrade kit for one or more cards, contact a service representative for assistance.

Preventing Electrostatic Discharge Damage

Electrostatic discharge (ESD) is a discharge of stored static electricity that can damage equipment and impair electrical circuitry. It occurs when electronic components are improperly handled and can result in complete or intermittent failures.

Following are guidelines for preventing ESD damage:

- Before you open a chassis, ensure that power to the unit is turned OFF, but that the power cord is connected to the wall receptacle. Having the power cord connected will ensure a ground path for any ESD voltages.
- Always use an ESD wrist strap or ankle strap and ensure that it makes good skin contact.
- Connect the equipment end of the strap to an unpainted surface of the chassis frame or another proper grounding point or surface. We recommend that you attach it to the inside bottom of the chassis, or to the rear panel (inside or outside), without making contact with any connectors or appliques.
- Avoid contact between equipment and clothing. The wrist strap only protects the equipment from ESD voltages on the body; ESD voltages on clothing can still cause damage.
- Handle printed circuit cards and appliques by the edges only; avoid touching the components, traces, or any connector pins.
- Place a removed card component-side-up on an antistatic surface or in a static shielding bag. If the component will be returned to the factory, immediately place it in a static shielding bag.
- Do not remove the wrist strap until the installation is complete.



Caution For safety, periodically check the resistance value of the antistatic strap. The measurement should be within the range of 1 and 10 Mohms.

Installation

The following describes the procedures for installing the CSC-CCTL2 card in your router chassis, and for verifying correct installation when you restart the system by checking the LEDs on cards in the card cage. Before proceeding, ensure that your system meets the requirements listed in the section “Installation Prerequisites” on page 3.

Installing the CSC-CCTL2

The CSC-CCTL2 is installed in the system card cage, which you access by removing the chassis front access panel shown in Figure 4. You must install the CSC-CCTL2 in the center ciscoBus slot (Multibus slot 7) shown in Figure 3. Your system will not function if the CSC-CCTL2 is placed in any other slot.



Caution To prevent electrostatic discharge damage when removing and replacing cards, follow the ESD procedures described earlier.

Step 1 Ensure that the chassis is firmly seated on a stable surface. The high-performance cards that connect to the ciscoBus require substantial force to slide them into the card cage and seat them properly.


Step 2 Turn OFF the system power at the power switch on the rear of the chassis.



Caution Installing or removing cards when the chassis power is on will result in severe damage to the card.

Step 3 On the front of the chassis, loosen (but do not attempt to remove) the two thumb fasteners on the access panel (see Figure 4), then remove the panel to expose the system card cage.

Figure 4 Chassis Front Access Panel

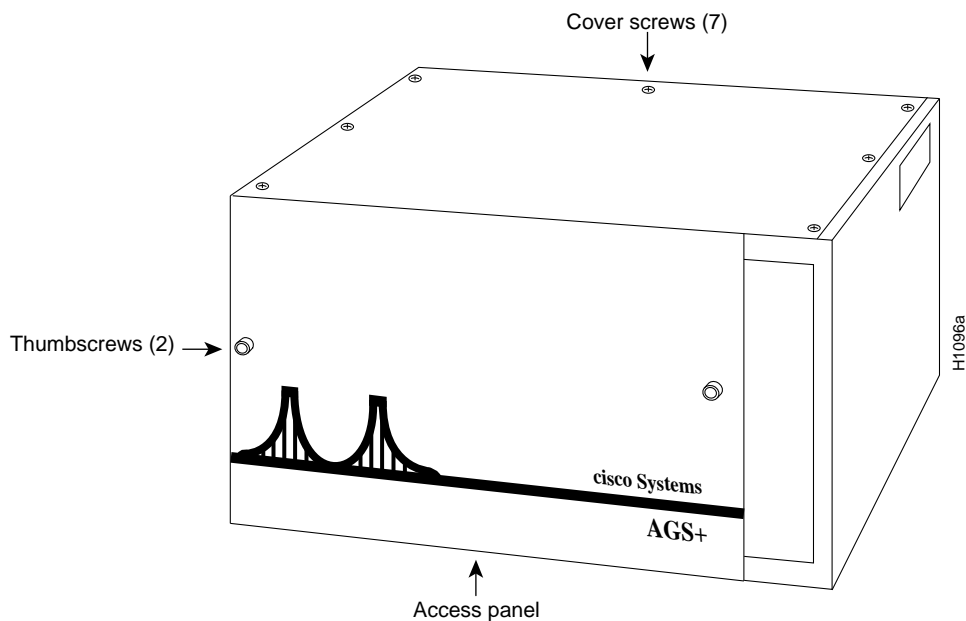

Step 4 Slip on an ESD wrist strap and connect it to the chassis as previously described. To channel ESD voltages to ground, ensure that the power cable is connected, but that the power is OFF.

- Step 5** You may need to disconnect internal cables from other cards in the card cage if they are routed in front of the ciscoBus card slot. If so, be sure that all cables are labeled to avoid mixing interfaces when you reconnect them.
- Step 6** Remove the existing ciscoBus controller card (if any) from the middle ciscoBus slot. (See Figure 3.) Use your thumbs to pull the ejector tabs out and away from the card. Open both ejectors at the same time.
- Step 7** Check switch S1 on the new CSC-CCTL2 card and verify that the card number is set correctly to 0. Card numbers are described in the section “Card and Interface Numbering” on page 8.
- Step 8** Hold the CSC-CCTL2 card by the ejector tabs and the card edges, component-side up, with the bus edge away from you. Install the CSC-CCTL2 card into the middle ciscoBus slot (the seventh slot from the top, shown in Figure 3). Place your thumbs on the ejector tabs, and push the card in firmly until the ejector tabs close.



Caution Failure to place the CSC-CCTL2 card in the correct slot prevents the correct operation of your system.

- Step 9** Reconnect any cables that were removed for the installation.
- Step 10** If you are upgrading from a CSC-CCTL, replace the microcode on all existing ciscoBus interface cards before restarting the system. For installation instructions, refer to the documentation that accompanies each upgrade kit.
- If you also need to upgrade the microcode on Multibus cards, do so before installing any new cards in the chassis. For installation instructions, refer to the documentation that accompanies each upgrade kit.
- Step 11** After all necessary upgrades are performed, and the cards are replaced, install any new interface cards. When installing ciscoBus cards, place cards into ciscoBus slots according to the priority scheme described in the section “Slot Priority” on page 6.
- Step 12** When all ciscoBus interface cards are installed and/or upgraded, proceed to the next section, “Checking the Installation.” Do not replace the front access panel; the panel must be off to observe the LEDs on the cards.

Checking the Installation

Following is the procedure to verify correct installation:

- Step 1** Turn ON the system power. All five LEDs on the CSC-CCTL2 should be on while the system is booting. If they do not, do the following:
- Turn OFF the system power and reseal the CSC-CCTL2 in its ciscoBus slot. The card ejector tabs snap into place when the card connector is correctly seated in the ciscoBus.
 - Check the LEDs on the processor card. If no processor LEDs are on, check the system power. If the system power is ON, you will hear the internal blower operating.
 - Ensure the CSC-CCTL2 is installed in the center ciscoBus slot (Multibus slot 7) as shown in Figure 3.
 - If the system does not boot, turn OFF the system power and check switch S1 on the CSC-CCTL2. Ensure that it is set to Card 0, which is the factory default. (See Table 3.)

Step 2 After the system boots, check the LEDs on the CSC/3 (see Figure 5) or the CSC/4 (see Figure 6) system processor card. The far right OK LED should be on; the other two LEDs should be off. If the far right LED is not on, or if either of the other two LEDs is on or flashing, a system error has been detected. If this happens, do the following:

- Turn OFF the system power, remove and reseat the processor card, and restart the system.
- If you installed new components on the processor card, turn OFF system power, remove the card, and check the new components for bent pins. If any are bent, carefully remove the component, straighten the pin with needlenose pliers, replace the card, and restart the system. If the pin breaks, contact a service representative for a replacement.

Figure 5 CSC/3 Processor Card LEDs


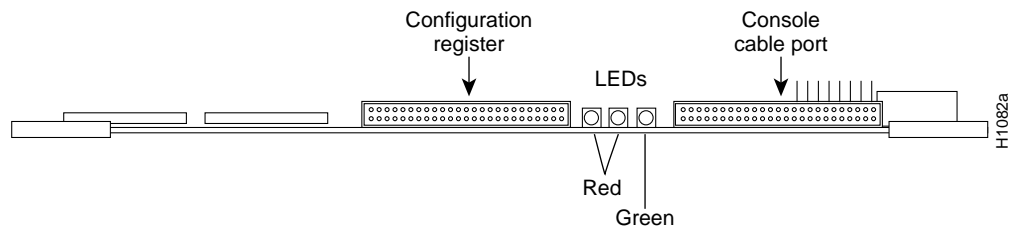


Figure 6 CSC/4 Processor Card LEDs

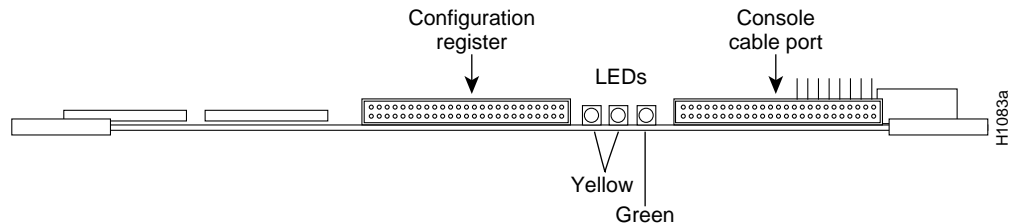

Step 3 When the system is operational, verify that the far right, green *OK* LED on the CSC-CCTL2 is on and remains on. If it does not, proceed with the installation. If it appears that the OK LED is faulty, contact a service representative for card replacement instructions.

Step 4 Check the four red LEDs on the CSC-CCTL2. Ensure that the LED for each occupied ciscoBus card is on. (For LED descriptions, see the section “Card Overview” on page 2.) (The interfaces on some cards do not light until the interface is configured as up; refer to the documents that accompany individual interface cards for expected LED behavior.) In general, if any CSC-CCTL2 LEDs do not come on, do the following:

- If the red LED for an installed card fails to come on, turn OFF the system power, reseat the card, and reboot.
- Ensure the ciscoBus interface card in question is installed in one of the four ciscoBus interface slots. (See Figure 3.)

- If the CSC-CCTL2 LEDs for other occupied slots are on, turn OFF system power, remove the interface card in question, install it in another ciscoBus slot, and reboot.
- If the installed card still fails to activate the LED on the CSC-CCTL2, use the **show controller cBus** command and ensure that the microcode on that card is Version 10.0 or later. (Refer to the section “System Requirements” on page 3.)

Step 5 Check the system console terminal and ensure that the system banner is displayed, followed by a list of the installed hardware. (See page 4 for an example of this display, which is the same as the output for the **show version** command.)

Step 6 When the LEDs indicate correct installation, replace the chassis front access cover and finger-tighten the two thumb screws.

Note If the LEDs do not come on correctly after reseating the cards and rebooting, contact a service representative for further instructions.

When new hardware is installed, the system automatically defaults to the **setup** command facility. You can either remain in **setup** and answer each prompt, or exit from **setup** and configure any new interfaces with the **configure** command. If you have no new interfaces to configure, exit from **setup** by answering no to the following prompt:

```
Continue with configuration dialog [yes]? no
```

When the system is configured and running, use the **show controller cbus** command to display the name, controller type (type 6.0 for a CCTL2), microcode version, and interfaces on each card in the ciscoBus. For complete descriptions of other **show** commands, refer to the router products configuration publication.

This completes the CSC-CCTL2 installation.


Upgrading the EPROM Component

The microcode on the CSC-CCTL2 resides on a single component in socket U6 on the card. You may need to replace the microcode when upgrading your system software or to add new functionality to the card when it becomes available. To display the current microcode version installed on the CSC-CCTL2 and the ciscoBus interface cards, use the **show controller cbus** command (described in the section “System Requirements” on page 3). Refer to Figure 7 for the location of U6 while performing the following steps.

Step 1 Follow steps 1 through 6 in the section “Installation” beginning on page 12.

Step 2 Place the removed card on an antistatic mat or foam.

Step 3 Referring to Figure 7, locate the component in socket U6. Note the orientation of the notch; the new component must be inserted with the same notch orientation.

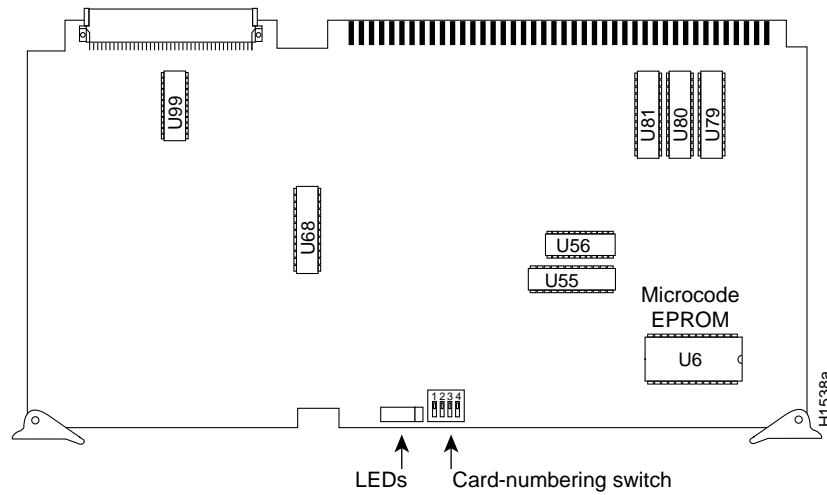Figure 7 CSC-CCTL2 ciscoBus II Controller Card—Component-Side View

- Step 4** Use a chip extractor to remove the component from its socket. If you do not have a chip extractor available, you can use the tip of a small flat-blade screwdriver to gently pry the component out of its socket.
- Step 5** Install the new component in socket U6. Verify the notch orientation and be careful not to bend or crush any of the pins when inserting the new components. If any pins are bent, use needlenose pliers to straighten the pins, then carefully reinsert the component. If a pin breaks, contact a service representative for a replacement.



Caution If the EPROM is inserted backwards and then power is turned ON, the EPROM will be damaged.

- Step 6** Replace the card in the card cage. Place your thumbs on the ejector tabs and push the card in firmly until it snaps into place and is firmly seated in the slot.
- Step 7** Reconnect any internal ribbon cables that had to be removed from other cards. Be sure to match the interface numbers labeled on the cables with the interface ports on the cards.
- Step 8** Turn ON power to the system for an installation check.
- Step 9** Check the LEDs on the CSC-CCTL2, which are described in the section “Card Overview” on page 2. If the microcode component is not installed correctly, or if any of the pins were bent during installation, the green OK LED on the CSC-CCTL2 will not light. If this happens, remove the component, straighten any bent pins, then reinsert it and try again.
- Step 10** When the LEDs are on correctly, replace the front access panel and finger-tighten the thumb screws.

To display the new microcode version, use the **show controller cbus** command. For descriptions and examples of additional commands, refer to the router products configuration publication.

This completes the EPROM upgrade procedure.

Cisco Information Online

Cisco Information Online (CIO) is Cisco Systems' primary, real-time support channel. You can use your product serial number to activate CIO for a single user during your warranty period. Maintenance customers and partners can self-register on CIO to obtain additional content and services.

Available 24 hours a day, 7 days a week, CIO provides a wealth of standard and value-added services to Cisco's customers and business partners. CIO services include product information, software updates, release notes, technical tips, the Bug Navigator, configuration notes, brochures, descriptions of service offerings, and download access to public and authorized files.

CIO serves a wide variety of users through two interfaces that are updated and enhanced simultaneously—a character-based version and a multimedia version that resides on the World Wide Web (WWW). The character-based CIO (called "CIO Classic") supports Zmodem, Kermit, Xmodem, FTP, Internet e-mail, and fax download options, and is excellent for quick access to information over lower bandwidths. The WWW version of CIO provides richly formatted documents with photographs, figures, graphics, and video, as well as hyperlinks to related information.

You can access CIO in the following ways:

- WWW: <http://www.cisco.com>.
- Telnet: [cio.cisco.com](telnet://cio.cisco.com) (198.92.32.130).
- Modem: From North America, 408 526-8070; from Europe, 33 1 64 46 40 82. Use the following terminal settings: VT100 emulation; databits: 8; parity: none; stop bits: 1; and baud rates up to 14.4 kbps.

For a copy of CIO's Frequently Asked Questions (FAQ), contact cio-help@cisco.com. For additional information, contact cio-team@cisco.com.

If you are a network administrator and need personal technical assistance with a Cisco product that is under warranty or covered by a maintenance contract, contact Cisco's Technical Assistance Center (TAC) at 800 553-2447, 408 526-7209, or tac@cisco.com. To obtain general information about Cisco Systems, Cisco products, or upgrades, contact 800 553-6387, 408 526-7208, or cs-rep@cisco.com.

This document can be used in conjunction with the *AGS+ Hardware Installation and Maintenance* and the *AGS+ Hardware Installation* publications.

AtmDirector, Catalyst, CD-PAC, CiscoAdvantage, CiscoFusion, Cisco IOS, the Cisco IOS logo, CiscoPro, Cisco Systems, CiscoView, CiscoVision, CiscoWorks, ClickStart, ControlStream, EtherChannel, EveryWare, FastCell, FastForward, FastManager, FastMate, FragmentFree, HubSwitch, Internet Junction, LAN²LAN Enterprise, LAN²LAN Remote Office, LightSwitch, Newport Systems Solutions, *Packet*, PIX, Point and Click Internetworking, RouteStream, SMARTnet, StreamView, SwitchBank, SwitchProbe, SwitchVision, SynchroniCD, *The Cell*, TokenSwitch, TrafficDirector, VirtualStream, VlanDirector, WNIC, Workgroup Director, Workgroup Stack, and XCI are trademarks; Access by Cisco and Bringing the power of internetworking to everyone are service marks; and Cisco, the Cisco Systems logo, CollisionFree, Combinet, EtherSwitch, FastHub, FastLink, FastNIC, FastSwitch, Grand, Grand Junction, Grand Junction Networks, the Grand Junction Networks logo, IGRP, Kalpana, the Kalpana logo, LightStream, Personal Ethernet, and UniverCD are registered trademarks of Cisco Systems, Inc. All other trademarks, service marks, registered trademarks, or registered service marks mentioned in this document are the property of their respective owners.

Copyright © 1996, Cisco Systems, Inc.
All rights reserved. Printed in USA.
962R