



Doc. No. 78-0848-03

CSC-R16M Configuration and Installation, and Upgrading the CSC-R16 Card and the CSC-R16M Microcode

Product Number: CSC-R16M= and MC-R16M-V3.4=

Description of the CSC-R16M Token Ring Interface Card

The CSC-R16M Token Ring interface card interconnects routers and terminal servers to IEEE-802.5 and IBM Token Ring media from either a 16-megabits per second (Mbps) or 4-Mbps Token Ring LAN. A single jumper setting permits the user to configure the card with either speed (4 or 16 Mbps). The CSC-R16M supports a single Token Ring interface.

Figure 1 shows the CSC-R16M Token Ring interface card viewed from the component side with its jumpers configured according to the factory settings. The enlargement in Figure 1 is a close-up view of the factory-default jumper settings on that part of the card.

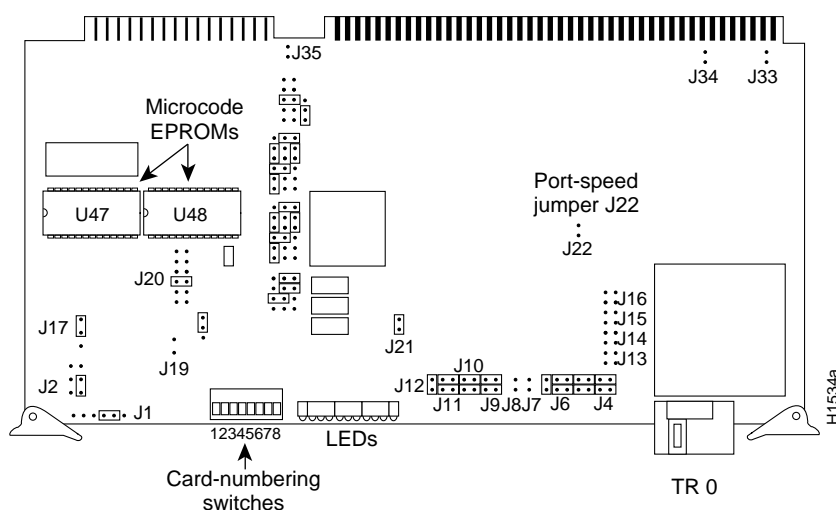


Figure 1 The CSC-R16M Token Ring Interface Card

About this Publication

This publication includes the procedures required to install and configure a CSC-R16M Token Ring card in any chassis type that can use this card. Also included are the procedures to upgrade the following:

- A CSC-R16 Token Ring interface card to a CSC-R16M card
- The microcode EPROMs on a CSC-R16M card

The same procedure is used for both of these upgrades because to upgrade a CSC-R16 to a CSC-R16M requires replacing the microcode EPROMs on the CSC-R16 with Microcode Version 3.0 or later. There are no additional hardware changes to the CSC-R16 card. The first sections of this publication include the following basic configuration and safety information:

- Configuring the CSC-R16M Card, page 2
 - Selecting Token Ring Speed, page 2
 - Card Numbers, page 3
 - Unit Addresses, page 4
- Other Configuration Considerations, page 4
- Preventing Electrostatic Discharge Damage, page 5
- CSC-R16M Installation and Upgrade, page 5
 - Prerequisites and Caveats, page 9
 - EPROM Replacement, page 10

If you are installing a new CSC-R16M card, upgrading your CSC-R16 card to a CSC-R16M card, or replacing the microcode on your CSC-R16M card, use these sections to ensure the correct installation or upgrade of your CSC-R16M card.

Configuring the CSC-R16M Card

Following are configuration and safety considerations for the CSC-R16M Token Ring interface card.

Selecting Token Ring Speed

The speed of the CSC-R16M interface card is user-configurable. CSC-R16M interface cards are shipped configured to run at 16 Mbps. Jumper area J22 configures the CSC-R16M for either 4-Mbps or 16-Mbps operation as follows (see Figure 1):

- No jumper at jumper area 22 selects 16-Mbps Token Ring operation (this is the factory default setting).
- Installing a jumper at location J22 selects 4-Mbps Token Ring operation.

The jumper to use at jumper area J22 is supplied and placed on the posts at jumper area J21.



Warning Setting the speed jumper (J22) to an incompatible speed for the Token Ring network causes no damage to the card; however, the entire Token Ring network will not function for the time that the misconfigured card is attempting to use the ring. This is true of all speed-selectable Token Ring cards.

Card Numbers

Card numbers must be unique within the set of all CSC-R16M interface cards in the same chassis. Card numbering allows the system to distinguish one CSC-R16M interface card from another. (The same is true for most types of Multibus cards in the system.)

Software-readable dual-in-line package (DIP) switches, located on the front edge of the card, control the card number of the CSC-R16M card within the router. Configure the switches as in Table 1 to select the desired card number. Figure 2 shows the numbered positions of the DIP switches viewed from the front edge of the card.

Table 1 CSC-R16M Card Numbering Switch Settings

Card Number	Switches ¹		
	1	2	3
0	Down ²	Down	Down
1	Up	Down	Down
2	Down	Up	Down
3	Up	Up	Down
4	Down	Down	Up
5	Up	Down	Up
6	Down	Up	Up

1. Switches 4–8 are all down.

2. Down = switch is off.

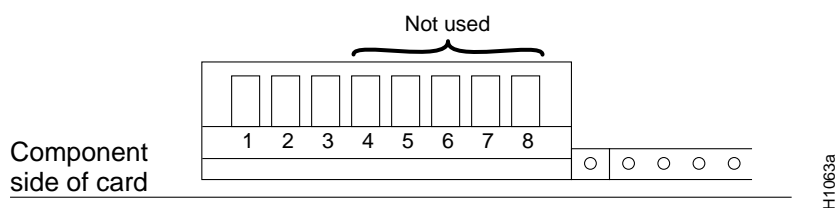


Figure 2 DIP Switches—Partial Front-Edge View

Unit Addresses

The unit address of the CSC-R16M interface is selected by the system, but can be anticipated by you, which will help you to establish which interface will be assigned and therefore, which card number to assign the card. CSC-R16M unit addresses begin after CSC-R unit addresses, but before CSC-1R and CSC-2R unit addresses.

For example, if there is already one CSC-R card and one CSC-1R card in the chassis (set as card numbers 1 and 2, respectively), and you add one CSC-R16M card (set as card number 3), the system will assign unit address 0 to the CSC-R interface, unit address 1 to the CSC-R16M interface, and unit address 2 to the CSC-1R interface. Making card numbers match unit addresses is recommended to monitor which unit address is on each card.

Other Configuration Considerations

The CSC-R16M interoperates with the 4 Mbps CSC-R Token Ring interface card, with any of the MCI family of cards, and with any cards in the ciscoBus or ciscoBus2 complex. The CSC-R16M interface card will also work with the CSC-16 card for use with a Token Ring communication server. The CSC-R16M Token Ring interface card will operate from any slot in the chassis.

Note The CSC-R16M will *not* interoperate with the older Type 1 and Type 2 Ethernet cards, or with the CSC-S and CSC-T cards.

LED Descriptions

Along the front edge of the CSC-R16M card are 13 red LEDs and one green LED (see Figure 3). The descriptions of their functions and layout are shown in Table 2.

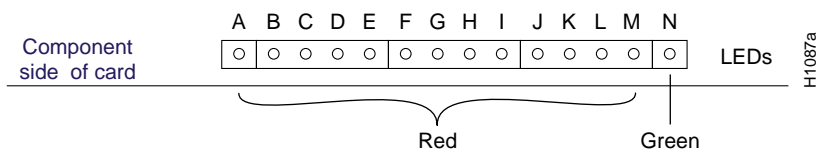


Figure 3 CSC-R16M LEDs—Partial Front-Edge View

Table 2 CSC-R16M LED Functions

LED	Function
A	Processor halted (normally off)
B	-12 volts fused
C	+12 volts fused
D	+ 5 volts fused
E	+ 5 volts (power)
F–M	Activity lights ¹
N	Run light (green)

1. In normal operation, the activity lights (LEDs F-M) will cycle back and forth.

Power Budget

Following is the power budget for the CSC-R16M Token Ring interface card:

- Draws 6 amps (A) @ 5 volts (V)
- Draws negligible additional current for 12V
- Dissipates 34 watts (W)

Preventing Electrostatic Discharge Damage

Electrostatic discharge damage (ESD) occurs when electronic printed circuit cards are improperly handled and can result in complete or intermittent failures. ESD can impair electronic circuitry and equipment. Always follow ESD prevention procedures when removing and replacing cards.

Following are steps for handling printed circuit cards:

Step 1 Slip on an ESD-preventive wrist strap, ensuring that it makes good skin contact.

Step 2 Connect the strap to an unpainted chassis frame surface or another proper grounding point or surface to safely channel unwanted ESD voltages to ground.

Step 3 Use the ejectors to remove the card. Handle the card by its sides. Place the card on an antistatic surface or in a static shielding bag. To prevent further damage to the card by ESD voltages, defective cards must remain in the static shielding bag when returned for repair or replacement.

Step 4 Handling the new card by its edges only, insert it into the chassis. Avoid contact between the card and clothing. The wrist strap only protects the card from ESD voltages on the body; ESD voltages on clothing can still damage the card.



Caution Use an ohmmeter to check the ESD-preventive wrist strap to ensure that the resistor is providing proper ESD protection. For safety, the measurement should be in the range 1 to 10 mega ohms.

CSC-R16M Installation and Upgrade

Installation and upgrade procedures for the CSC-R16M card are included in the following sections, but before you can install or upgrade a card, you must gain access to the chassis card cage.

Following are the procedures for accessing the interior of the chassis types that can use the CSC-R16M card:

- The A-type chassis (including the AGS+, the AGS, and the ASM-CS models)
- The M chassis (including the MGS and the MSM models)

Select the procedure that matches your chassis type. Before beginning read the entire procedure.

Accessing the A-Type Chassis Card Cage

Following is the procedure for accessing the A-type chassis card cage.

This procedure requires a Number 1 Phillips screwdriver.



Warning Before accessing the chassis interior and removing any cards, turn off power to prevent electrical shock hazard. Attach appropriate ESD protection before beginning this procedure.

- Step 1** Turn OFF power to the chassis, but to channel ESD voltages to ground, do not unplug it.
- Step 2** Remove the front access panel and set it aside. (See Figure 4.)
- Step 3** Proceed with this step *only* if you will install Token Ring appliques—Locate and remove the seven cover screws that secure the chassis top cover. Set the cover and screws aside.

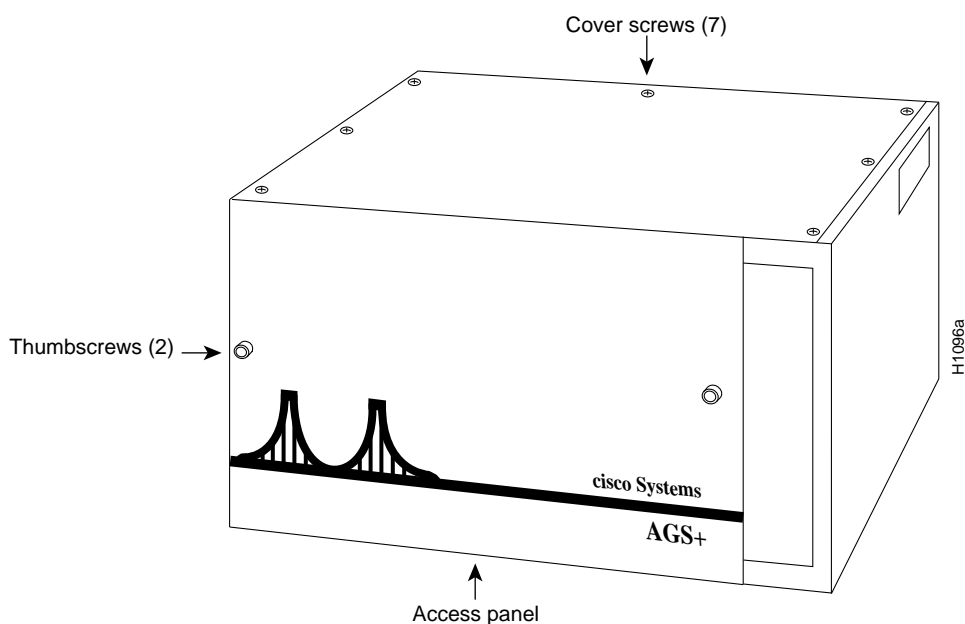


Figure 4 Front and Top Panels on the A-Type Chassis —AGS+ Chassis Shown

If you are installing a CSC-R16M card, verify the Token Ring speed and card number and then proceed to the section, “Installing the CSC-R16M Card,” on page 8.

If you are upgrading a CSC-R16 card to a CSC-R16M or upgrading the microcode EPROM on the CSC-R16M card, proceed to the section, “Upgrading the Microcode EPROM,” on page 9.

Accessing the M Chassis Card Cage

Following is the procedure for accessing the M chassis card cage.

This procedure requires a Number 1 Phillips screwdriver and a medium-size flat-blade screwdriver.



Warning Before accessing the chassis interior and removing any cards, turn off power to prevent electrical shock hazard. Attach appropriate ESD protection before beginning this procedure.

- Step 1** Turn OFF power to the chassis, but to channel ESD voltages to ground, do not unplug it.
- Step 2** Locate the three slotted screws that secure the top of the card cage access panel. Use the flat-blade screwdriver to turn each of these screws 1/4 to 1/2 turn counterclockwise until the screws pop up.
- Step 3** Loosen the three Phillips screws at the bottom edge of the card cage access panel (do not remove these screws completely).
- Step 4** Proceed with this step *only* if you will install Token Ring appliques—Locate and remove the 14 screws that secure the top cover of the M chassis. (See Figure 5.) Set the cover and screws aside.

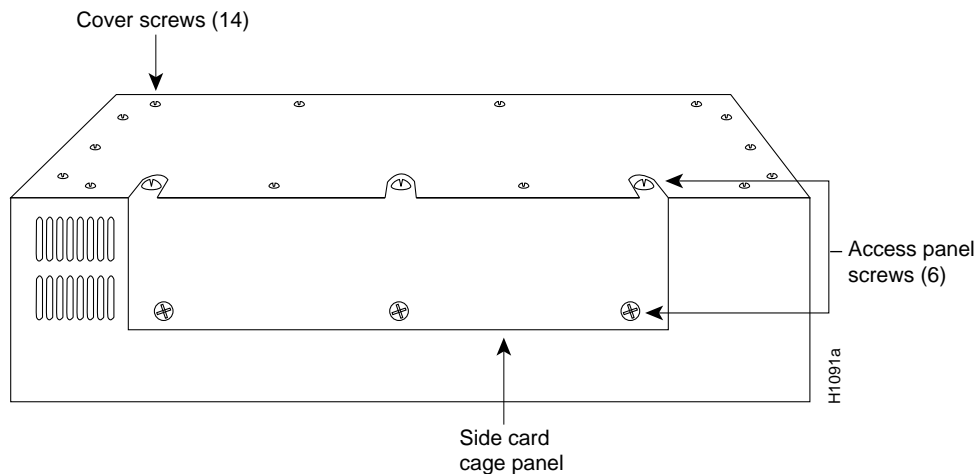


Figure 5 Screw Locations on the M Chassis Exterior

- Step 5** Carefully remove the access panel and set it aside.

If you are installing a CSC-R16M card, verify the Token Ring speed and card number and then proceed to the section, “Installing the CSC-R16M Card,” on page 8.

If you are upgrading a CSC-R16 card to a CSC-R16M or upgrading the microcode EPROM on the CSC-R16M card, proceed to the section, “Upgrading the Microcode EPROM,” on page 9.

Installing the CSC-R16M Card

Following is the procedure for installing the CSC-R16M card. If the chassis is rack mounted, remove it from the rack to perform this installation.

- Step 1** Power OFF the unit and unplug it.
- Step 2** Proceed to step 4 if you do not need to install a Token Ring applique for your new CSC-R16M card—To install a Token Ring applique, attach the Token Ring applique plate (cable attached) to the inside of the appropriate rear panel plate area. This applique connector provides the 9-pin D-type Token Ring attachment to the network.
- Step 3** Route the Token Ring cable (attached to the applique) underneath the chassis card cage. Do not crimp or bend the Token Ring cable or any other cables located underneath the chassis card cage.
- Step 4** Remove any cables (in the front of the chassis card cage) that would impede the removal of the old CSC-R16M card. Note their positions.
- Step 5** Remove the old CSC-R16M card.
- Step 6** Insert the new CSC-R16M card into the appropriate card cage slot.
- Step 7** Attach cables. The CSC-R16M card offers a 10-pin DIP header cable attachment and a keyed connector as shown in Figure 6. Internally, connect the Token Ring cable (for each applique and card) to the port on the appropriate CSC-R16M card.

Note The red stripe on the Token Ring cable is on the right in the orientation shown in Figure 6. In addition, the arrows on the connectors indicate the correct position of the cable.

- Step 8** Externally, connect a Token Ring cable to the 9-pin Token Ring applique connector.

Figure 6 CSC-R16M Token Ring Cable Attachment



Warning To prevent bringing down your Token Ring network, make certain that the Token Ring-speed setting on your CSC-R16M card matches the speed of the Token Ring network to which the interface is connected, before you apply power to your chassis. A speed mismatch can bring down your Token Ring network.

Step 9 Turn ON power to the chassis and allow the system to boot for an installation check.

Step 10 Use the **show interface token** and **show controller token** commands to verify that your CSC-R16M Token Ring interface is acknowledged by the system. For more information on the **show interface token** and **show controller token** commands, refer to the appropriate Configuration and Reference publication.

Step 11 After you verify the presence of the CSC-R16M Token Ring interface, replace the card access panel and top cover (if removed) on the A+, A, or M chassis.

The system is ready to install in the network.

Upgrading the Microcode EPROM

This section describes the procedure required to either upgrade a CSC-R16 Token Ring card to a CSC-R16M, or to simply upgrade the microcode EPROMs on a CSC-R16M card. Both upgrades require changing the two erasable programmable read-only memory (EPROM) devices on the card and include the following:

- CSC-R16 cards currently at Microcode Version 2.0 and routers running System Software Version 8.2(6) or later (see the “Prerequisites and Caveats” section following)

Note This upgrade is for CSC-R16 cards with FASTMAC software licensed from Madge Networks, and requires replacing Microcode Version 2.0 with Microcode Version 3.0 (or later). If your microcode is pre-version 2.0, contact your service representative for information on how to proceed.

- CSC-R16M card requiring a basic microcode upgrade to Microcode Version 3.4

Prerequisites and Caveats

Upgrading to CSC-R16M Microcode Version 3.2 (or later) requires System Software Versions 8.3(6), 9.0(4), or 9.1(2) or later. If you require one of these system software versions, contact your service representative.

Tools Required

Following are the tools and parts required for these procedures:

- EPROM extraction tool or a small to medium-size flat-blade screwdriver
- Antistatic mat or foam and ESD-preventive wrist strap
- The appropriate level of microcode EPROMs for your requirements

EPROM Replacement

The following upgrade procedure is used for both the CSC-R16 to CSC-R16M upgrade and the CSC-R16M microcode upgrade. In this procedure, the CSC-R16 and CSC-R16M cards are referred to as *the card*.

Following is the procedure for upgrading the microcode EPROMs.



Caution To prevent ESD damage, attach appropriate ESD protection before starting this procedure.

- Step 1** Disconnect any cables preventing the removal of the card, and remove the card from the chassis card cage.
- Step 2** Position the card as shown in Figure 7. The two EPROMs, labeled *SBEMON*, are located next to one another with the notched end toward your left.
- Step 3** Using the tip of the EPROM extraction tool (or the flat-blade screwdriver), carefully lift each old EPROM from its socket; note its position on the board and set it aside. Do this carefully to prevent damage to the EPROM and the socket. You might need to alternate slowly from one end of the EPROM to the other until it is completely clear of the socket.

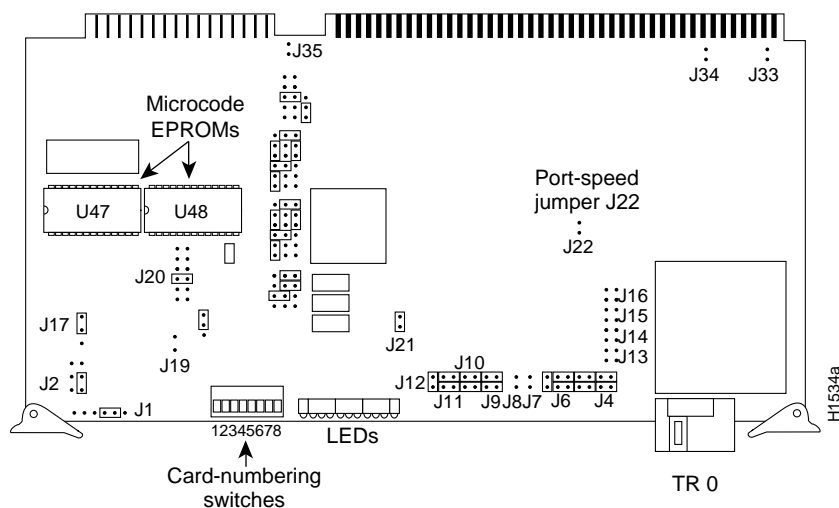


Figure 7 SBEMON EPROM Locations—Version 2.0 Shown

- Step 4** Carefully remove the new EPROM for location U47 from its box and notice the small notch at one end. Position the new EPROM so that this notch is to your left (the print on the label should be legible). This is the correct orientation for installation of the EPROM. Do not install the EPROM any other way because damage will result. *Before* pushing down on the EPROM, make certain each pin is lined up with the appropriate hole of the socket.
- Step 5** Install the EPROM by gently inserting the pins of the EPROM into the appropriate socket. Make certain to right-justify the EPROM in the socket; any open holes visible on the socket after EPROM insertion should appear to the left of the EPROM.
- Step 6** Repeat steps 3 through 5 to install the new EPROM for location U48.
- Step 7** After both EPROMs are installed, insert the card in the card cage and attach all cables disconnected in step 1.

Testing the Upgrade

Following is the procedure for testing the upgrade.

Step 1 Turn ON the power to the chassis for an installation check.

Step 2 Verify that the system boots correctly and that all Token Ring interfaces are shown in the boot screen.

Note If the system does not boot properly, an EPROM may be inserted incorrectly. To check this, turn off the power and unplug the chassis, examine the EPROMs, straighten any problematic pins, then reinsert the EPROM and try again. If a pin is bent, carefully straighten it using the needle-nose pliers. If a pin breaks or if an EPROM is inserted backwards when power is turned on, the EPROM is unusable. You must contact your service representative to obtain a replacement.

Step 3 Following is sample output of the **show controller token** command. The firmware version (3.4 for this example) is shown in the line starting with *f/w ver: 3.4*:

```
router> show controller token

f/w ver: 3.4, chip f/w: '000000.ME31100', [bridge capable]
```

Note More information displays with this command; however, the line that indicates the firmware version is shown above.

Step 4 After verifying the correct firmware version, replace the card access panel and top cover (if removed) on the A+, A, or M chassis.

This completes the microcode upgrade procedure. The system is now ready to install in the network.

Note For technical assistance, contact a service representative or the Cisco Technical Assistance Center (TAC) at 800 553-2447, 415 903-7209, or tac@cisco.com. For upgrade or product information, contact the Customer Response Center at 800 553-6387, 415 903-7208, or cs-rep@cisco.com.

Customer Information Online

Cisco Systems' Customer Information Online (CIO) system provides online information and electronic services to Cisco direct customers and business partners. Basic CIO services include general Cisco information, product announcements, descriptions of service offerings, and download access to public and authorized files, including release notes, and software. Maintenance customers receive a much broader offering, including technical notes, the bug database, and electronic mail access to the TAC. (Maintenance customers must have authorization from their Cisco contract administrators to receive these privileges.)

For dialup or Internet users, CIO supports Zmodem, Kermit, Xmodem, FTP PUT, Internet e-mail, Telnet, rlogin, and fax download options. Internet users also can retrieve files from CIO using FTP.

Registration for CIO is handled on line. To reach CIO via the Internet, use Telnet or FTP to cio.cisco.com (131.108.89.33). To reach CIO by dialup, use 415 903-8070 (Mountain View, California) or 33 1 6446 4082 (Paris, France).

This document is to be used in conjunction with the *Microcode Release Note* publication.

Access Without Compromise, Catalyst, CiscoWorks, Cisco Internetwork Operating System, Netscape, SMARTnet, The Packet, UniverCD, and Workgroup Stack are trademarks, and Cisco Systems and the Cisco logo are registered trademarks of Cisco Systems, Inc. All other products or services mentioned in this document are the trademarks, service marks, registered trademarks, or registered service marks of their respective owners..

Copyright © 1994, Cisco Systems, Inc.
All rights reserved. Printed in USA