



About This Manual

This section discusses the objectives, audience, organization, and conventions of the *LightStream 2020 CLI Reference Manual*. It also lists related Cisco documentation for the LightStream 2020 multiservice ATM switch (LS2020 switch).

All Cisco technical documentation and additional literature are available on UniverCD, Cisco's online library of product information. UniverCD is updated and shipped monthly, so it might be more up to date than printed documentation. UniverCD is available both as a single CD and as an annual subscription. To order UniverCD, contact your local sales representative or call Customer Service. You can also access Cisco technical documentation on the World Wide Web using URL <http://www.cisco.com>.

Document Objectives

The LS2020 enterprise ATM switch supports a command line interface (CLI). Refer to the *LightStream 2020 Network Operations Guide* for an overview of the CLI, including information about accessing the CLI and using its command-completion and help facilities.

This manual provides detailed information on each of the commands that is available from the CLI. It also provides a description of the management information base (MIB) used to manage LightStream 2020 enterprise ATM switches (LS2020 switches).

Audience

The *LightStream 2020 CLI Reference Manual* is intended for anyone who operates an LS2020 network. Users of the LS2020 document set are expected to have a general understanding of basic data communications concepts and some practical knowledge of the UNIX operating system.

Document Organization

This manual has seven chapters.

- Chapter 1, “The Set Command,” describes the **set** command for configuring and controlling LS2020 attributes.
- Chapter 2, “The Show Command,” describes the **show** command for displaying values of LS2020 parameters.
- Chapter 3, “The Define and Delete Commands,” describes two commands for defining, changing, and deleting virtual LAN internetworking (VLI) constructs: traffic filters, traffic profiles, and multicast groups.

- Chapter 4, “CLI Control Commands,” describes other monitoring and control commands and commands used to configure the CLI session.
- Chapter 5, “MIB Commands,” describes commands for setting and displaying individual MIB objects.
- Chapter 6, “Diagnostic Commands in the CLI,” describes commands for diagnostic testing.
- Chapter 7, “LightStream 2020 MIB Reference,” shows the structure of the LightStream enterprise MIB and describes how to read the private MIB file and interpret its contents, including the address, type, and values of each attribute.

Document Conventions

The following conventions distinguish different types of text:

- Commands and keywords are in **boldface**.
- In interactive examples, user input is in **boldface**.
- In command syntax statements
 - Parameters (variables for which a specific value is to be typed) are in *italics*.
 - Optional arguments are in square braces.
 - Alternative arguments are separated by vertical bars, and are grouped within curly braces.
- Names of keys on the keyboard are in square braces, such as the [Tab] key.
- A control key is indicated by a caret preceding a letter: ^A means Control-A.

Note Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the manual.



Caution Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Related LS2020 Documentation

The following is a list of Cisco LS2020 documents for LS2020 users:

- *LightStream 2020 System Overview*

This overview introduces the LS2020 node and the Asynchronous Transfer Mode (ATM) technology on which the LS2020 product is based. It describes the traffic flow through an LS2020 network. In addition, it describes key features, such as traffic and network management.
- *LightStream 2020 Site Planning and Cabling Guide*

This guide tells you how to prepare your site to receive LS2020 hardware. It includes space, environmental and electrical requirements, rack selection guidelines, requirements for the management workstation, and information on cables and connectors.
- *LightStream 2020 Installation Guide*

This guide tells you how to install and set up LS2020 nodes and how to install LS2020 management software on your network management workstation.

- *LightStream 2020 Hardware Reference & Troubleshooting Guide*

This guide provides a detailed description of LS2020 hardware and tells you how to diagnose hardware problems and how to replace faulty hardware components.

- *LightStream 2020 Configuration Guide*

This guide provides the information you need to configure LS2020 nodes. It provides a functional overview of the configuration programs, describes the configuration database, and gives detailed information on all configurable attributes and their settings. The guide also provides step-by-step configuration procedures.

- *LightStream 2020 Network Operations Guide*

This guide is a task-oriented book that tells you how to operate a network of LS2020 nodes. The guide presents an overview of network operations tasks, describes the command line interface (CLI), and presents procedures for performing monitor and control tasks, such as displaying the status of nodes, cards and ports, viewing statistics, and creating collections of traffic data.

- *LightStream 2020 NP O/S Reference Manual*

This manual provides detailed descriptions of the most frequently used LynxOS commands and of the bash shell. It also provides a tutorial introduction and reference guide to the vi editor.

- *LightStream 2020 Traps Reference Manual*

This manual presents an overview of LS2020 traps and how they are generated by the LS2020 node. It provides the procedures for managing trap reporting, such as setting trap levels, enabling/disabling individual traps, and determining where the traps are displayed. It also describes all SNMP and operational traps, including the trap name, text, cause, and recommended user response.

- *LightStream 2020 Command Line Interface (CLI) Reference Card*

The reference card compactly summarizes the syntax and arguments of CLI commands.

- *LightStream 2020 Release Notes*

The release notes provide a software upgrade procedure and describe new features and special considerations, including known software bugs.

Note The release notes contain important information that was not available when the other documents were printed.

- *LightStream 2020 online help*

The LS2020 command line interface (CLI) and configuration program both support online help facilities.

- *Internetworking Terms and Acronyms*

This book is a glossary of terms and acronyms used in the field of internetworking, including material of interest to users of the LightStream 2020.

To order these publications or additional copies of the *LightStream 2020 CLI Reference Manual*, contact your sales representative. (The Customer Order Number for each manual is located at the bottom of the title page.) Customer Service can provide you with the name of your sales representative if necessary.

Phone: 1-800-553-NETS (6387) or (415) 326-1941

E-mail: customer-service@cisco.com