

# General Reference

---

This appendix contains information for the MVS, VM, or VSE programmers. It contains the following sections:

- Programmer reference for NetView version
- Programmer reference for NetMaster version

## Programmer Reference for NetView Version

This section contains the following topics:

- CLISTs for NetView
- Common globals for NetView
- Operator Task Globals for NetView

## CLISTs for NetView

This section provides a listing of CLISTs available with the Native Service Point software for NetView.

Table B-1 provides a description of CLISTS in Native Service Point.

**Table B-1**      **CLIST Descriptions for NetView**

CLIST Name	Description
RTRCMD	Cisco/NetView router CLIST
RTRRCMD	Cisco/NetView remote router CLIST
RTROPER	Cisco/NetView operator reset CLIST
RTRMGR	Router status display CLIST
RTRSINIT	Router Manager initialization CLIST
RTR590E	Status automation CLIST

## Common GLOBALs for NetView

This section provides a listing common GLOBALs available with the Native Service Point software for NetView.

Table B-1 provides a description of the common GLOBALs in Native Service Point.

**Table B-2 Common GLOBALs for NetView**

<b>Common Global Name</b>	<b>Description</b>
&RTRINITS	Date and time RTRSINIT was last executed.
&RTRNUM	Number of routers being monitored.
&node	Router Service Point Name.
&RTR&node = &n =	Index number assigned to the router.
&RTR&n	Name of router (&node).
&RTR&n	Name of domain that owns the router &node.
&RTH&n	Host name defined in the router configuration &node.
&RTS&n	Status of router &node.
&RTO&n	Name of operator monitoring router &node.

## Operator Task GLOBALs for NetView

This section provides a listing of operator task GLOBALs available with the Native Service Point software for NetView.

Table B-1 provides a description of the common GLOBALs in Native Service Point.

**Table B-3      Operator Task GLOBALs for NetView**

<b>Operator Task GLOBALs</b>	<b>Description</b>
RTRSPN	Router being interrogated by operator.
&RTRHNAME	Host name for router &RTRSPN.
&RTRDM	Domain that owns the router &RTRSPN.
&RCMD	Last command sent to router &RTRSPN.
&RTRINDEX	Number of commands saved for retrieve.
&c =	Saved command.
&RTRRCMD&c	=&RTRSPN &RTRHNAME &RTRDM &RCMD
&DEBUG	Saved value of RTRCMD DEBUG operand.
&CTRACE	Saved value(s) of RTRRESET CTRACE operand(s).

## Programmer Reference for NetMaster Version

This section contains the following topics:

- NCLs and Jobs for NetMaster
- Common Variables for NetMaster
- Operator Task Globals for NetView

## NCLs and Jobs for NetMaster

This section provides a listing of NCLs available with the Native Service Point for NetMaster.

Table B-4 shows the NCL descriptions for NetMaster version.

**Table B-4      NCL Descriptions for NetMaster**

CLIST Names	Description
RTRCMD	Cisco/NetMaster router.
RTRHELP	Cisco/NetMaster help panel
RTRMGR	Router status display NCL.
RTROPER	Cisco/NetMaster operator reset NCL.
RTRRESET	Cisco/NetMaster message retrieval reset.
RTRSINIT	Router Manager initialization NCL.
RTR590E	Status automation NCL.

Table B-5 shows the job descriptions for NetMaster version.

**Table B-5      Job Descriptions for NetMaster**

Jobs	Description
PNALLOC	Cisco/NetMaster NCL
PNLRESTR	Cisco/NetMaster NCL
RTRMSGPR	MSGPROC for sample automation job.

## Common Variables for NetMaster

This section provides a listing of common variables available with Native Service Point for NetMaster.

Table B-6 shows the common variables for NetMaster version.

**Table B-6** Common Variables for NetMaster

Common Variables	Description
&000RTRSINIT	Date and time the <b>rtrsinit</b> command was last executed.
&000RTRNUM	Number of routers being monitored.
&node	Router Service Point Name.
&000&node = &n =	Index number assigned to router &node.
&000RTR&n	Name of router (&node).
&000RTD&n	Name of domain that owns router &node.
&000RTH&n	Host name defined in router &node configuration.
&000RTS&n	Status of router &node.
&000RTO&n	Name of operator monitoring router &node.
&000RTO&n	Saved value of <b>rtcmd debug</b> operand.

## Operator Variables for NetMaster

This section provides a listing of operator variables available with Native Service Point for NetMaster.

Table B-7 shows the operator variables for NetMaster version.

**Table B-7**      **Operator Variables for NetMaster**

<b>Operator Variables</b>	<b>Description</b>
&RTRSPN	Router being interrogated by operator.
&RTRHNAME	Host name for router.
&RTRDM	Domain that owns the router.
&RCMD	Last command sent to the router.
&RTRINDEX	Number of commands saved for retrieval.
&c	Index for saved command.
&RTRRCMD&c	Saved command
&RTRRCMD&c	&RTRSPN &RTRHNAME &RTRDM &RCMD

## **Programmer Reference for NetMaster Version**

---