



# About This Guide

---

This guide describes how to install and use TrueView Alert Manager.

## Audience

This guide is for network administrators. It assumes you are familiar with Token Ring local-area networks and using Microsoft Windows.

## Structure

This guide is organized as follows:

Chapter 1 Defines Alert Manager and lists the functions that are provided by the Alert Manager application. It also contains instructions for installing Alert Manager.

Chapter 2 Provides instructions for using Alert Manager.

## Related Publications

*TrueView Applications Installation and User Guide*

## Terminology

This guide contains the following terms with the following specific meanings:

Bridge	Any bridge on the network.
Mouse	The physical desktop device (not the pointer on the screen).
Pointer	Representation of the mouse on the screen.
Option box	A button on the screen, which is typically selected (On) or clear (Off), that you click on to indicate an option. Unlike check buttons, option buttons influence other options. If an option button has a black center, that indicates it is selected (On). If an option button has a white center, that indicates it is not selected (Off).
Check box	A box on the screen, which is typically selected (On) or clear (Off), that you click on to indicate an option. Unlike radio buttons, check boxes do not influence other options. An 'X' in a check box indicates it is selected (On).

## Conventions

This guide has the following conventions:

Ctrl + A	Hold down the <b>Ctrl</b> key, and press the <b>A</b> key (that is, press the <b>Ctrl</b> key and the <b>A</b> key at the same time). Release the <b>Ctrl</b> key.
[ ]	The enclosed items are optional
< >	The enclosed can have a variety of values
:	Omission of part of the program or file listing that is not necessary in the present discussion
<i>italic type</i>	Document titles
<b>boldface type</b>	User input and menu selections

UPPERCASE Filenames, directory names, and disk drive names

## System Requirements

To run TrueView Alert Manager, you need a networked personal computer with the following hardware and software:

Hardware requirements:

- 80386 (or later) IBM compatible personal computer
- 8Mbytes RAM
- 510Kbytes of free DOS memory (the lower 640Kbytes) before running Microsoft Windows
- 10Mbytes of free disk space
- VGA or SVGA graphics card and monitor
- Mouse

Software requirements:

- MS-DOS 5.0 (or later)
- Microsoft Windows 3.1 (or a later version) running in Enhanced mode

## Alert Manager Components

Alert Manager consists of:

- Management software
- A manual that explains how to install and use your Alert Manager software

**Alert Manager Components**

---