

Configure the Router

Now you are ready to configure the router. You do this by completing the router Setup form, which is located on the router.

Before you continue, make sure you have your list of IP parameters and ISDN, Frame Relay, or asynchronous serial parameters handy. We suggest that you print a sample copy of the Router Setup form and fill in all the values you want to enter on the form located on the router.

When you're ready to configure your router, [click here](#).

When you are done configuring the router, check the configuration.

Troubleshooting

If you did not get to the router Setup form on the router or if the router did not configure properly, try one or more of the following steps until you succeed in configuring the router:

- 1 Check that the Ethernet cable is correctly connected.
- 2 If you have already clicked `new-router.cisco.com`, turn off the router off. Then restart the router try to configure the router using the Setup form.
- 3 If your initial configuration attempt did not work, turn off the router. Restart the router and exit from and restart your browser. Try to configure the router using the Setup form.
- 4 If you reconfigured TCP on your PC and did not reboot the PC, reboot the PC and try to configure the router.
- 5 If your router was previously configured, ClickStart will not work. To use ClickStart, connect a terminal to the router's console port and use the **erase startup-config** command to erase the existing configuration file. Then use the Setup form to configure the router.

If none of these steps succeeds, contact the Cisco Technical Response Center (TRC).

<HR>

[Return to ClickStart Home Page](#)