

Prepare to Configure an Asynchronous Serial Connection

Before you configure the Cisco router, get the following information from your Internet service provider:

- IP address for your PC
- IP subnet mask for your PC
- IP address for your router's Ethernet interface
- IP address of your Domain Name System (DNS) server
- Administrative password that you or your service provider will use to manage your router
- Authentication password that your router will use when connecting to the service provider
- Name of the remote router
- Phone number to the remote router
- Remote CHAP password
- Modem speed

<HR>

Continue for a Windows 3.11 PC.

Continue for a Windows 95 PC.

Continue for a Macintosh.

Continue for a UNIX system.

[Return to ClickStart Home Page](#)

