

Introduction

This manual describes how to install, troubleshoot, and repair an IGX 8 running Release 8.2 of the System Software. In addition to the chapters that provide these descriptions, the appendices describe operational parameters, supported peripherals, cabling, and the types of support that StrataCom offers.

For descriptions of the IGX 8 node and the cards it uses, refer to the *IGX 8 Reference Manual*.

