



Doc. No. 78-0811-04

Installing the CSC-FCI and CSC-C2FCI FDDI Cards and Appliques

Product Numbers: CSC-FCI=, CSC-C2FCI=, APP-LMM=, APP-LMS=, APP-LSM=, and APP-LSS=

This publication provides instructions for installing the Fiber Distributed Data Interface (FDDI) modules in an AGS+ router. These modules include the CSC-FCI or CSC-C2FCI ciscoBus interface cards and the four fiber-optic transceiver appliques, which provide single-mode and/or multimode network interfaces. The CSC-FCI operates with the CSC-CCTL ciscoBus controller card, and the CSC-C2FCI requires the second-generation CSC-CCTL2 ciscoBus controller card. The difference between the FCI and C2FCI cards is the presence of Microcode Version 10.0 (or later) on the C2FCI and CCTL2 cards. System Software Release 9.1 (or later) is required for using the C2FCI and CCTL2 cards. For specific compatibility information on upgrading the CSC-FCI card to Microcode Version 10.0 or later, refer to the latest version of the publication *Upgrading FDDI Cards to Microcode Version 2.1 or 10.1*, Document Number 78-0857-*nn* (where *nn* is the latest version of the publication). Unless otherwise indicated, the name *CSC-FCI* will be used when configurations apply to both the CSC-FCI and CSC-C2FCI cards.

Following are the sections included in this publication:

- FDDI Module Overview, page 2
- Installation Prerequisites, page 6
- Installing the CSC-FCI Card, page 13
- Installing the FDDI Applique, page 13
- Connecting Internal and External FDDI Cables, page 16
- Testing the Installation, page 19

The procedures in the section "Testing the Installation" assume that your system has been operating correctly up until the time you performed this installation or upgrade, and that any problems are a result of this procedure.

If you encounter a new problem and determine that it is not the result of this installation or upgrade, refer to the *AGS+ Hardware Installation and Maintenance* publication for initial system startup troubleshooting procedures or to the *Troubleshooting Internetworking Systems* publication for additional suggestions for resolving the problem.

FDDI Module Overview

Following is an overview of the FDDI components.

CSC-FCI Interface Card and Appliques

The CSC-FCI FDDI ciscoBus card is the interface for both single and multimode FDDI network interfaces. It is connected to the ciscoBus and Multibus backplanes in the AGS+ router. Figure 1 shows the CSC-FCI card viewed from the component side.

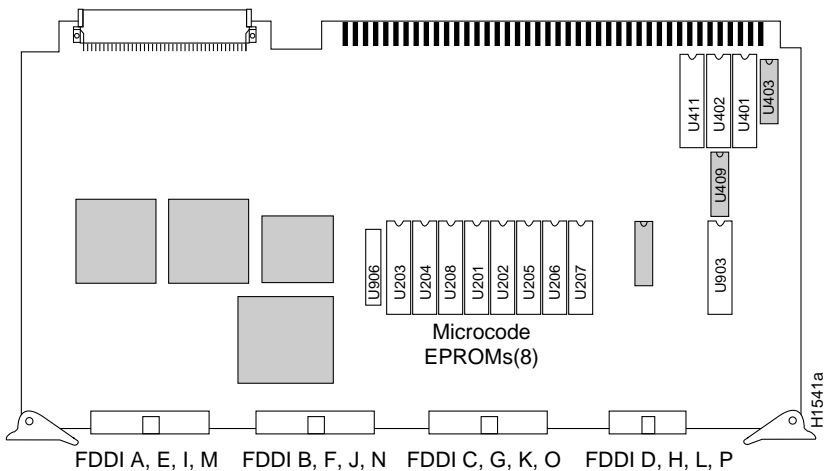


Figure 1 FDDI Network Interface Card (CSC-FCI)—Component-Side View

Note The CSC-FCI and CSC-C2FCI cards differ by microcode version *only*. The CSC-FCI card requires Microcode Version 2.0 or later, and the CSC-C2FCI card requires Microcode Version 10.0 or later.

FDDI Connections

The distance limitations for single-mode and multimode FDDI stations are listed in Table 1. Both FDDI modes provide 11 decibels (dB) of optical power.

Table 1 FDDI Maximum Transmission Distances

Transceiver Type	Maximum Distance Between Stations
Single-mode	Up to 24 mi (40 km)
Multimode	Up to 1.2 mi (2 km)

FDDI Appliques

The fiber optic transceivers reside on circuit cards called *appliques* that provide the interface between external network connections and the internal CSC-FCI card. The four applique configurations are shown in Figures 2 through 5; each provides a unique combination of single and/or multimode FDDI interfaces.

Following are the four FDDI applique mode combinations:

- PHY-A multimode, PHY-B multimode (APP-LMM), Figure 2
- PHY-A multimode, PHY-B single mode (APP-LMS), Figure 3
- PHY-A single mode, PHY-B multimode (APP-LSM), Figure 4
- PHY-A single mode, PHY-B single mode (APP-LSS), Figure 5

Both the single-mode and multimode transceivers provide a Class A dual attachment interface that can be connected to either a Class A or Class B station. Class A is a dual attachment station with primary and secondary rings; Class B is a single attachment station with only a primary ring.

The single-mode transceiver provides connectivity to single-mode FDDI fiber for distances up to 40 kilometers (24 miles). The connector is a simplex FC-type interface that accepts standard 8.2 to 10/125 micron (0.5) single-mode fiber-optic cable.

The multimode connectors are FDDI-standard physical (PMD) connectors. The connectors accept FDDI standard 62.5/125 micron multimode fiber-optic cable using the media interface cable (MIC). The MIC connector can also accept alternate cable sizes, such as 50, 85, or 100 micron multimode fiber. Use care when using alternate fiber sizes, to avoid violating optical power budget restrictions.

The multimode/multimode applique also provides a DIN port for connecting an optional optical bypass switch, which allows the light signal to pass directly from the receive port to the transmit port. When this optical bypass is used, the signal is not repeated, and significant signal loss may occur when transmitting to stations at maximum distances.

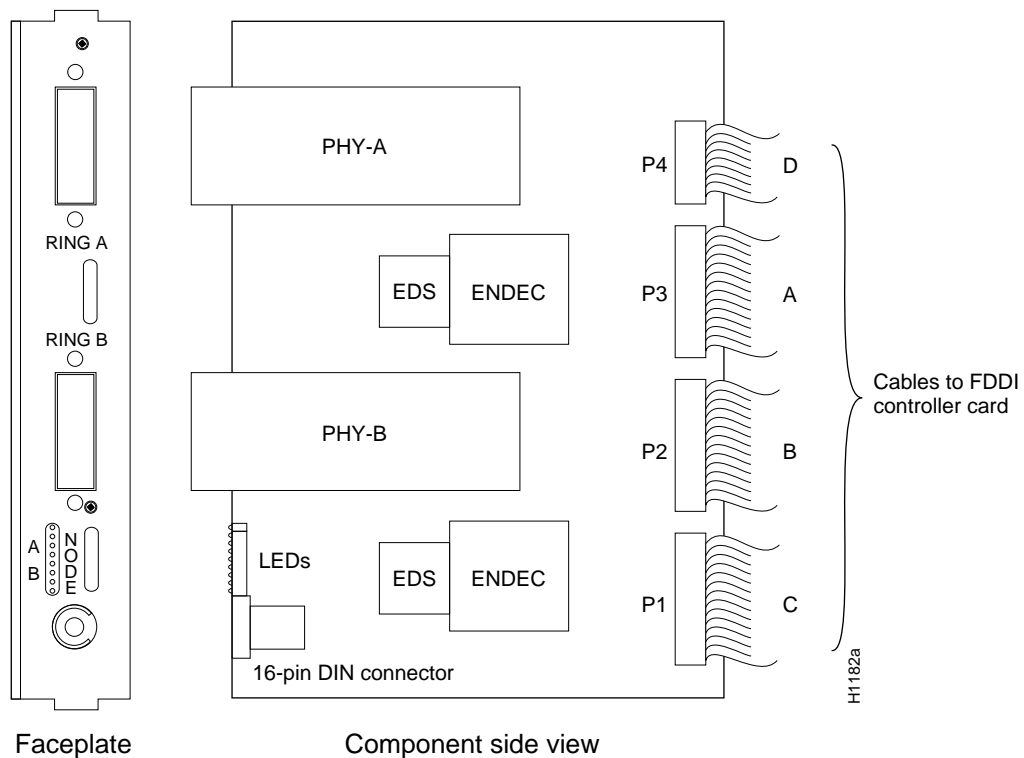


Figure 2 Multimode/Multimode Applique—APP-LMM

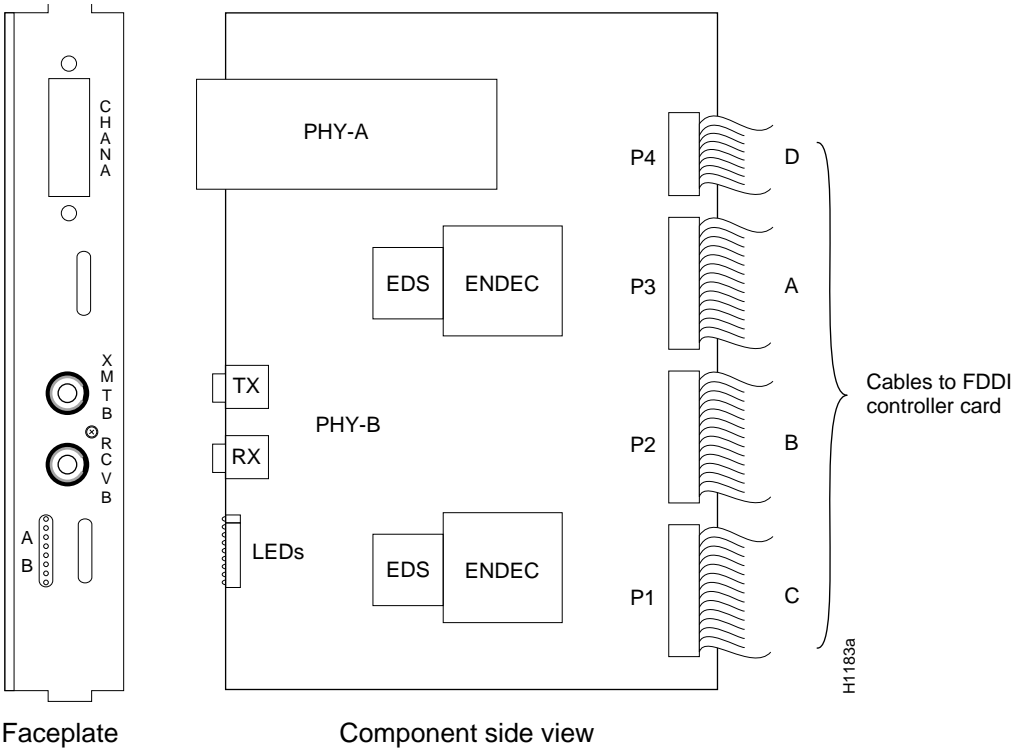


Figure 3 Multimode/Single-Mode Appique—APP-LMS

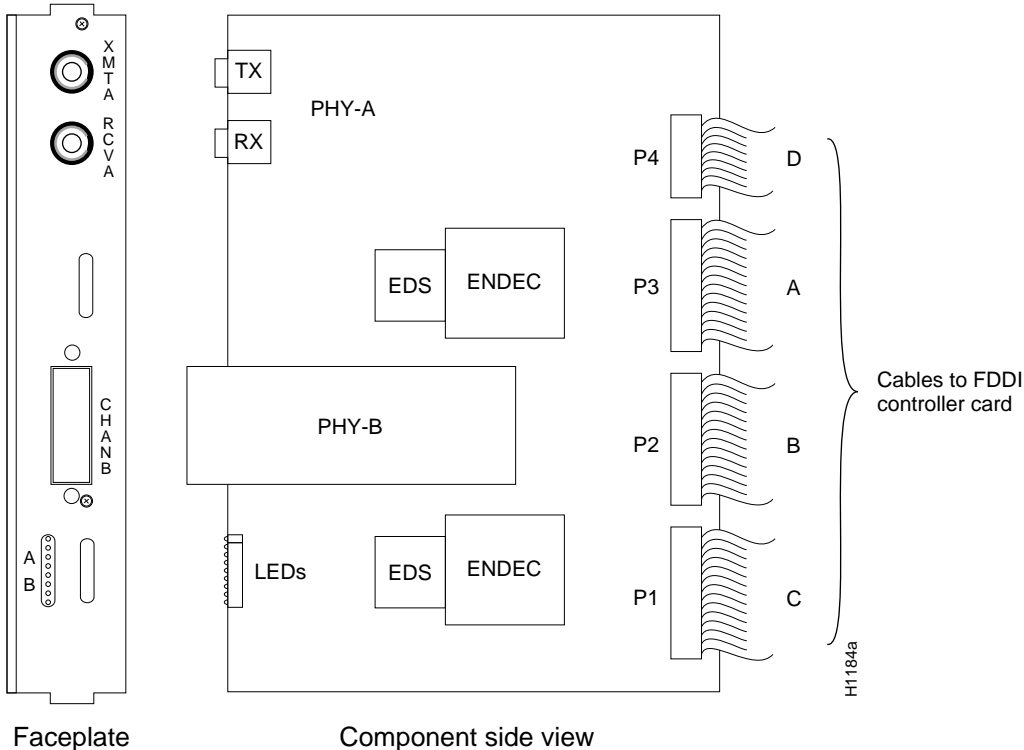


Figure 4 Single-Mode/Multimode Appique—APP-LSM

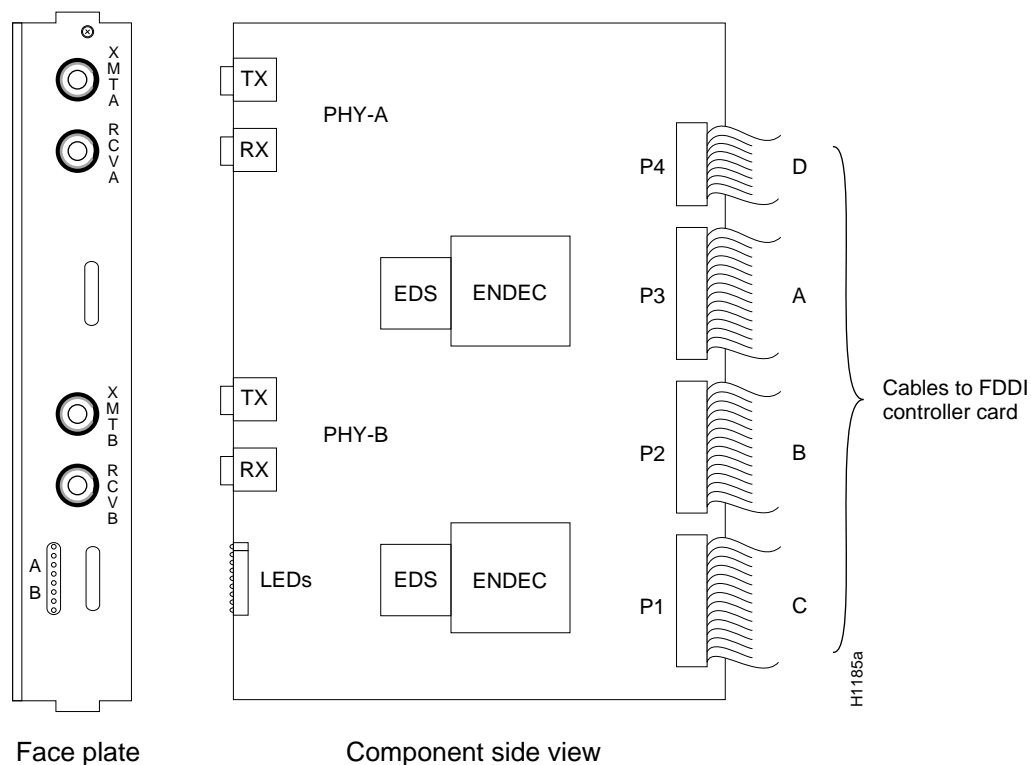


Figure 5 Single-Mode/Single-Mode Applique—APP-LSS

FDDI Connectors

Following are the connectors typically used with single-mode and multimode FDDI applications.

Single Mode

Figure 6 shows fiber-optic cable connector typically used for single-mode FDDI applications, with the APP-LSS, APP-LSM, and APP-LMS FDDI appliques.

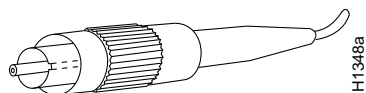


Figure 6 Single-Mode FDDI Network and Chassis Connectors



Warning Invisible laser radiation may be emitted from the aperture ports of the single-mode appliques when no fiber cable is connected. *Avoid exposure and do not stare into open apertures.* This product meets the Class 1 Laser Emission Requirement from CDRH FDDI.

Multimode

Figure 7 shows the fiber-optic media interface connector (MIC) used for network and chassis connections, with the APP-LMM, APP-LMS, and APP-LSM appliques.

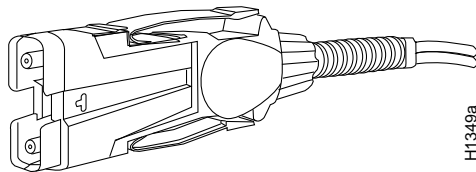


Figure 7 Multimode MIC Connector for Network and Chassis Connections

Installation Prerequisites

Before installing any FDDI modules, ensure that your system meets the following prerequisites:

- Your system is an AGS+ model with a CSC/3 or CSC/4 processor card running System Software Release 9.1 if the CSC-CCTL2/CSC-C2FCI combination is desired
- If you have the CSC-CCTL ciscoBus controller card installed, you must use the CSC-FCI card.
- If you have the CSC-CCTL2 card installed, you must use the CSC-C2FCI card, and both cards must have Microcode Version 10.0 or later.
- An applique card cage (Product Number MAS-CCG) is installed in the chassis, and there is at least one empty slot available, or you received a new card cage in which the FDDI applique is already installed
- The currently installed ciscoBus cards do not exceed the limits provided in the section “Slot Priority” on page 8.
- Your site has the appropriate network interface wiring with which you will connect the router to your FDDI ring(s).

Use the **show version** command to verify the internal processor and software release you are running. If your current system configuration does not meet all of the above requirements, contact your customer service representative for information on hardware and software upgrades.

Safety

Follow these guidelines when working with any electrical equipment:

- Before beginning any procedures requiring access to the chassis interior, turn off the system power and disconnect the power cord.
- Never assume that power has been disconnected from a circuit; always check.
- Do not work alone when a potentially hazardous condition exists.
- Do not perform any action that creates a potential hazard or makes the equipment unsafe.
- Carefully examine your work area for possible hazards such as moist floors, ungrounded wiring or power cables, and missing safety grounds.

In addition, use the guidelines that follow when working with any equipment that is connected to telephone wiring or other network cabling.

- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.



Warning Invisible laser radiation may be emitted from the aperture ports of the single-mode appliques when no fiber cable is connected. *Avoid exposure and do not stare into open apertures.* This product meets the Class 1 Laser Emission Requirement from CDRH FDDI.

Verifying the Microcode and Hardware Versions

The CSC-FCI card operates with the CSC-CCTL ciscoBus controller, and the CSC-C2FCI operates with the CSC-CCTL2 ciscoBus controller. To convert a CSC-FCI card to a CSC-C2FCI card, Microcode Version 10.0 (or later) must be installed on the card. For the CSC-C2FCI to operate with the CSC-CCTL2, Microcode Version 10.0 or later must be installed on the CSC-CCTL2 card. Use the **show controller fddi** command to see the current version of microcode on the CSC-FCI card. Following is partial sample output of the **show controller fddi** command. The microcode version is given in the first line of the output; the remaining information is not important to this verification.

```
router> show controller fddi
```

```
FDDI 0, controller type 1.1, microcode version 2.1 ((or 10.1 for the CSC-C2FCI card)
(Additional information displayed is not required for this example.)
```

List of Required Parts and Tools

Before beginning installation, verify that you received all of the parts for the interface(s) you will install. In general, each applique requires one interface card, and every two appliques require one applique card cage. If any parts are missing, contact a customer service representative.

The following parts are necessary for each interface:

- One FDDI applique (APP-LMM, APP-LMS, APP-LSM, or APP-LSS).
- One FDDI interface card (CSC-FCI or CSC-C2FCI).
- Applique card cage (MAS-CCG). One card cage is required for every two appliques. This may already be installed in the chassis.
- External FDDI network interface cables (optional): single mode or multimode.
- One port label for each applique (FDDI 0, FDDI 1, and so forth). This may be attached to the applique when you receive it.
- Disposable grounding wrist strap

A disposable ESD-prevention wrist strap is included with the applique; use it to prevent damage to equipment from electrostatic discharge.

- Phillips screwdriver: No. 1.

Preventing Electrostatic Discharge Damage

Electrostatic discharge (ESD) is a discharge of stored static electricity that can damage equipment and impair electrical circuitry. It occurs when electronic components are improperly handled and can result in complete or intermittent failures.

Following are guidelines for preventing ESD damage:

- Before you open a chassis, ensure that power to the unit is turned off, but that the power cord is connected to the wall receptacle. Having the power cord connected will ensure a ground path for any ESD voltages.
- Always use an ESD wrist strap or ankle strap and ensure that it makes good skin contact. Do not remove the wrist strap until the installation is complete.
- Connect the equipment end of the strap to an unpainted surface of the chassis frame or another proper grounding point or surface. We recommend that you attach it to the inside bottom of the chassis, or to the rear panel (inside or outside), without making contact with any connectors or appliques.
- Avoid contact between equipment and clothing. The wrist strap only protects the equipment from ESD voltages on the body; ESD voltages on clothing can still cause damage.
- Handle printed circuit cards and appliques by the edges only; avoid touching the components, traces, or any connector pins.
- Place a removed card component-side-up on an antistatic surface or in a static shielding bag. If the component will be returned to the factory, immediately place it in a static shielding bag.



Caution For safety, periodically check the resistance value of the antistatic strap. The measurement should be within the range of 1 and 10 Mohms.

Slot Priority

The system card cage, shown in Figure 8, has nine slots, five of which are designated ciscoBus slots. The center ciscoBus slot is reserved for the ciscoBus controller card, leaving four ciscoBus slots available for ciscoBus interface cards.

The system uses a slot priority scheme that assigns a priority to each ciscoBus card according to the ciscoBus slot in which the card resides. The card in ciscoBus slot 0 receives the highest ciscoBus priority, while the card in ciscoBus slot 3 receives the lowest ciscoBus priority.

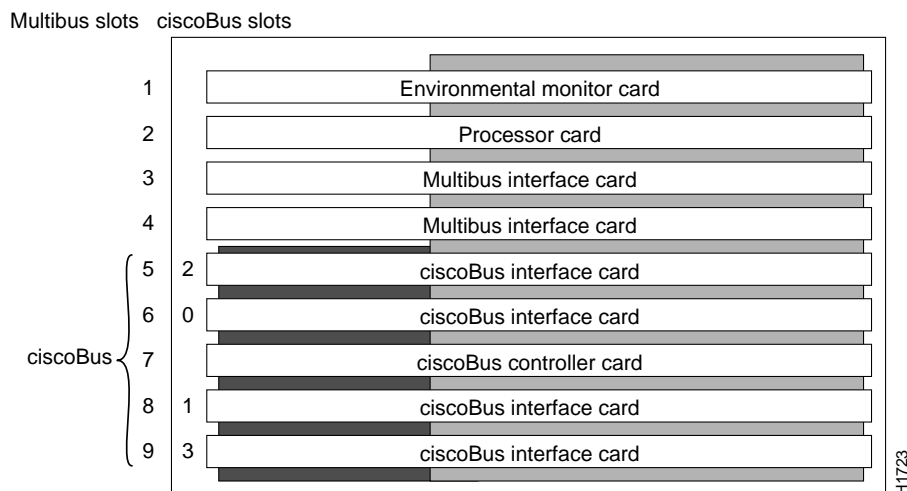


Figure 8 AGS+ System Card Cage

Slot priorities are set to accommodate the amount of traffic generated by each interface card and the amount of card buffering required. Each ciscoBus interface card is placed in a specific slot with regard to other ciscoBus interface cards, if any. The order of priority is the same for both first- and second-generation ciscoBus controllers, except that the cards with the C2 designation can only be used with the CSC-CCTL2.

Following is a list of ciscoBus interface cards in order of priority, from highest to lowest:

- 1 CSC-MEC and C2MEC (10 Mbps)
- 2 CSC-C2CTR (16 Mbps)
- 3 CSC-HSCI and C2HSCI with an APP-LHS applique (HSSI interface) (45 through 52 Mbps)
- 4 CSC-FCI and C2FCI (100 Mbps)
- 5 CSC-C2FCIT (100 Mbps)
- 6 CSC-HSCI and C2HSCI with an APP-ULA applique (UltraNet interface) (125 Mbps)

Install CSC-MEC or C2MEC cards in the lowest-numbered slots, beginning with slot 0 (which has the highest priority), followed by CSC-C2CTR cards. After all CSC-MEC and CSC-C2CTR cards are installed, install CSC-HSCI and C2HSCI cards with the APP-LHS applique in the lowest-numbered available slots. Follow with the CSC-FCI and C2FCI cards. Next, install CSC-C2FCIT cards. Last, install the CSC-HSCI and C2HSCI cards with the APP-ULA (UltraNet) applique. Always install cards in the lowest-numbered available slot. For example, if using only CSC-C2HSCI cards (with APP-ULA), place the first in slot 0, the second in slot 1, and so forth.

Note With Microcode Version 10.0 or later on the CSC-C2FCI FDDI card and Microcode Version 2.0 or later on the CSC-FCI FDDI card, four FDDI cards can be installed in the AGS+ chassis. This feature requires that two programmable array logic (PAL) devices be upgraded on the FDDI card. For specific upgrade information, refer to the latest version of the Microcode Version 2.1 or 10.1 upgrade document; Document Number 78-0857-*nn*.

Table 2 lists the maximum port and card configurations for all of the ciscoBus cards currently available. Use this table as a guide when installing new ciscoBus cards and reconfiguring your AGS+.

Table 2 Maximum Port and Card Configurations for ciscoBus Interface Cards

(C2)FCI/C2FC IT¹ Ports (Cards)	(C2)MEC Ports (Cards)	(C2)HSSI Ports (Cards)	C2CTR Ports (Cards)
0 (0)	24 (4)	0 (0)	0 (0)
1 (1)	18 (3)	0 (0)	0 (0)
0 (0)	18 (3)	1 (1)	0 (0)
0 (0)	18 (3)	0 (0)	4 (1)
2 (2)	12 (2)	0 (0)	0 (0)
1 (1)	12 (2)	1 (1)	0 (0)
1 (1)	12 (2)	0 (0)	4 (1)
0 (0)	12 (2)	2 (2)	0 (0)
0 (0)	12 (2)	1 (1)	4 (1)
0 (0)	12 (2)	0 (0)	8 (2)
1 (1)	6 (1)	0 (0)	6 (2)
0 (0)	6 (1)	1 (1)	6 (2)
3 (3)	6 (1)	0 (0)	0 (0)
0 (0)	6 (1)	3 (3)	0 (0)
2 (2)	6 (1)	1 (1)	0 (0)
2 (2)	6 (1)	0 (0)	4 (1)
0 (0)	6 (1)	2 (2)	4 (1)
1 (1)	6 (1)	1 (1)	4 (1)
1 (1)	6 (1)	2 (2)	0 (0)
3 (3)	0 (0)	0 (0)	2 (1)
2 (2)	0 (0)	1 (1)	2 (1)
1 (1)	0 (0)	2 (2)	2 (1)
0 (0)	0 (0)	3 (3)	2 (1)
4 (4)	0 (0)	0 (0)	0 (0)
3 (3)	0 (0)	1 (1)	0 (0)
2 (2)	0 (0)	2 (2)	0 (0)
1 (1)	0 (0)	3 (3)	0 (0)
0 (0)	0 (0)	4 (4)	0 (0)

1. The designator C2 in parentheses indicates that the card has Microcode Version 10.0 or later installed. The designator C2 not in parentheses indicates that the card ships with Microcode Version 10.0 or later by default.

Calculating the Chassis Power Budget

In an AGS+ shipped on or after October 1, 1991, the total power drawn by all installed cards must not exceed 300 watts (W) per chassis. In AGS+ chassis shipped before this, the total power cannot exceed 260W. (The earlier chassis contained a 5 amp [A] circuit breaker, rather than the 7.5A circuit breaker used in the later chassis configuration.) Table 3 lists the power requirements for each card available for the AGS+.

Table 3 Interface Card Power Requirements

Card	Power (Watts)
CSC/3	31
CSC/4	35
CSC-ENVM	10
CSC-MC+	3
CSC-MCI	28 ¹
CSC-SCI	20
CSC-R16M	34
CSC-1R or CSC-2R	30
CSC-CCTL	29
CSC-CCTL2	34
CSC-(C2)FCI	50
CSC-FCIT	36
CSC-(C2)MEC(2, 4, or 6)	22 ¹
CSC-(C2)HSCI	48
CSC-C2CTR with 1 applique (2 ports)	30
CSC-C2CTR with 2 appliques (4 ports)	42

1. Add 4W for each external Ethernet transceiver

Before installing new cards, check the power requirements of the existing system and the new card(s) to avoid exceeding the power budget. Calculate the power requirements of an existing system by adding the values for each card in the chassis; the sum is the power requirement. Determine the available power budget, subtract that sum from 300W (260W for chassis shipped before 10/1/91); the result is the power budget available for new cards.

The following example shows how to determine if you can add two new CSC-FCI cards to an AGS+ (all values are in watts [W]):

One CSC-ENVM card	$1 \times 10 = 10$
One CSC/4 processor card	$1 \times 35 = 35$
One ciscoBus controller card	$1 \times 29 = 29$
Two CSC-(C2)MEC6 cards	$1 \times 22 = 22$
14 Ethernet transceivers	$14 \times 4 = 56$
Power requirement of present system	174 (179 if the CSC-CCTL2 is used.)
Available power budget	$300 - 174 = 126$ (121 if the CSC-CCTL2 is used.)
Two CSC-FCI cards are within power budget	$100 < 126$

Chassis Access Procedure

Following is the procedure for accessing the chassis interior:



Warning Before accessing the chassis interior, turn off power to the chassis because hazardous voltages may exist in or near the power supply. Use extreme caution when working near the power supply.

- Step 1** Turn OFF power to the chassis and unplug it from AC power.
- Step 2** If the chassis is rack mounted, disconnect all external cables from the chassis rear panel. Note where these cables were connected, for reinstallation.
- Step 3** Remove the chassis from the rack and transfer it to a desktop or work table.
- Step 4** If you will need to handle any electronic components (cards, and so forth), attach appropriate ESD protection and attach the AC power cord, but to prevent a shock hazard, make certain the chassis power is OFF.
- Step 5** To access cards in the card cage, loosen the two thumbscrews and remove the front panel from the chassis. (See Figure 9.) If you wish to access cards in the card cage only, skip the next step.
- Step 6** To access other system components, locate and remove the seven No. 1 Phillips screws securing the top cover. (See Figure 9.) Set the top cover and screws aside.

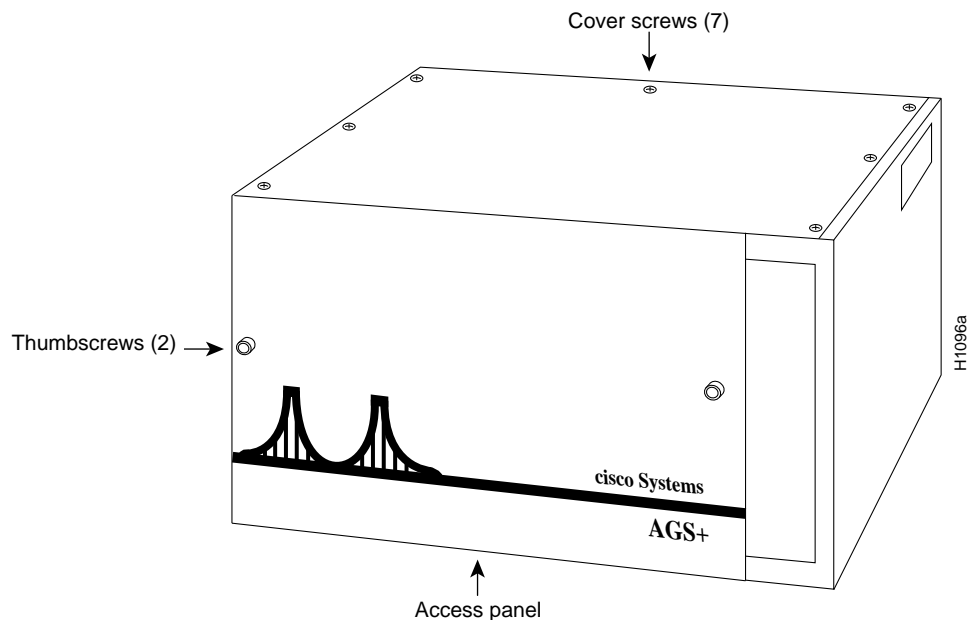


Figure 9 Chassis Front and Top Panels

Note To reassemble the chassis, reverse all steps.

Installing the CSC-FCI Card

Following is the procedure for installing an CSC-FCI card in the AGS+ card cage. Before proceeding, ensure that your system and equipment meet the requirements listed in the section “Installation Prerequisites” on page 6.

- Step 1** Slip on an ESD wrist strap and connect it to the chassis as previously described.
- Step 2** Grasp the card ejector tabs and position the card with the component side up and the bus edge away from you. Handle the card as little as possible, and when you do handle it, try to make contact with only the ejector tabs and card edges.
- Step 3** Place the bus edge of the card into the predetermined ciscoBus slot in the system card cage.

Note You will have to use a moderate amount of force to push the card into the slot properly; ensure that the chassis is firmly mounted on a stable surface before pushing the card into the card-cage slot.

- Step 4** Place your thumbs on the ejector tabs, and push the card in firmly until it snaps into place and is firmly seated in the card-cage slot. The ejectors close automatically when the card is properly seated.
- Step 5** If you will immediately install FDDI appliques, leave the front access panel off; and proceed to the next section, “Installing the FDDI Applique.”

If FDDI appliques are already in place, proceed to the section “Connecting Internal and External FDDI Cables” on page 16.

Installing the FDDI Applique

The FDDI applique is installed in an applique card cage in the rear of the chassis; access to the rear of the chassis requires removing the front panel and top cover of the chassis.

The following procedure is *only* required if an FDDI applique is not already installed.



Caution Before proceeding, follow the ESD prevention procedures described in the previous section to avoid possible equipment failure.



Warning Invisible laser radiation may be emitted from the aperture ports of the single-mode appliques when no fiber cable is connected. *Avoid exposure and do not stare into open apertures.* This product meets Class 1 Laser Emission Requirement from CDRH FDDI.

Installing the FDDI Applique in the Applique Card Cage

Following is the procedure for installing the FDDI applique in the applique card cage.

Note Before the FDDI applique is installed in the applique card cage, remove the applique card cage from the chassis to make the installation easier. If you have an card cage assembly that is not installed in the chassis, skip to step 4.

- Step 1** If the applique card cage is installed in the chassis, disconnect any external connections to the applique it contains.
- Step 2** Remove the card cage from the chassis by removing the six screws that secure it to the back plate. Carefully lift the card cage up and out of the chassis, using care not to strain any internal ribbon cables that still may be attached to interface cards in the system card cage.
- Step 3** Remove the top cover of the applique card cage by loosening the four cover fasteners that secure it. (See Figure 10.)

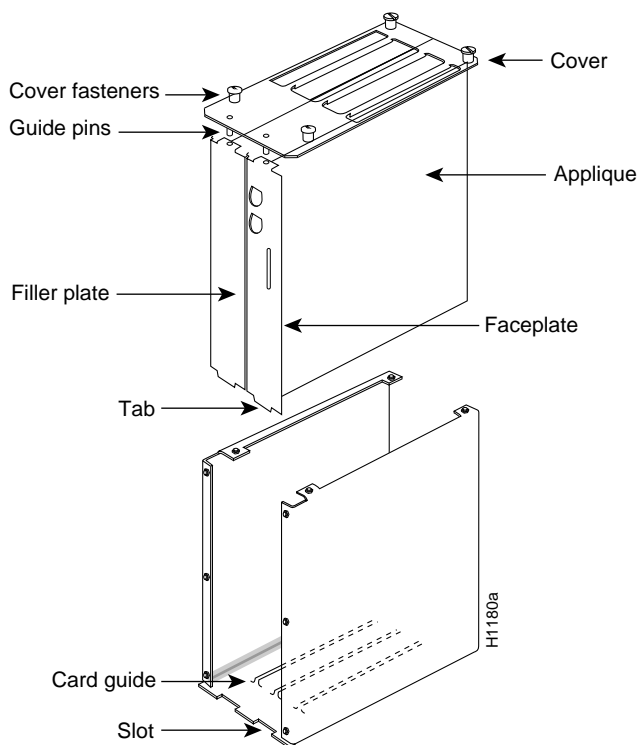


Figure 10 FDDI Applique and Applique Card Cage—Exploded View

- Step 4** If the card cage is empty, remove both filler plates from the rear. (See Figure 10.) If an applique is currently installed, remove only the filler plate.
- Step 5** If you are installing only one applique in an empty card cage, install the FDDI applique, with its attached faceplate, into the right side of the card cage. (Orient the card cage as in Figure 10 for the following steps.)

- Step 6** Position the applique so the status LEDs are on the bottom. Ensure that the tab on the bottom of the applique faceplate is inserted into the slot in the bottom of the applique card cage and that the applique is seated in the card guide. (See Figure 10.)
- Step 7** For one applique only—If you are installing only one FDDI applique, insert the blank faceplate on the left side of the card cage, sliding it down so that the front edge aligns with the faceplate on the right side of the card cage.
- For two appliques only—If you are installing a second FDDI applique in the card cage, install it in the left side of the card cage by sliding it down so that the faceplate aligns with the faceplate of the applique on the right side of the card cage. Insert the applique into the card cage with the status LEDs on the bottom. Ensure that the tab on the bottom of the applique faceplate is inserted into the slot in the bottom of the applique card cage and that the applique is seated in the card guide. (See Figure 10.)
- Step 8** Replace the top cover of the applique card cage. Ensure correct alignment of the cover with the two guide pins on the bottom of the cover. The guide pins should pass through the alignment holes in the tabs on the top of each applique and faceplate assembly. Secure the top cover to the card cage with the four cover fasteners. (See Figure 10.)

Installing the Applique Card Cage in the Chassis

The applique card cage can only be installed in one of the two large plate areas on the right side of the chassis rear panel. (For the remainder of this procedure, orient the card cage and chassis as shown in Figure 11.)

Note If you removed the card cage to install the applique, proceed to step 2. (The connector plate has already been removed.)

- Step 1** Remove a blank connector plate from one of the two right side connector areas by removing the six screws that secure it. (See Figure 11.)
- Step 2** Place the applique card cage inside the rear of the chassis, in the empty large plate area. (See Figure 11.) Align the screw holes in the chassis back panel with those in the applique card cage.
- Step 3** Secure the card cage with the six connector plate screws removed earlier.
- Step 4** Attach the appropriate label (FDDI 0, FDDI 1, and so forth) to the lower part of the applique faceplate; the label will be clearly visible in this position.

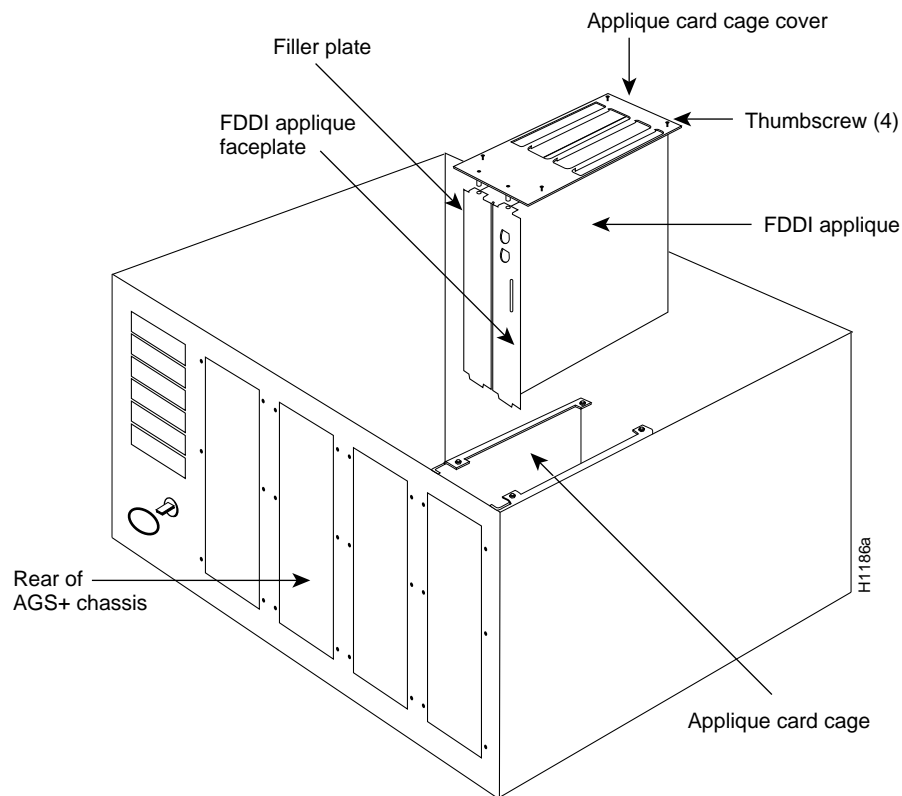


Figure 11 Installing the FDDI Applique and Card Cage in the AGS+ Chassis

Connecting Internal and External FDDI Cables

The four internal ribbon cables (permanently attached to the FDDI applique) attach to the four connectors on the front edge of the CSC-FCI card. The FDDI network interface cables attach to the FDDI applique and provide the external connections to your network. Before beginning these procedures, orient the chassis with the open card cage facing you.

Connecting the Internal FDDI Ribbon Cables

The four internal ribbon cables are fixed to the applique and must be routed and attached to ports on the FCI card. The ribbon cables are labeled alphabetically depending upon the number of appliques you will install. The FCI card connectors are shown in Figure 12, and the ribbon cable connectors are listed in Table 4. The ribbon cable orientation and labeling for the FDDI applique is shown in Figure 13. The ribbon cables from your FDDI applique are labeled *FDDI A* through *D*, *E* through *H*, *I* through *L*, or *M* through *P* for the first through the fourth appliques, respectively.

Connect the four applique ribbon cables to the FCI card as follows.



Caution To prevent twisting the ribbon cables and causing a possible short circuit, individually route each cable (from the FDDI applique) under the main card cage through the space provided and then up to the corresponding FCI card connector.

- Step 1** Connect the applique ribbon cable *P3 A, E, I* or *M* (the second cable from the left in Figure 13) to the 26-pin connector *FDDI A, E, I*, or *M* on the far-left front edge of the FCI card shown in Figure 12.
- Step 2** Connect the applique ribbon cable *P2 B, F, J*, or *N* (the second cable from the right in Figure 13) to the 26-pin connector labeled *FDDI B, F, J*, or *N* in Figure 12.
- Step 3** Connect the applique ribbon cable *P1 C, G, K*, or *O* (the far-right cable in Figure 13) to the 26-pin connector labeled *FDDI C, G, K*, or *O* in Figure 12.
- Step 4** Connect the applique ribbon cable *P4 D, H, L*, or *P* (the far-left cable in Figure 13) to the far-right (16-pin) connector labeled *FDDI D, H, L*, or *P* in Figure 12.

Table 4 FDDI Applique Ribbon Cable and CSC-FCI Connector Designations

FDDI Ribbon Cable	From Connector	To CSC-C2FCI Connector
FDDI A, E, I, or M	P3	FDDI A, E, I, or M
FDDI B, F, J, or N	P2	FDDI B, F, J, or N
FDDI C, G, K, or O	P1	FDDI C, G, K, or O
FDDI D, H, L, or P	P4	FDDI D, H, L, or P

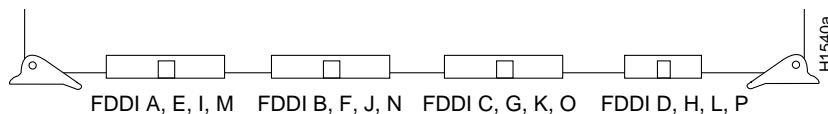


Figure 12 Orientation of the FDDI Connectors on the FCI Card

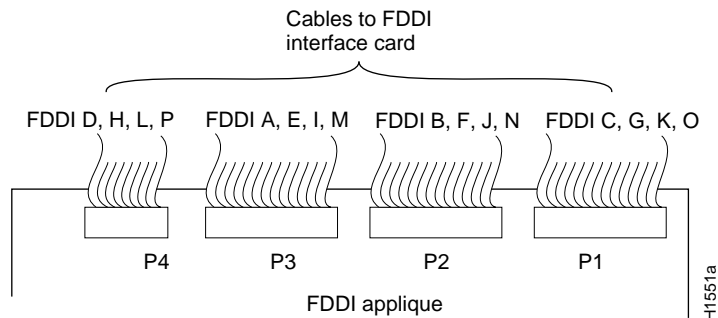


Figure 13 Orientation of the Ribbon Cables on the FDDI Applique

Connecting the External Fiber-Optic Cables

Following is the procedure for connecting the external FDDI cables. Refer to Figure 6 and Figure 7 for illustrations of the single-mode and multimode (MIC) FDDI connectors, respectively.



Warning Invisible laser radiation may be emitted from the aperture ports of the single-mode appliques when no fiber cable is connected. *Avoid exposure and do not stare into open apertures.* This product meets Class 1 Laser Emission Requirement from CDRH FDDI.

Step 1 If you are installing an optical bypass switch, proceed. If not, proceed to step 2—Plug the male Deutsche Industrie-Norm (DIN) connector (from the optical bypass switch) into the female DIN connector on the APP-LMM applique, then plug the fiber-optic MIC cables from the bypass switch into the PHY-A and PHY-B connectors on the FDDI applique.

Connect the FDDI cables from the network into the PHY-A and PHY-B connectors on the optical bypass switch. Up to 100 milliamperes of current can be supplied to the optical bypass switch. A pinout of the DIN connector on the optical bypass switch is listed in Table 5.

Table 5 Optical Bypass Switch Pinout

Pin No.	Description
1	+5V to secondary switch
2	+5V to primary switch
3	Ground to enable primary switch
4	Ground to enable secondary switch
5	Sense circuit—1 kohm to +5V
6	Ground—sense circuit return

Step 2 Multimode connections—Attach the fiber-optic MIC cables from the FDDI network to the PHY-A and PHY-B connectors on the applique. (See Figures 2 through 5.)

Single-mode connections—Attach the single-mode cables from the network to the appropriate transmit (XMT) A or B and receive (RCV) A or B connections on the FDDI applique.



Caution Maintain the correct A to B and B to A relationship with the FDDI connectors. Failure to maintain this relationship will prevent the FDDI interface from initializing. For the optical bypass switch, PHY-A from the network goes to PHY-B on the switch, and PHY-B from the network goes to PHY-A on the switch. Some signal degradation will occur with the optical bypass switch installed in the FDDI ring.

Step 3 Attach all other external cables to the appropriate applique connectors on the rear panel, and *loosely place* the top cover on the chassis. Leave the front panel off until you finish testing the installation.

Testing the Installation

After you have installed your card and applique, verify the installation by doing the following:



Caution With the access panel removed, the chassis is susceptible to overheating. Apply power to the chassis only long enough to go through the configuration dialog routine, check LEDs, and verify proper system operation. Replace the front access panel if it is necessary to leave on the power to the chassis for some time.

- Step 1** Turn ON the power and allow the system to boot up.
- Step 2** Go through the configuration dialog routine (or use the **setup** command) to assign an address and subnet mask to each new FDDI interface you have installed.
- Step 3** Observe the LED indicators on the applique and the ciscoBus controller card, then use EXEC **show** commands to verify that your interfaces are recognized by the system and have been assigned port (unit) addresses by the system.

Reading the LED Indicators

There are two separate sets of indicators with which to check out the installation: those on the CSC-CCTL (or CSC-CCTL2) ciscoBus controller card and those on the FDDI applique. The indicators on the CSC-CCTL (or CSC-CCTL2) verify the presence of the correctly installed FDDI network interface card in the ciscoBus. The indicators on the applique report the state of the interface line. First verify the CSC-CCTL indicators, then the applique indicators. The following sections discuss the LED indicators on the CSC-CCTL and CSC-CCTL2 cards.

CSC-CCTL Card LED Indicators

The CSC-FCI card contains no LEDs or indicators. The LEDs on the ciscoBus controller (CSC-CCTL) card indicate when an interface is present in a ciscoBus slot. The CCTL contains a bank of 16 LEDs: four sets of four lights, and one set for each interface slot in the ciscoBus. (See Figure 15.)

Upon power-up, all LEDs light, indicating that the CCTL card is active. Once the system is booted, and the ciscoBus card microcode has completed its discovery phase, only those LEDs will light that indicate the presence of a card in any ciscoBus slot. One LED from each set of four will light upon detection of an interface card. (The FDDI appliques also contain status LEDs whose descriptions follow.)

The numbers above each CCTL LED indicate the ciscoBus slot number. Verify that the LED for the ciscoBus slot in which your CSC-FCI card is installed lights and remains lit. If it does not, check the CSC-FCI to ensure that it is firmly seated in the ciscoBus backplane; the ejector tabs snap into place when it is installed correctly. Figure 15 illustrates which LED will light to indicate the presence of a card in the ciscoBus.

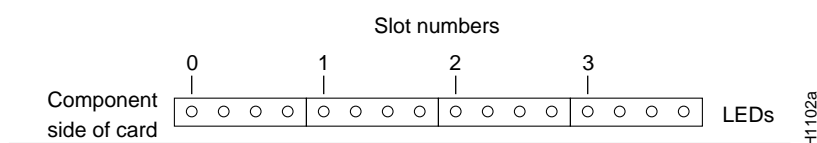


Figure 14 CSC-CCTL Card LED Indicators—Front-Edge View

CSC-CCTL2 Card LED Indicators

The CSC-C2FCI card contains no LEDs or indicators. The LEDs on the CCTL2 card indicate when a ciscoBus interface is present in a ciscoBus slot. The front edge of the CCTL2 card contains a bank of five LEDs as shown in Figure 15, one red LED for each interface slot in the ciscoBus, and a green (Boot) LED to indicate a successful boot procedure.

One red LED will light for each correctly connected ciscoBus card using the correct version of microcode. It will not light if the card is incorrectly connected or if the microcode version is wrong.

Upon power-up, all five LEDs light indicating the CCTL2 card is active. Once the system is booted, and the ciscoBus controller card microcode has completed its discovery phase, only those red LEDs will light that indicate the presence of a card in a ciscoBus slot. The green LED also lights to indicate a successful boot operation. Figure 15 illustrates which LED will light to indicate the presence of a card in the ciscoBus. The numbers above each LED (3, 2, 1, and 0 from left to right) indicate the ciscoBus slot number assigned to that LED.

Note Verify that the red LED for the ciscoBus slot in which your CSC-FCI card is installed lights and remains lit. If it does not, check the CSC-FCI card to ensure that it is firmly seated in the ciscoBus and Multibus backplanes. When the card is installed correctly, the ejector tabs are firmly in place.

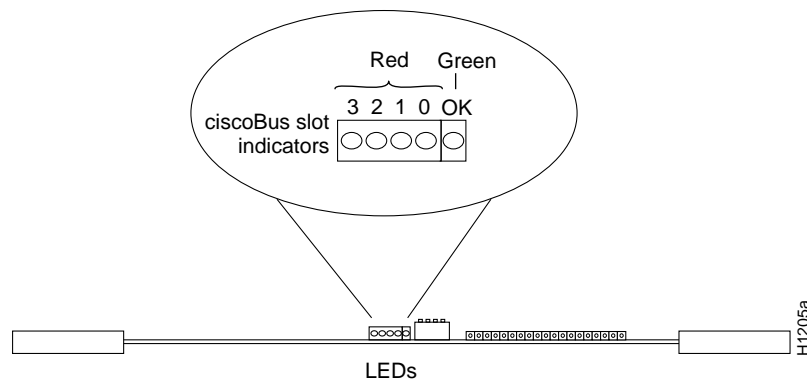


Figure 15 CSC-CCTL2 Card LED Indicators—Front Edge View

FDDI Applique LED Indicators

There are a series of nine LED indicators located on each FDDI applique. These LEDs indicate the current line state of each of the two ports on the card. The applique LEDs are shown in Figure 16, and the line states they reflect are listed in Table 6.

When the ring is operational (when the line protocol is up), the LEDs will oscillate between ILS, ALS, and MLS. ILS will predominate, so LED 2 will glow most brightly; LED 0 will be slightly dimmer; and LED 1 will be almost completely dark. The X3T9.5 FDDI specification explains the meaning of these line states in detail.

Table 6 Line State Indications for PHY-A or PHY-B LEDs

PHY-x LED			
0	1	2	State
on	on	on	Line State Unknown (LSU)
on	on	off	Halt Line State (HLS)
on	off	on	Master Line State (MLS)
on	off	off	Active Line State (ALS)
off	on	on	Noise Line State (NLS)
off	on	off	Quiet Line State (QLS)
off	off	on	Idle Line State (ILS)
off	off	off	Elasticity Buffer Underflow/Overflow (OVUF)

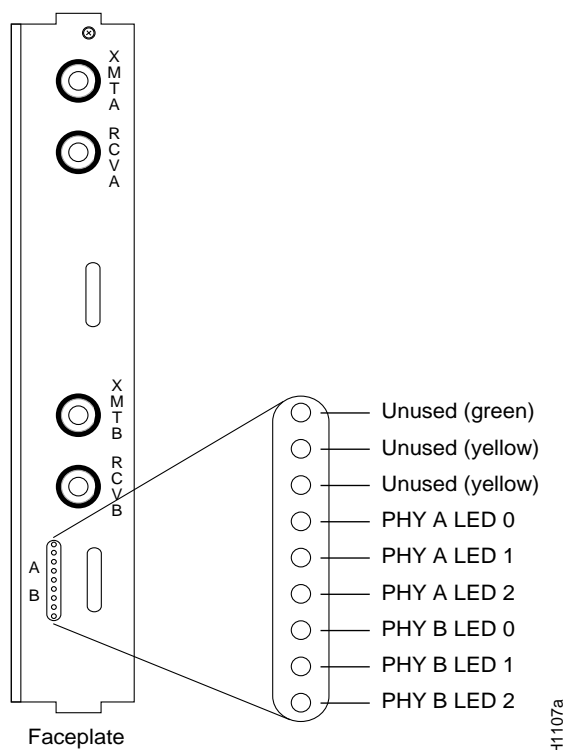


Figure 16 Fiber-Optic Transceiver Applique LEDs—APP-LSS Shown

Using the EXEC Show Commands

When the status indicators show that the applique is installed correctly, use EXEC command displays to verify that the new FDDI interface is properly recognized by the system. When the system is started, the interface cards query the appliques for interface information.

Note If an FDDI applique is not connected to its interface card when the system initializes, it will be not be recognized until properly connected to the interface card, and the system is restarted.

The EXEC command **show controller fddi** displays the current internal status of the CSC-FCI card(s), including the interfaces and how the card has identified them. The display lists the interfaces connected to each CSC-FCI card, and indicates that the system has identified your new interface. The display does not indicate the state of the line or protocol.

Following is a partial sample display:

```
router# show controller fddi

FDDI 0, controller type 1.1, microcode version 2.1 (or 10.1 for the CSC-C2FCI card)
 128 Kbytes of main memory, 4 Kbytes cache memory
22 system TX buffers, largest buffer size 1520
Restarts: 0 line down, 0 hung output, 0 controller error
Interface 0 is Ethernet0, station address aa00.0400.0134
15 total RX buffers, 11 buffer TX queue limit, buffer size 1520
Transmitter delay is 0 microseconds
```

To obtain more information about the interfaces, such as the state of the lines and protocol types, use the EXEC command **show interface fddi** to display statistics about each of the FDDI interfaces in the chassis. The first line of the show interface display names the interface and its unit address (FDDI 0, 1, and so forth), and indicates whether the hardware and the line protocol are up or down. If the line protocol is down, the hardware is not functioning properly; ensure that the network interface is properly connected and terminated.

Following is a partial sample display:

```
router# show interface fddi

Fddi 0 is up, line protocol is up
Hardware type is cBus Fddi, hardware address is aa00.0400.0134
Internet address is 131.108.1.1, subnet mask is 255.255.255.0
MTU 4470 bytes, BW 100000 Kbit, DLY 100 usec, rely 255/255, load 1/255
Encapsulation is SNAP, loopback is not set, keepalive is not set
ARP type: SNAP
Phy-A state is active, neighbor is B, cmt signal bits 08/20C, status ILS
Brk 1, Con 1, Tra 0, Nxt 11, Sig 10, Join 1, Vfy 1, Act 1
Phy-B state is active, neighbor is A, cmt signal bits 20C/08, status ALS
Brk 1, Con 1, Tra 0, Nxt 11, Sig 10, Join 1, Vfy 1, Act 1
CFM is wrap A, token rotation 5000 usec, ring operational 0:01:42
```

You can also use the command **show interface** (without variables) to display all network interfaces installed in the AGS+. Each new FDDI interface should be appended to the list of existing interfaces, with the next sequential number assigned to it. For more specific information on the available **show** commands, refer to the *Router Products Configuration and Reference* publication.

Restarting the System

After the installation of the FDDI module installation tests successfully, do the following:

Step 1 Turn OFF the system power and unplug the power cable.

Step 2 Replace and secure the chassis covers.

Step 3 Install the system in the network.

This completes the installation of the FDDI card and FDDI applique.

Note For technical assistance, contact a service representative or the Cisco Technical Assistance Center (TAC) at 800 553-2447, 415 903-7209, or tac@cisco.com. For upgrade or product information, contact the Customer Response Center at 800 553-6387, 415 903-7208, or cs-rep@cisco.com.

Customer Information Online

Cisco Systems' Customer Information Online (CIO) system provides online information and electronic services to Cisco direct customers and business partners. Basic CIO services include general Cisco information, product announcements, descriptions of service offerings, and download access to public and authorized files, including release notes, and software. Maintenance customers receive a much broader offering, including technical notes, the bug database, and electronic mail access to the TAC. (Maintenance customers must have authorization from their Cisco contract administrators to receive these privileges.)

For dialup or Internet users, CIO supports Zmodem, Kermit, Xmodem, FTP PUT, Internet e-mail, Telnet, rlogin, and fax download options. Internet users also can retrieve files from CIO using FTP.

Registration for CIO is handled on line. To reach CIO via the Internet, use Telnet or FTP to cio.cisco.com (131.108.89.33). To reach CIO by dialup, use 415 903-8070 (Mountain View, California) or 33 1 6446 4082 (Paris, France).

This publication can be used in conjunction with the *AGS+ Hardware Installation and Maintenance* publication.

Access Without Compromise, CDDI, CiscoWorks, Cisco Internetwork Operating System, Netscape, SMARTnet, *The Packet*, and UniverCD are trademarks, and Cisco Systems and the Cisco logo are registered trademarks of Cisco Systems, Inc. All other products or services mentioned in this document are the trademarks, service marks, registered trademarks, or registered service marks of their respective owners.

Copyright © 1993, Cisco Systems, Inc.
All rights reserved. Printed in USA